

# BISSELL

# Uprights

Model: 35129

- 1.....BI-32013.....Paper Bag, style 2,  
micro, 3pack
- 2.....BI-2119104.....Metal Handle
- 3.....NLA.....Hose Clip
- 4.....BI-8807002.....Screw, 1/2"
- 5.....BI-2149419.....Dirt Tube, w/ gasket
- 6.....N/A.....Clip, outer bag
- 7.....BI-7100218.....Outer Bag
- 8.....BI-7132965.....Switch Cover
- 9.....BI-8807206.....Screws, cord clamp
- 10.....BI-7132420.....Cord Clamp
- 11.....BI-2102860.....Cordset, w/ strain relief
- 12.....BI-7109105.....Carrying Handle
- 13.....BI-5559125.....Switch
- 14.....BI-2805040.....Nut
- 15.....N/A.....Bolt
- 16.....BI-2102850.....Wiring Harness,  
w/ strain relief
- 17.....BI-7108432.....Plug Mount Spring
- 18.....BI-7137705.....Intake Seal
- 19.....BI-2145957.....Motor, w/ bulb
- 20.....BI-3101178.....Bulb
- 21.....BI-5559192.....Motor Ring
- 22.....BI-2035100.....Adjustment Knobs
- 23.....BI-5559196.....Handle Release Pedal
- 24.....BI-2131115.....Motor Strap
- 25.....BI-2108421.....Spring, auto flip  
back push-in
- 26.....BI-2150408.....Chassis, w/ rear wheels
- 27.....BI-7139700.....Wheel, rear
- 28.....BI-2135715.....Height Adjustment Slide
- 29.....BI-7135719.....Auto Flip Back Side
- 30.....BI-2100600.....Belt, each
- 31.....BI-2101009.....Brush Roll Assy
- 32.....NLA.....Wheel Assy, front
- 33.....BI-5559266.....Access Plate
- 34.....NLA.....Hose
- 35.....BI-2109102.....Wand
- 36.....BI-7109104.....Upholstery Tool,  
w/ brush
- 37.....BI-2109103.....Crevice Tool
- 38.....BI-7109104.....Dusting Brush, slide-on
- 39.....BI-3142968.....Top Cover, w/ lens
- 40.....BI-7135510.....Lens
- 41.....BI-2130306.....Bumper
- 42.....NLA.....Fan

