



# Agitator

Models S3181, S3189, S3191, S3193, S3195, S3195-030, S3199, S3201, S3209, S3211, S3213, S3217, S3219, S3233, S3237, S3239, S3245, S3261, S3263, S3265, S3269, S3271, S3403, S3425, S3425-060

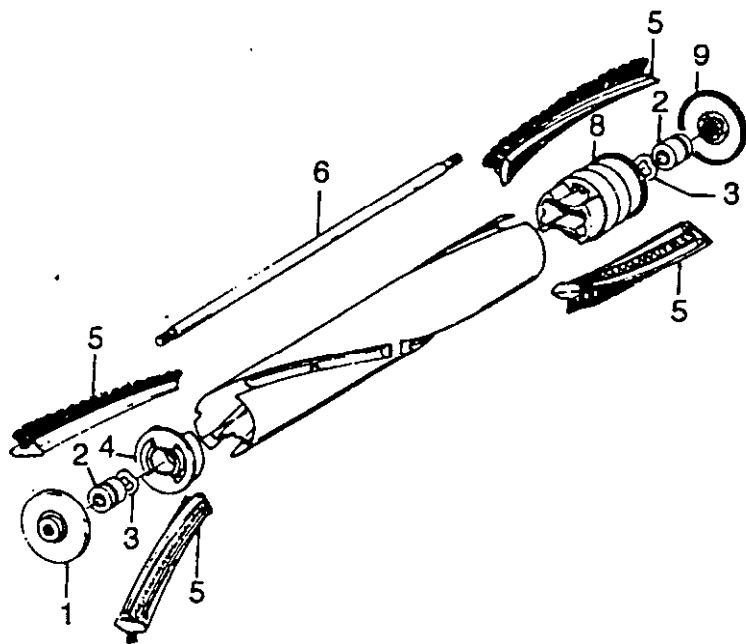

Ref. No.	Part No.	Description
1	41435018	Thread Guard
2	43267002	Bearing
3	21347003	Washer
4	36422001	End
	41435023	End - S3425-060
5	48445017	Agitator Brush
6	160070	Shaft
8	38537002	End Pulley
9	41435021	Thread Guard
48416009		Agitator - S3181, S3189, S3191, S3193, S3217, S3209, S3211, S3213, S3245, S3261, S3263, S3403
48416009		Agitator - S3425-060

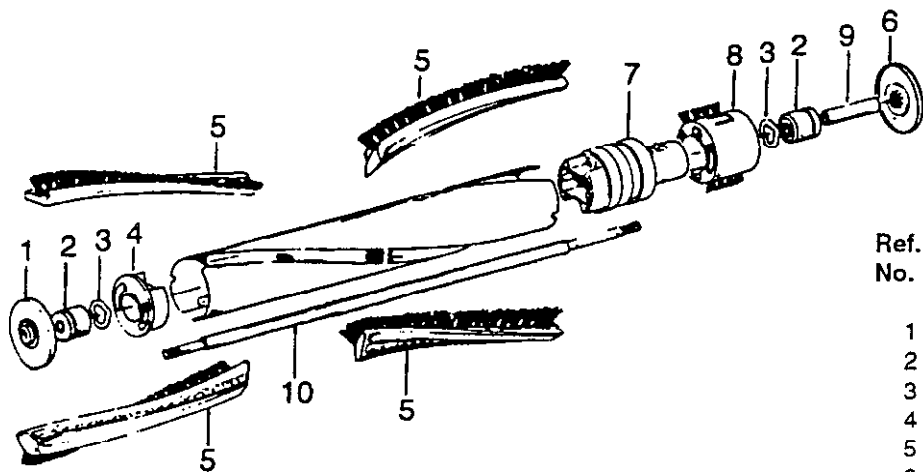

Ref. No.	Part No.	Description
1	48495 AY	Thread Guard
2	43267002	Bearing
3	21347003	Washer
4	41435023	End
5	48445017	Agitator Brush
6	41435018	Thread Guard
7	38537008	End Pulley
8	48418001	Brush Ring
9	31722019	Spacer
10	0M100201	Shaft
48416030		Agitator Comp.- S3195, S3195-030, S3199, S3201, S3219, S3233, S3237, S3239, S3265, S3269, S3271

385