



1	NLA	Housing assembly	50	NLA	Screw, #10 x 24 x 7/16 patch
2	O-5319001	Handle tube	51	NLA	Assembly, wheel w/bearing
3	O-5319101	Upper handle	52	NLA	Axle, 3/8 x 2 5/8
4	NLA	Lever	53	NLA	Nut, axle acorn 3/8
5	O-53192010327	Grip	54	O-095321201	Motor kit
6	O-5319301	Switch	55	O-030056501	Wire nut, orange
7	NLA	Screw, 1/4 x 5/8 shoulder bolt	56	O-030056601	Nut, 5/8 x 18 jam
8	NLA	Cover box	57	O-095326651	Assembly, bearing & retainer (includes #59,#60)
9	NLA	Screw, #6 x 1/2 flat head	58	O-5316001	Plug
10	NLA	Heyco #3243	59	O-5316101	Bearing
11	NLA	Screw, #6 x 1 round head	60	O-5316201	Retainer
12	NLA	Cord, power, 50' green (LB8000)	61	O-5316301	Spacer
	NLA	Cord, power, Order #24 & #86 also	62	O-5321401	Flywheel plate
13	NLA	Bolt, 1/4 x 20 x 1 1/2"	63	O-030056701	Screw, 1/4 x 0 x 3/4 socket head
14	O-030052601	Nut, 1/4 x 20 lock	64	O-095324651	Assembly, pan bottom
15	NLA	Bolt, 1/4 x 20 x 1 1/4"	65	O-030056801	Screw, 8-32 x 1/4 pan shoulder
16	NLA	Hook, upper cord wrap	66	NLA	Bumper
17	NLA	Body, upper cord wrap	67	O-5321901	Pivot
18	NLA	Spring, quick release cord wrap	68	NLA	Heyco
19	NLA	Screw, 1/4 x 20 x 2 3/4 bolt	69	NLA	Washer, plastic
20	NLA	Ball, delrin	70	NLA	Washer, plastic
21	NLA	Washer, flat 1/4 x 5/8 x 1/16	71	NLA	Bolt, motor
22	NLA	Spring switch	72	O-030057501	Washer, lock 3/8
23	O-030054901	Bolt, 1/4 x 20 x 1"	73	O-5322201	Spring, pin lock
24	NLA	1/4" quick slide	74	O-030057601	Nut, square
25	NLA	Harness (LB8000)	75	O-030057701	Pin, cotter locking
	NLA	Harness, order #24 & #26 also (LB8500)	76	O-5322301	Pin, lift locking
26	O-030044401M	Wire nut	77	O-030057801	Washer, lock motor shaft
27	NLA	Nut w/external washer #8	78	O-095324851	Assembly, locking key
28	NLA	Screw, #8 x 3/4	79	NLA	Label, motor and top
29	NLA	Locking pin	80	NLA	Label, warning
30	NLA	Washer, 3/8 x 3/4 x .052 Teflon	81	NLA	Label, warning set
31	NLA	Washer, 3/8 x 3/4 x 1/16 flat	82	NLA	Nut, #8
32	NLA	Nut, 3/8 x 24, locking bracket	83	RG-030042601	cable tie, motor baffle
33	O-53203010327	Locking bracket	84	NLA	Clamp, nylon wire
34	NLA	Boot	85	O-53269010327	Pad holder
35	O-030052001	heyco 1200	85a	NLA	Greed bristle pad holder
36	NLA	Manual release lift	86	NLA	Ring connector
37	O-53206010328	Lift bushing			
38	O-5320701	Shaft	NLA		Dust Shield
39	O-030055501	Lockwasher, 5/8 x 7/16 x 3/64	NLA		Owner's manual (LB8000)
40	O-030055601	Nut, 5/32 thick	NLA		Owner's manual (LB8000)
41	NLA	Nut, 1/4 x 20			
42	NLA	Nut, jam 1/4 x 20			
43	NLA	Cap, heyco #1696			
44	NLA	Arc, left			
45	NLA	Arc, right			
46	O-030056001	bolt, 1/4 x 20 x 2 1/2, ground			
47	O-030056101	Washer, ground 1/4 TRB411			
48	O-030056201	Bearing, thrust 1/4 NTA441			
49	NLA	Bearing, pivot			