


Models: MC-5107, MC-5117, 5157, 5167, 5177


## Nozzle Housing

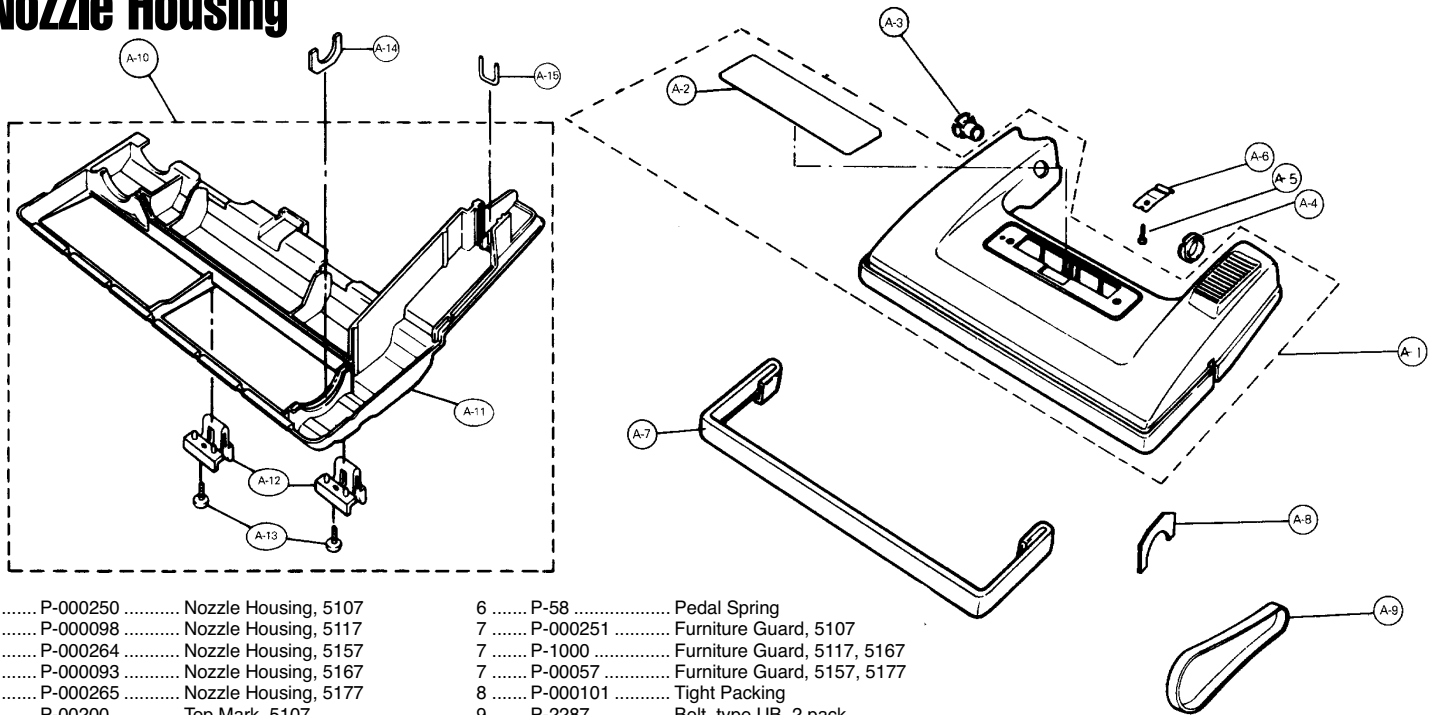

- |  |   |  |
|--|---|--|
| 1 ..... P-000250 ..... Nozzle Housing, 5107    | 6 ..... P-58 ..... Pedal Spring                       | 13 ..... P-000132 ..... Screw, 5107              |
| 1 ..... P-000098 ..... Nozzle Housing, 5117    | 7 ..... P-000251 ..... Furniture Guard, 5107          | 13 ..... P-000100 ..... Screw, 5117              |
| 1 ..... P-000264 ..... Nozzle Housing, 5157    | 7 ..... P-1000 ..... Furniture Guard, 5117, 5167      | 13 ..... P-000132 ..... Screw, 5157, 5167, 5177  |
| 1 ..... P-000093 ..... Nozzle Housing, 5167    | 7 ..... P-00057 ..... Furniture Guard, 5157, 5177     | 14 ..... P-7500 ..... Body Packing               |
| 1 ..... P-000265 ..... Nozzle Housing, 5177    | 8 ..... P-000101 ..... Tight Packing                  | 15 ..... P-4303 ..... Belt Cover                 |
| 2 ..... P-00200 ..... Top Mark, 5107           | 9 ..... P-2287 ..... Belt, type UB, 2 pack            | 15 ..... P-43 ..... Belt Cover, 5157, 5167, 5177 |
| 2 ..... N/A ..... Top Mark, 5117               | 9 ..... P-200 ..... Belt, sold each (R)               |  |
| 2 ..... P-000266 ..... Top Mark, 5157          | 10 ..... P-91 ..... Bottom Plate, complete            |  |
| 2 ..... P-000238 ..... Top Mark, 5167          | 10 ..... P-000268 ..... Bottom Plate, complete, 5157  |  |
| 2 ..... P-000267 ..... Top Mark, 5177          | 10 ..... P-9101 ..... Bottom Plate, complete, 5167    |  |
| 3 ..... P-2500 ..... Plastic Shaft             | 10 ..... P-000269 ..... Bottom Plate, complete, 5177  |  |
| 4 ..... P-78 ..... Plastic Holder              | 11 ..... P-000102 ..... Bottom Plate Only, 5107, 5117 |  |
| 5 ..... P-000132 ..... Screw, 5107             | 11 ..... P-000239 ..... Bottom Plate Only, 5167       |  |
| 5 ..... P-000100 ..... Screw, 5117             | 12 ..... P-000103 ..... Latch                         |  |
| 5 ..... P-000132 ..... Screw, 5157, 5167, 5177 | 12 ..... P-0800 ..... Latch, 5157, 5167, 5177         |  |

## Agitator Assemblies

### MC-5107

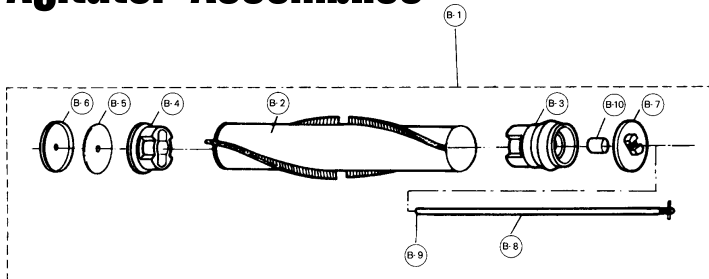


- |   |
|---|
| 1 ..... P-9 ..... Agitator Assembly, 5107           |
| 1 ..... P-510 ..... Agitator Assembly, complete (R) |
| 2 ..... P-84 ..... Agitator Body                    |
| 3 ..... N/A ..... Pulley, agitator                  |
| 4 ..... P-4101 ..... Holder, agitator               |
| 5 ..... P-321 ..... Filter                          |
| 6 ..... N/A ..... End Cap, left                     |
| 7 ..... P-000125 ..... End Cap, right               |
| 8 ..... P-57 ..... Shaft                            |
| 9 ..... P-411 ..... E-Clip                          |
| 10 ..... P-74 ..... Spacer                          |

### MC-5157

- |   |
|---|
| 1 ..... P-921 ..... Agitator Body, 5157 |
| 1 ..... P-0693 ..... End Cap "A", 5157  |
| 2 ..... P-0030 ..... Washer             |

### MC-5117, MC-5167, MC-5177

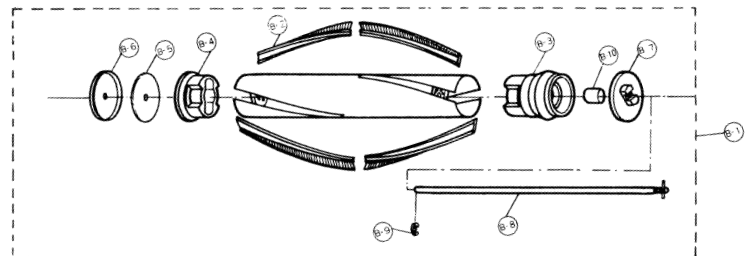

- |   |
|---|
| 1 ..... P-921 ..... Agitator Assembly, 5117, 5167, 5177 |
| 1 ..... P-510 ..... Agitator Assembly, complete (R)     |
| 2 ..... P-85 ..... Brush, 4 pcs                         |
| 3 ..... N/A ..... Pulley, agitator                      |
| 3 ..... P-078 ..... Pulley, agitator, 5167, 5177        |
| 4 ..... P-881 ..... Holder, agitator                    |
| 5 ..... P-304 ..... Filter                              |
| 6 ..... P-960 ..... End Cap, left                       |
| 7 ..... P-00125 ..... End Cap, right                    |
| 8 ..... P-57 ..... Shaft                                |
| 9 ..... N/A ..... E-Clip                                |
| 9 ..... N/A ..... E-Clip, 5167, 5177                    |
| 10 ..... P-74 ..... Spacer                              |



Models: MC-5107, MC-5117, MC-5157, MC-5167, MC5177

1	P-4022	Dust Compartment, 5107	29	P-000058	Protector Supporter, 5157, 5167, 5177
1	P-4004	Dust Compartment, 5117	30	P-000254	Ornamental Plate, 5107
1	P-000097	Dust Compartment, 5157, 5167, 5177	30	P-000105	Ornamental Plate, 5117
2	P-8913	On/Off Switch		P-000241	Vac Gauge Plate, 5167
3	P-0698	Cord Stopper	31	P-926	Motor Assembly
3	N/A	Cord Stopper, 5157, 5167, 5177	31	P-000144	Motor Assembly, 5177
4	P-000132	Screw, 5107	32	P-272	Carbon Brush
4	P-000100	Screw, 5117	32	P-0035	Carbon Brush (2), 5157, 5167
4	P-00132	Screw, 5157, 5167, 5177	32	P-10393	Carbon Brush (2), 5177
5	P-000252	Power Cord, 5107		P-0036	Bracket, brushes, 5157, 5167, 5177
5	N/A	Power Cord, 5117	33	P-99300	Noise Suppressor
5	P-000078	Power Cord, 5157, 5167, 5177	34	P-0293	Motor Support Rubber, front
6	P-000623	Wire Connector	35	P-9911	Motor Support Rubber, rear
7	P-66	Rubber Gasket	36	P-377	Wire Cord
8	P-0307	Switch Cover, 5107	36	P-37020	Wire Cord, 5157, 5167, 5177
8	P-003	Switch Cover, 5117	37	P-333	Protector Filter
8	P-0302	Switch Cover, 5157, 5177	38	P-000255	Handle, 5107
8	P-000141	Switch Cover, 5167	38	P-000106	Handle, 5117
9	P-73	Rubber Gasket	38	P-000270	Handle, includes grip, 5157, 5177
10	P-000132	Screw, 5107	38	P-64200	Handle, 5167
10	P-000100	Screw, 5117	39	P-5332	Upper Cord Storage Hook, 5107
10	P-000132	Screw, 5157, 5167, 5177	39	P-53007	Upper Cord Storage Hook, 5117, 5167
11	P-7301	Handle Screw	39	P-000243	Upper Cord Storage Hook, 5157, 5177
12	P-2117	Nut	40	P-5505	Cord Hook, 5107
13	P-3200	Filter Supporter	40	P-55007	Cord Hook, 5117, 5167
14	P-375	Secondary Filter	40	P-000244	Cord Hook, 5157, 5177
14	P-9829	Secondary Filter, electrostatic, 5157, 5177	41	P-7670	Cord Hook Spring
15	P-161	Roller, 5107	42	P-587	Washer
15	P-0107	Roller, 5117	43	P-5404	Lower Cord Storage Hook, 5107
15	P-0114	Roller, 5157, 5167, 5177	43	P-54007	Lower Cord Storage Hook, 5117, 5167
16	P-161	Roller Shaft	43	P-000245	Lower Cord Storage Hook, 5157, 5177
17	P-05	E-Clip	44	P-430	Screw
17	N/A	E-Clip, 5157, 5167, 5177	45	P-000256	Dust Cover, 5107
18	P-115P	Paper Bag, type U3, 3 pack	45	P-000107	Dust Cover, 5117
18	P-115PT	Paper Bag, type U3, 12 pack	45	P-000246	Dust Cover, 5157
18	253	Paper Bag, 3 pack (R)	45	P-000160	Dust Cover, 5167
18	253-12	Paper Bag, 12 pack (R)	45	P-000247	Dust Cover, 5177
18	MF-11	Paper Bag, 3 pack, micro-filtration (R)	46	P-000108	Lead Wire
19	P-6078	Suction Inlet, 5107	47	P-3407	Nozzle Hose, 5107
19	P-60704	Suction Inlet, 5117	47	P-34	Nozzle Hose, 5117
19	P-000138	Suction Inlet, 5157, 5167, 5177	47	P-000140	Nozzle Hose, 5157, , 5167, 5177
20	P-0276	Cover, 5107		P-9300	Indicator Packing, 5167, 5177
20	P-02704	Cover, 5117		P-000147	Indicator Cap, , 5167, 5177
20	P-000139	Cover, 5157, 5167, 5177		P-000148	Indicator Spring, 5167, 5177
21	P-000132	Screw, 5107		P-000149	Indicator Lead, 5167, 5177
21	P-000100	Screw, 5117		P-000150	Indicator Body, 5167, 5177
21	P-000132	Screw, 5157, 5167, 5177		P-4100	Oversized Repair Screw, upper cord hook
22	P-000253	Motor Case, 5107		P-000272	Oversized Repair Screw, lower cord hook
22	P-09004	Motor Case, 5117		P-0037	Motor Brush Screw, 5157, 5177
22	P-000096	Motor Case, 5157, 5167, 5177		P-000249	Handle Grip, 5157, 5177
23	P-201	Rear Cover Packing			
24	P-195	Motor Case Packing			
24	P-1912	Motor Case Packing, 5157, 5167, 5177			
25	P-000132	Screw, 5107			
25	P-000100	Screw, 5117			
25	P-000132	Screw, 5157, 5167, 5177			
26	P-692	Protector			
27	P-000057	Protector Spring			
28	P-000056	Protector Case			
29	P-182	Protector Supporter			