


Models: MC-V6807, MC-V6830, MC-V6840, MC-V6847


Nozzle Housing

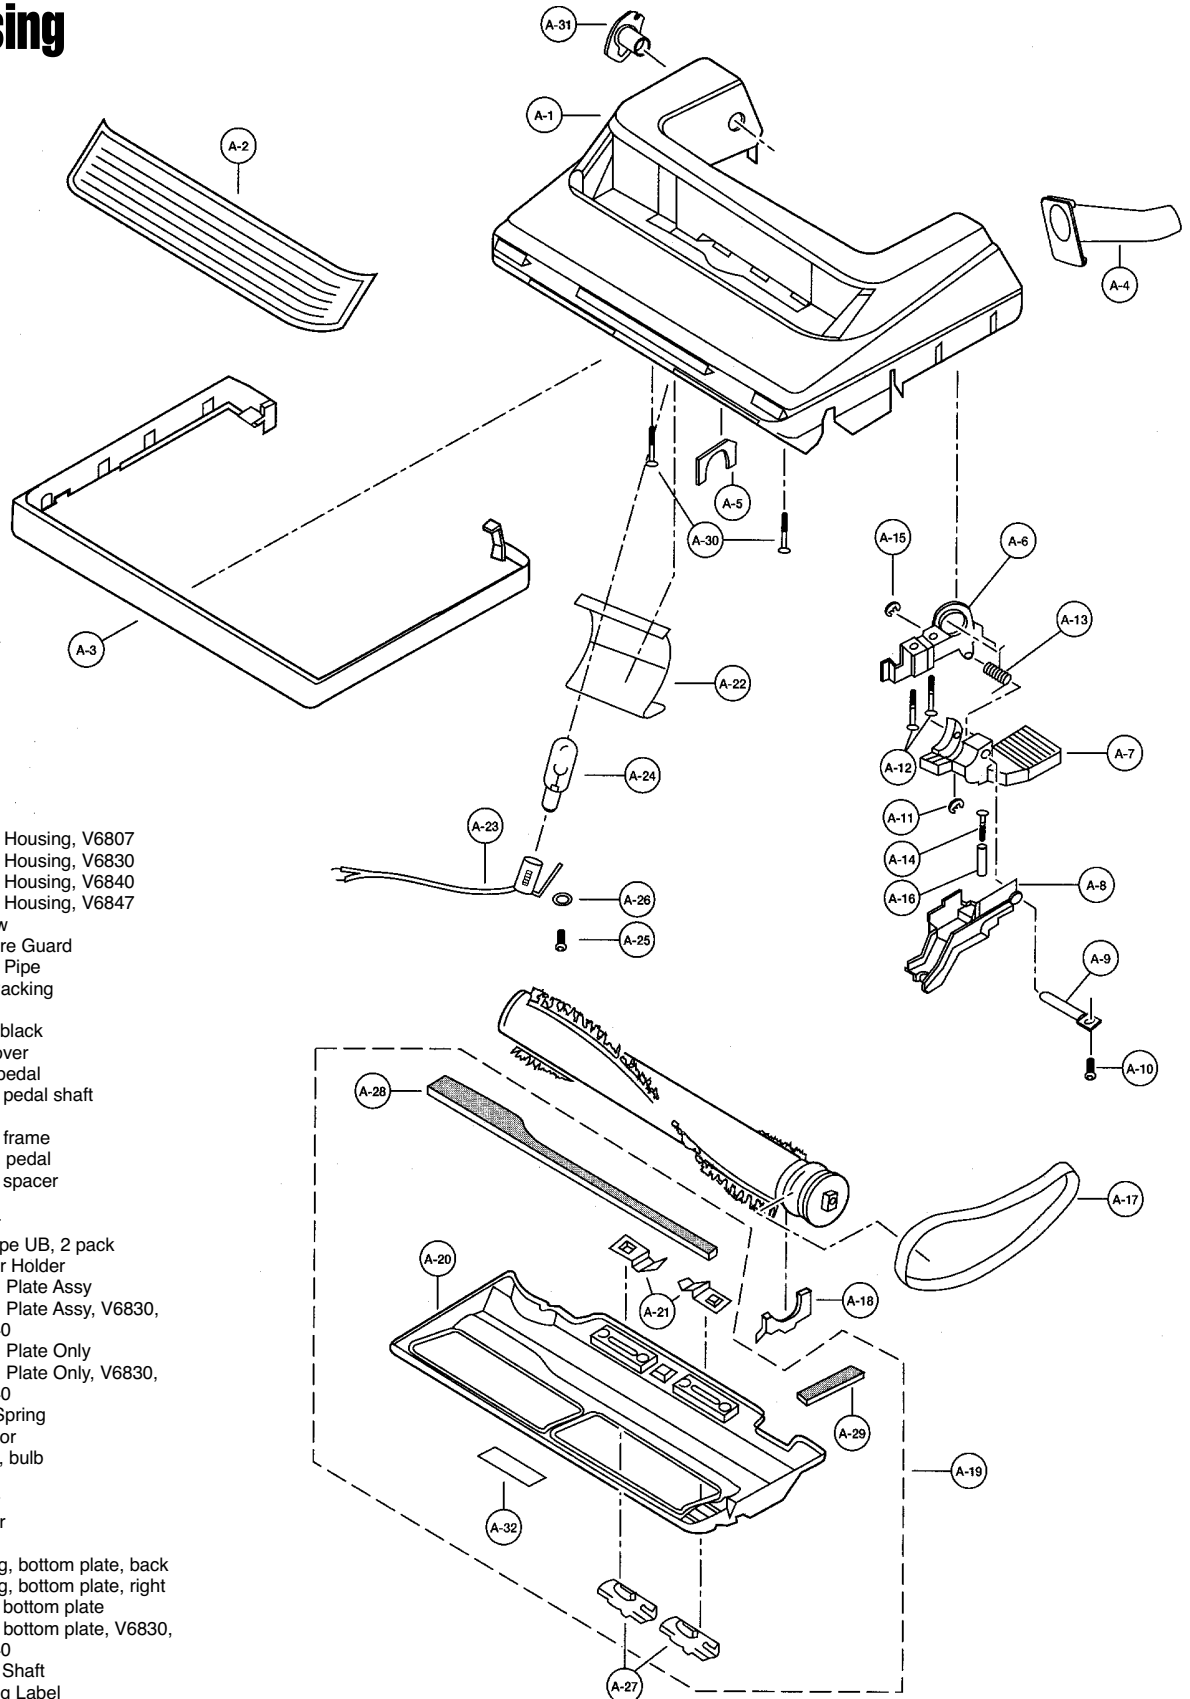

- 1 P-1105 Nozzle Housing, V6807
- 1 P-1513 Nozzle Housing, V6830
- 1 P-01103 Nozzle Housing, V6840
- 1 P-01101 Nozzle Housing, V6847
- 2 P-2125 Window
- 3 P-000274 Furniture Guard
- 4 P-10108 Nozzle Pipe
- 5 P-81 Tight Packing
- 6 P-000095 Frame
- 7 P-4720 Pedal, black
- 8 P-1124 Belt Cover
- 9 P-00051 Shaft, pedal
- 10 ... P-6140 Screw, pedal shaft
- 11 ... P-411 E-Clip
- 12 ... P-6140 Screw, frame
- 13 ... P-000010 Spring, pedal
- 14 ... P-428 Screw, spacer
- 15 ... P-411 E-Clip
- 16 ... P-7411 Spacer
- 17 ... P-2287 Belt, type UB, 2 pack
- 18 ... P-8220 Agitator Holder
- 19 ... P-8939 Bottom Plate Assy
- 19 ... P-000013 Bottom Plate Assy, V6830, V6840
- 20 ... P-000133 Bottom Plate Only
- 20 ... P-2701 Bottom Plate Only, V6830, V6840
- 21 ... P-704 Latch Spring
- 22 ... P-10109 Reflector
- 23 ... N/A Socket, bulb
- 24 ... P-2810 Bulb
- 25 ... P-000610 Screw
- 26 ... P-587 Washer
- 27 ... P-2751 Latch
- 28 ... P-742 Packing, bottom plate, back
- 29 ... P-392 Packing, bottom plate, right
- 30 ... P-683 Screw, bottom plate
- 30 ... P-000015 Screw, bottom plate, V6830, V6840
- 31 ... P-2500 Plastic Shaft
- 32 ... P-07000 Warning Label

Models: MC-V6807, MC-V6830, MC-V6840, MC-V6847


Body Assembly

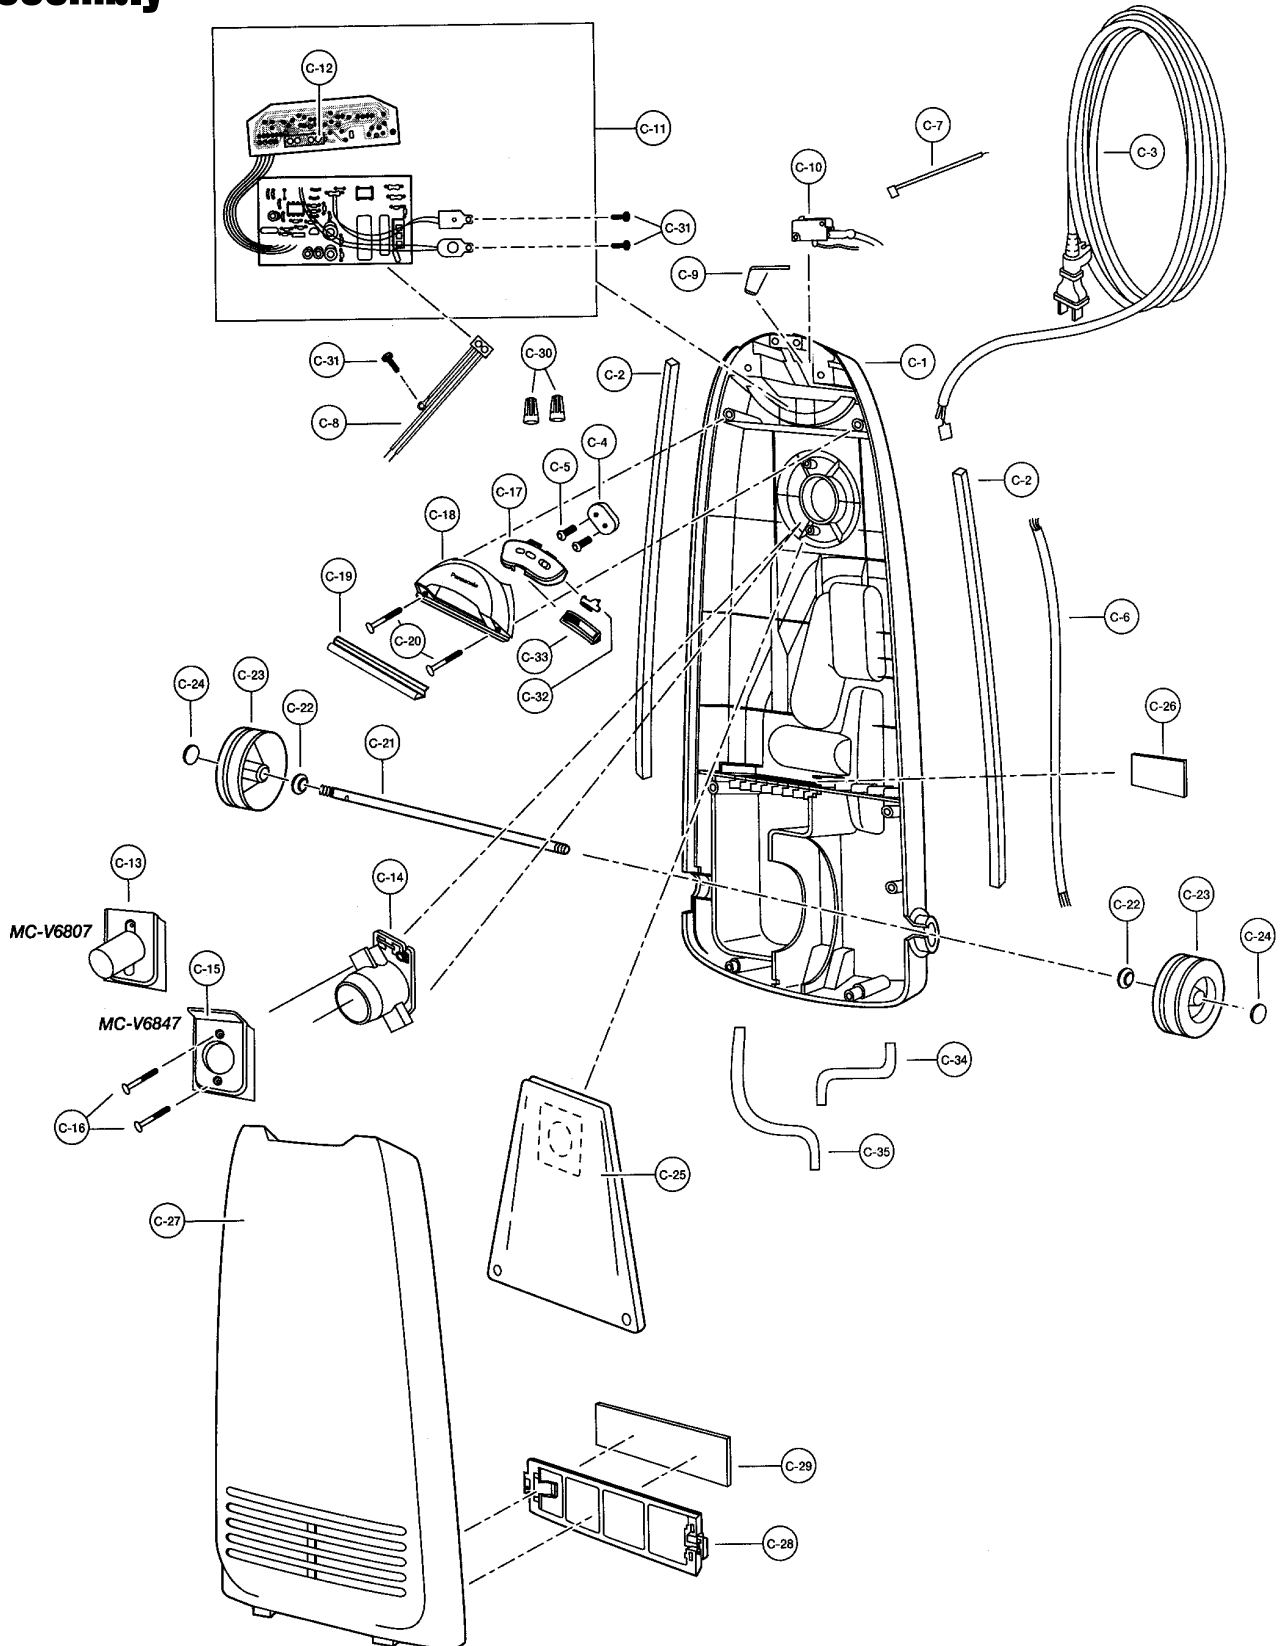

Models: MC-V6807, MC-V6830, MC-V6840, MC-V6847

- | | | |
|--|---|--|
| 1 P-40007 Dust Container, V6807,
..... V6847 | 12 .. P-000027 PCB Holder, V6847 | 27 .. P-6005 Dust Cover, V6807 |
| 1 P-40007 Dust Container, V6830,
..... V6840 | 13 .. P-10358 Bag Supporter, V6830,
..... V6840, V6847 | 27 .. P-60131 Dust Cover, V6830, V6840 |
| 2 P-00109 Packing, dust container | 14 .. P-11012 Bag Supporter, V6847 | 27 .. P-6012 Dust Cover, V6847 |
| 3 P-9816 Power Cord, 35 ft, V6807,
..... V6847 | 15 .. P-7082 Fin Cover, V6847 | 28 .. P-9893 Filter Supporter |
| 3 P-11018 Power Cord, 25 ft, V6830 | 16 .. P-6140 Screw, V6847 | 29 .. P-3099 Filter, electrostatic, V6807,
..... V6840, V6847 |
| 3 P-7906 Power Cord, 30 ft, V6840 | 17 .. P-2161 Ornamental Plate, V6847 | 29 .. P-000040 Filter, standard, V6830 |
| 4 N/A Cord Stopper | 18 .. P-3105 Switch Cover, V6807 | 30 .. P-000623 Wire Nut |
| 5 P-6140 Screw, cord stopper | 18 .. P-3113 Switch Cover, V6830 | 31 .. P-00086 Screw, V6847 |
| 6 P-3820 Wire Cord | 18 .. P-3103 Switch Cover, V6840 | 32 .. P-000043 Sensor Knob, V6847 |
| 7 P-000022 Lead Wire | 18 .. P-18317 Switch Cover, V6847 | 33 .. P-000044 LED Lens, V6847 |
| 7 P-4402 Lead Wire, V6830 | 19 .. P-6037 Packing, switch cover | 34 .. P-3905 Packing, right |
| 8 P-000023 Lead Wire AU, V6847 | 20 .. P-6140 Screw, switch cover | 35 .. P-4160 Packing, left |
| 9 P-000024 Switch Lever | 21 .. P-16005 Roller Shaft | P-000041 1/8 Spring, round, V6830 |
| 10 .. P-0696 Switch, on/off | 22 .. P-6115 Washer, roller shaft | |
| 10 .. P-10602 Switch, on/off, V6830 | 23 .. P-0114 Wheel, black | |
| 11 .. P-000115 PC Assembly, V6847 | 24 .. P-74009 Stopper, wheel | |
| | 25 .. P-115P Paper Bag, type U3, 3 pack | |
| | 26 .. P-7023 Secondary Filter, foam | |


Handle Assembly & Rear Dust Compartment

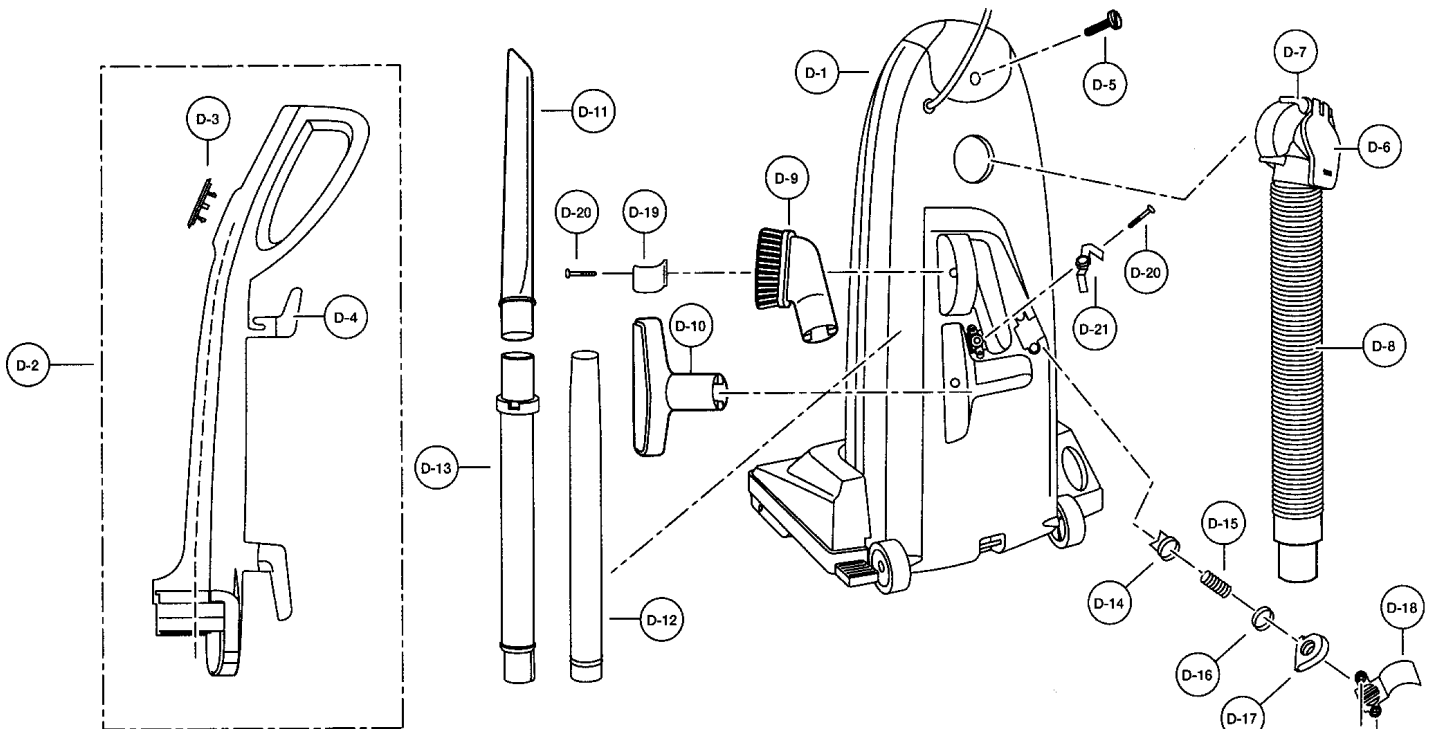

- | | | |
|--|--|--|
| 1 P-40007 Dust Compartment | 9 P-6088 Dusting Brush | 19 .. P-7070 Wand Holder, V6830 |
| 2 P-000018 Handle Assembly, V6807,
..... V6847 | 10 .. P-6620 Upholstery Nozzle | 19 .. P-9896 Wand Holder, V6807, V6840,
..... V6847 |
| 2 P-9507 Handle Assy, V6830 | 11 .. P-6069 Crevice Tool | 20 .. P-8172 Screw |
| 2 P-000286 Handle Assy, V6840 | 12 .. P-60104 Wand, standard, V6830 | 20 .. P-6140 Screw, V6807, V6847 |
| 3 P-7507 Switch Cover, V6830 | 13 .. P-9895 Wand, extension, V6807,
..... V6840, V6847 | 21 .. P-000261 Holder |
| 4 P-7035 Cord Hook, upper | 14 .. P-68006 Protector Case | 21 .. P-000061 Holder, V6807, V6847 |
| 5 P-000048 Screw, handle | 15 .. P-9832 Protector Spring | |
| 6 P-8972 Cover, suction inlet | 16 .. P-6906 Protector | |
| 7 P-9894 Packing, suction inlet | 17 .. P-18006 Protector Supporter | |
| 8 P-0648 Hose Assembly | 18 .. P-000059 Hose Hook | |

Models: MC-V6807, MC-V6830, MC-V6840, MC-V6847

Motor Case & Motor

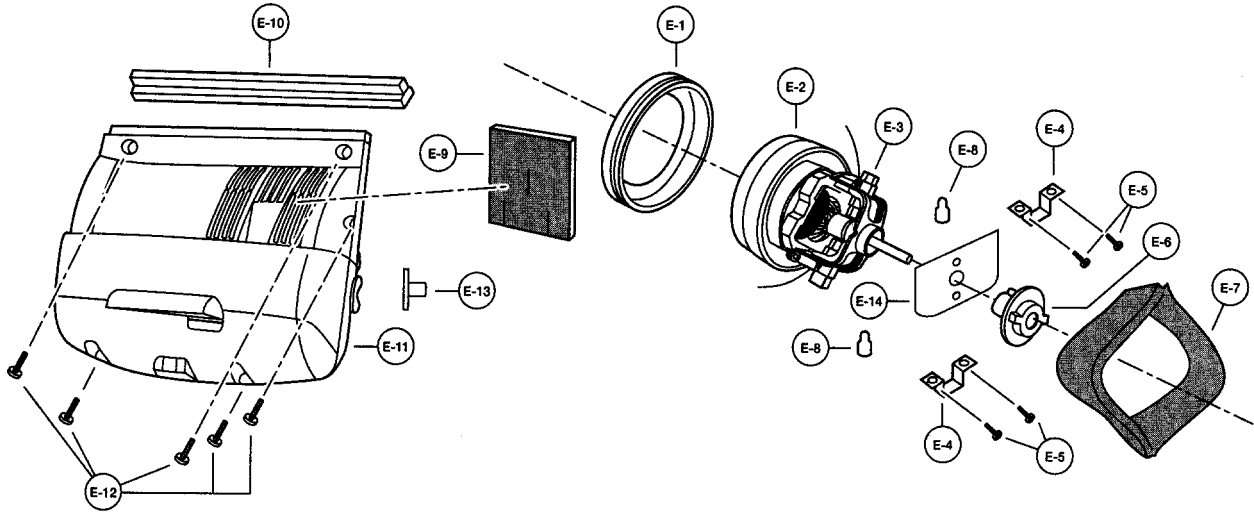

- 1 P-0293 Motor Support, rubber, front
- 2 P-9905 Motor Assembly, V6807, V6847
- 3 P-2908 Motor Assembly, V6830, V6840
- 3 P-27009 Carbon Brush Assy
- 4 P-0036 Retainer Bracket
- 5 P-0037 Screw, retainer bracket



- 6 P-9911 Motor Support, rubber, rear
- 7 P-99300 Noise Suppressor
- 8 P-000623 Wire Nut
- 9 P-000064 Packing, rear cover
- 10 P-00117 Packing, motor case
- 11 P-09101 Motor Case

- 11 ... P-000287 Motor Case, V6830
- 11 ... P-09103 Motor Case, V6840
- 12 ... P-6140 Screw, motor case
- 13 ... P-7805 Plastic Holder
- 14 ... P-0410 Cooling Guide

Agitator Assembly

MODELS: MC-V6807, MC-V6847

- P-921 Agitator Assy, complete
- 2 P-85 Brush Strip (4pc)
- 3 P-078 Agitator Pulley
- 4 P-881 Agitator Holder
- 5 P-304 Filter
- 6 N/A End Cap, right
- 7 P-00125 End Cap, left
- 8 P-57 Agitator Shaft
- 9 N/A E-Clip
- 10 ... P-74 Spacer

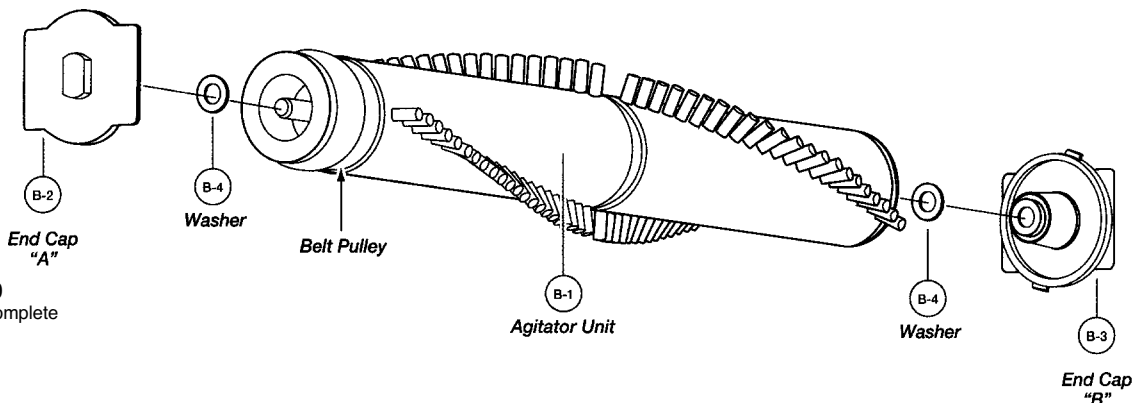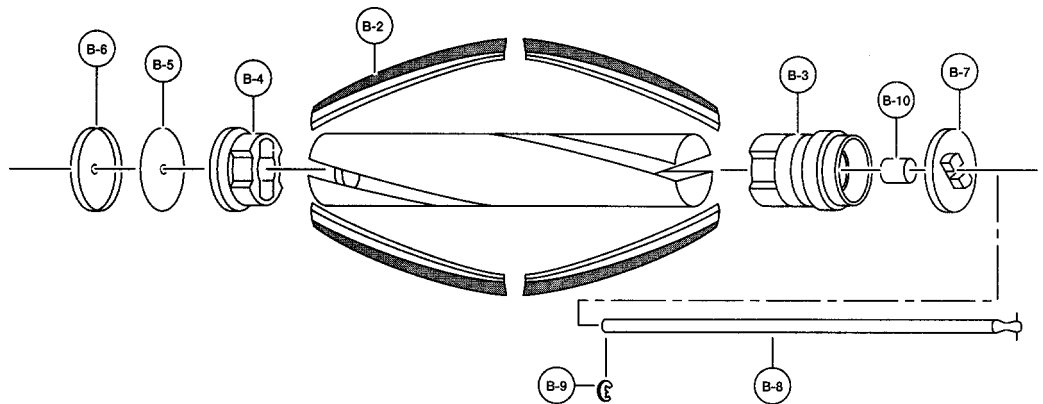

MODELS: MC-V6830, MC-V6840

- P-00108 Agitator Assy, complete
- 1 P-9212 Agitator Unit
- 2 P-0693 End Cap "A"
- 3 P-0694 End Cap "B"
- 4 P-0030 Washer