


Models: MC-V7320, MC-V7347, MC-V7357, MC-V7365, MC-V7367, MC-V7377, MC-V7385

Nozzle Housing

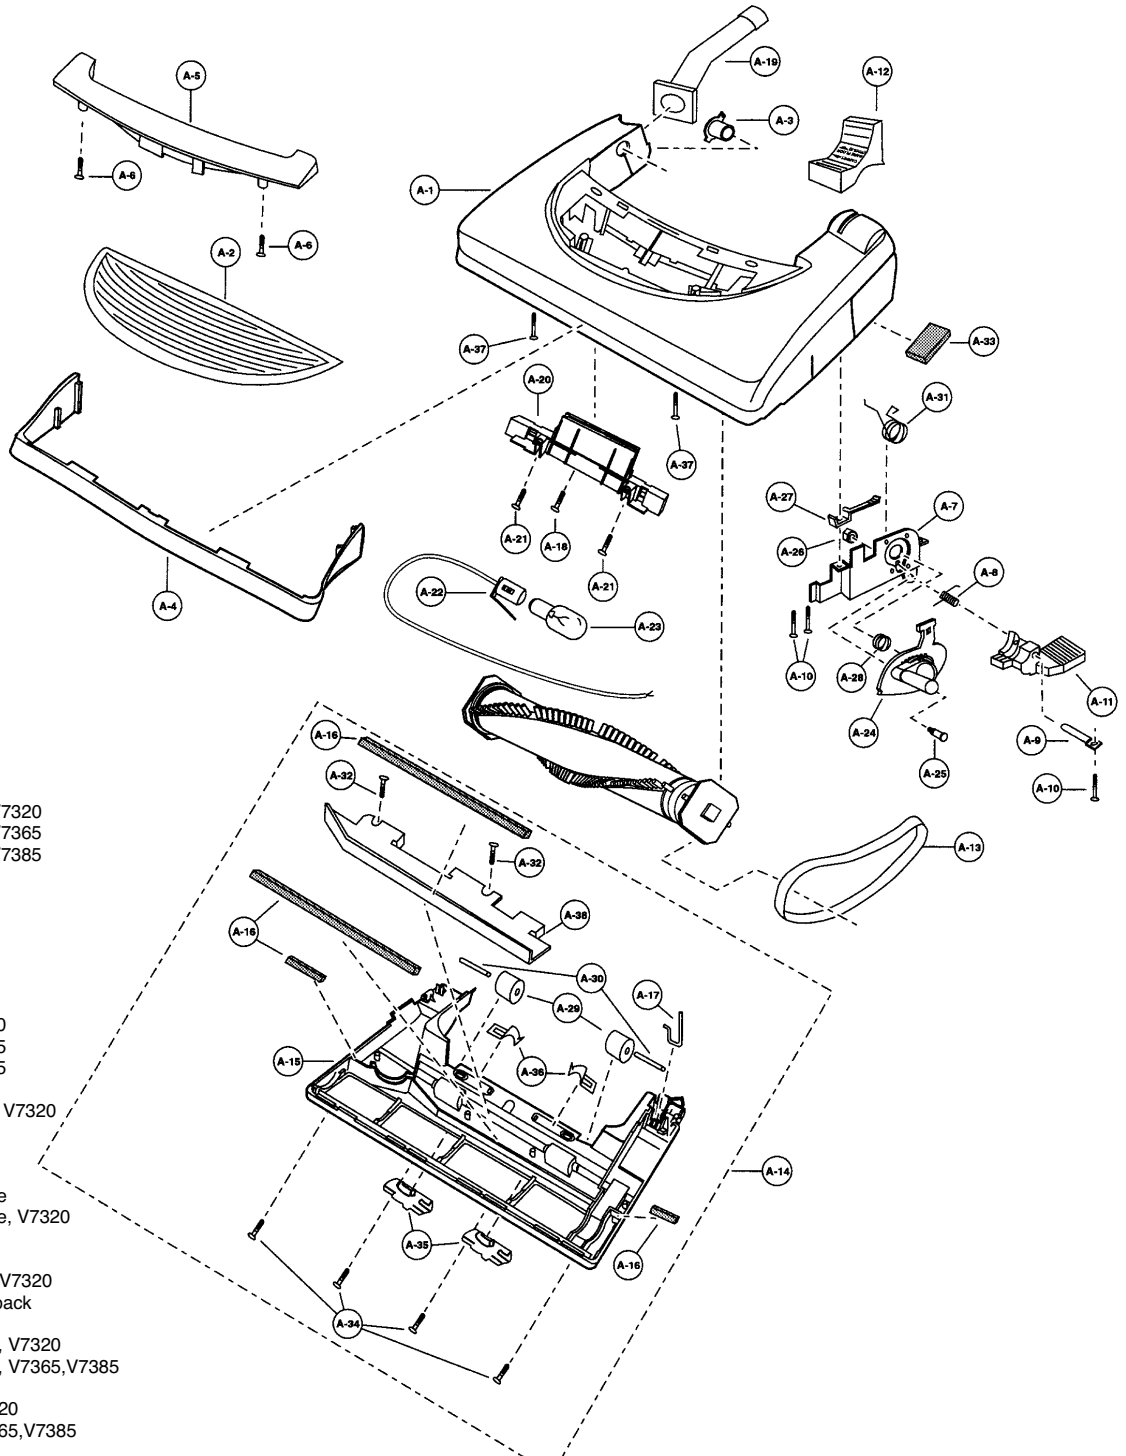

- 1 P-8920 Nozzle Housing
- 1 P-10112 Nozzle Housing, V7320
- 1 P-11025 Nozzle Housing, V7365
- 1 P-10446 Nozzle Housing, V7385
- 2 P-9854 Window
- 3 P-2500 Shaft, plastic
- 4 P-9855 Furniture Guard
- 4 P-10351 Furniture Guard, V7365, V7385, V7367, V7377
- 5 P-8921 Light Cover
- 5 P-9879 Light Cover, V7320
- 5 P-9918 Light Cover, V7365
- 5 P-9879 Light Cover, V7385
- 6 P-8172 Screw, light cover
- 6 P-42092 Screw, light cover, V7320
- 7 P-9878 Frame
- 8 P-9857 Spring, pedal
- 9 P-513 Shaft, pedal
- 10 ... N/A Screw, pedal/frame
- 10 ... P-4104 Screw, pedal/frame, V7320
- 11 ... P-4720 Pedal, black
- 12 ... P-10207 Cover, foot pedal
- 12 ... P-9880 Cover, foot pedal, V7320
- 13 ... P-V270B Belt, type UB8, 2 pack
- 14 ... P-8922 Bottom Plate Assy
- 14 ... P-9881 Bottom Plate Assy, V7320
- 14 ... P-9764 Bottom Plate Assy, V7365, V7385
- 15 ... P-8923 Bottom Plate
- 15 ... P-5964 Bottom Plate, V7320
- 15 ... P-9765 Bottom Plate, V7365, V7385
- 16 ... P-9860 Packing
- 17 ... P-9861 Belt Cover
- 18 ... P-6800 Screw, slider support
- 19 ... P-10108 Nozzle Pipe
- 19 ... P-00121 Nozzle Pipe, V7320
- 19 ... P-9862 Nozzle Hose, short, V7365, V7385, V7367, V7377
- 20 ... P-9863 Slider Support
- 20 ... P-10353 Slider Support, V7365, V7385, V7367, V7377
- 21 ... P-6140 Screw, slider support
- 22 ... P-9367 Socket, bulb
- 23 ... P-2810 Bulb

- 24 ... P-10367 Pedal Gear Assy
- 24 ... P-9883 Foot Pedal Gear, V7320
- 25 ... P-9884 Shoulder Screw
- 26 ... P-9885 Nut/Lock Washer
- 27 ... N/A Spring, foot gear pedal
- 27 ... P-9886 Spring, foot gear pedal, V7320
- 28 ... P-9887 Spring, pedal gear assy
- 29 ... P-9888 Wheel
- 30 ... P-9889 Shaft, wheel
- 31 ... P-02184 Spring, shifter return
- 32 ... P-6140 Screw, bottom plate
- 32 ... P-98104 Screw, bottom plate, V7348


- 33 ... P-98103 Packing, nozzle
- 34 ... P-98104 Screw, metal bottom plate
- 35 ... P-2444 Latch, bottom plate
- 36 ... P-9846 Spring, stop latch
- 37 ... P-683 Screw, nozzle housing, latch
- 38 ... P-9766 Body, lower plate
- P-10367 Belt Gear Kit, V7320

PANASONIC

V-Series Uprights

Models: MC-V7320, MC-V7347, MC-V7357, MC-V7365, MC-V7367, MC-V7377, MC-V7385


Body Housing

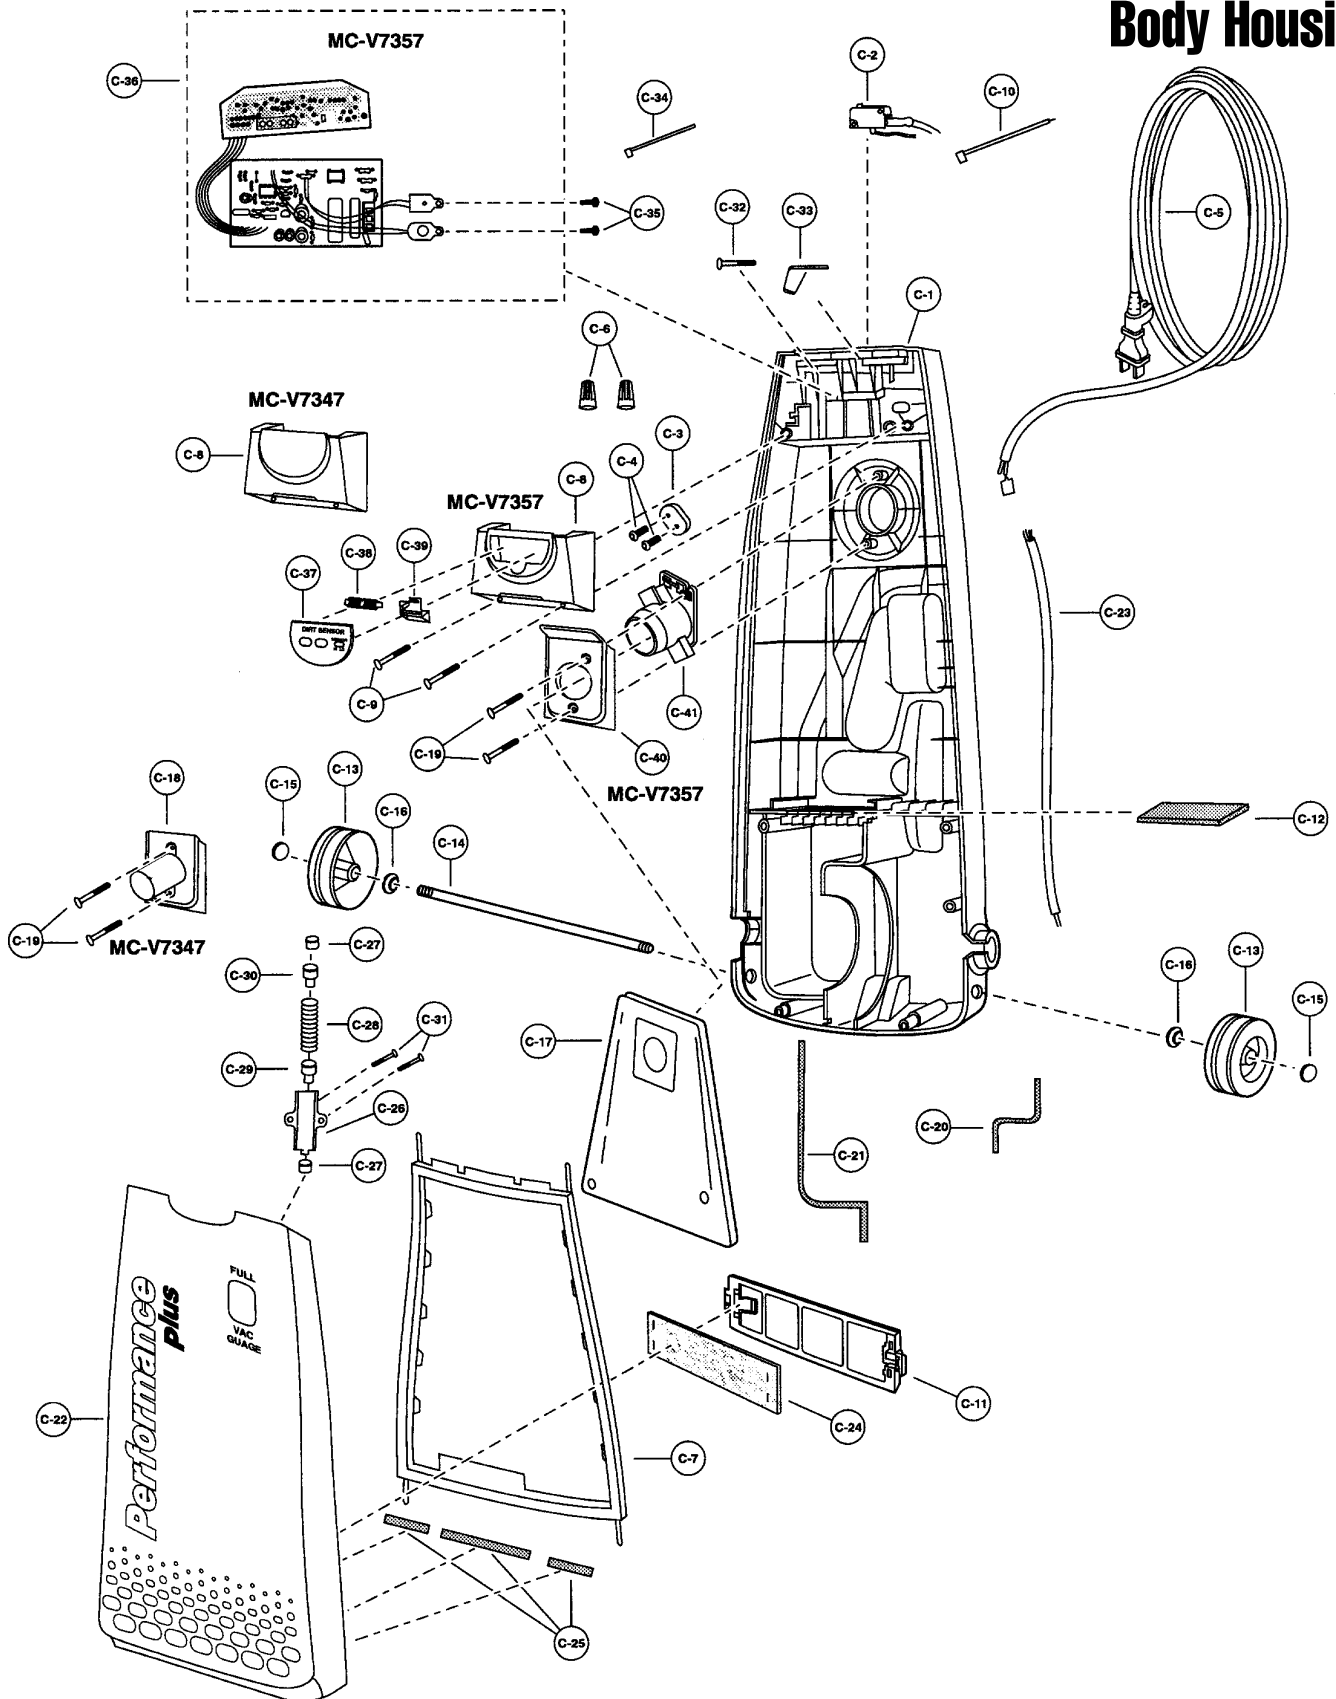

Models: MC-V7320, MC-V7347, MC-V7357, MC-V7365, MC-V7367, MC-V7377, MC-V7385

- | | | |
|------------------------------------------------------|----------------------------------------------------------|-----------------------------------------------------|
| 1 P-10396 Dust Compartment | 11 ... P-9893 Filter Supporter | 26 ... P-98109 Body, indicator |
| 1 P-5899 Dust Compartment, V7320 | 12 ... P-7023 Secondary Filter, foam | 26 ... P-10399 Body, indicator, V7367/77 |
| 1 N/A Dust Compartment, V7347,V7357 | 13 ... P-0114 Wheel | 27 ... P-9300 Packing, indicator |
| 1 P-10359 Dust Compartment, V7365 | 14 ... P-16005 Shaft, wheel | 28 ... P-000148 Spring, indicator |
| 1 P-11027 Dust Compartment, V7385 | 15 ... P-74009 Stopper, wheel | 29 ... P-000149 Lead, indicator |
| 2 P-0696 On/Off Switch | 16 ... P-6115 Washer, wheel | 30 ... P-000147 Cap, indicator |
| 2 P-10602 On/Off Switch, V7365 | 17 ... P-1159P Paper Bag, type U3, 3 pack | 31 ... P-4104 Screw, indicator |
| 2 P-9929 On/Off Switch, V7385 | 17 ... P-115PT Paper Bag, type U3, 12 pack | 32 ... P-6800 Screw, on/off switch |
| 3 P-0698 Cord Stopper | 18 ... P-5470 Bag Supporter | 33 ... P-0701 Switch Lever |
| 3 N/A Cord Stopper, V7320 | 18 ... P-10358 Bag Supporter, V7347,V7357 | 33 ... P-000024 Switch Lever, V7320 |
| 4 N/A Screw, cord stopper | 18 ... P-10350 Bag Supporter, V7367 | 34 ... P-00104 Wire Tie |
| 5 P-9816 Power Cord | 19 ... P-6140 Screw, bag supporter | 35 ... P-00086 Screw, dirt sensor optic cells |
| 5 P-7906 Power Cord, V7320 | 20 ... P-3990 Packing, right | 36 ... P-5472 PC Assembly |
| 5 P-7906 Power Cord, V7365,V7385 | 21 ... P-5860 Packing, left | 37 ... P-9934 Ornamental Plate |
| 6 P-000623 Wire Connector | 22 ... P-7092 Dust Cover, V7320 | 37 ... P-000031 Ornamental Plate, V7320 |
| 7 P-9866 Packing, dust container | 22 ... P-8927 Dust Cover, V7347 | 38 ... P-9935 LED Lens |
| 7 P-66306 Packing, dust container, V7320 | 22 ... P-8928 Dust Cover, V7357 | 38 ... P-000044 LED Lens, V7320 |
| 8 P-7091 Switch Cover, V7320 | 22 ... P-10360 Dust Cover, V7365 | 39 ... P-9928 Sensor Knob |
| 8 P-8925 Switch Cover, V7347,V7367 | 22 ... P-10397 Dust Cover, V7367 | 39 ... P-000043 Sensor Knob, V7320 |
| 8 P-8926 Switch Cover, V7357,V7377 | 22 ... P-10398 Dust Cover, V7377 | 40 ... P-7082 Cover, bag supporter |
| 8 P-8926 Switch Cover, V7365 | 22 ... P-10448 Dust Cover, V7385 | 41 ... P-5470 Bag Supporter, dirt sensor |
| 8 P-9926 Switch Cover, V7385 | 23 ... P-3820 Wire Cord | P-98115 Partition Board, V7320 |
| 9 P-6140 Screw, switch cover | 24 ... P-3099 Exhaust Filter, electrostatic, V7320 | P-9927 Partition Board, V7385 |
| P-6037 Packing, switch cover, V7320 | 24 ... P-8176 Exhaust Filter, HEPA, V7347, V7357, | |
| 10 ... P-9892 Lead Wire | V7365, V7367, V7377, V7385 | |
| 10 ... P-4410 Lead Wire, black, V7347,V7357, | 25 ... P-9869 Packing, dust cover | |
| V7365,V7385 | | |


Handle Assembly & Rear Dust Compartment

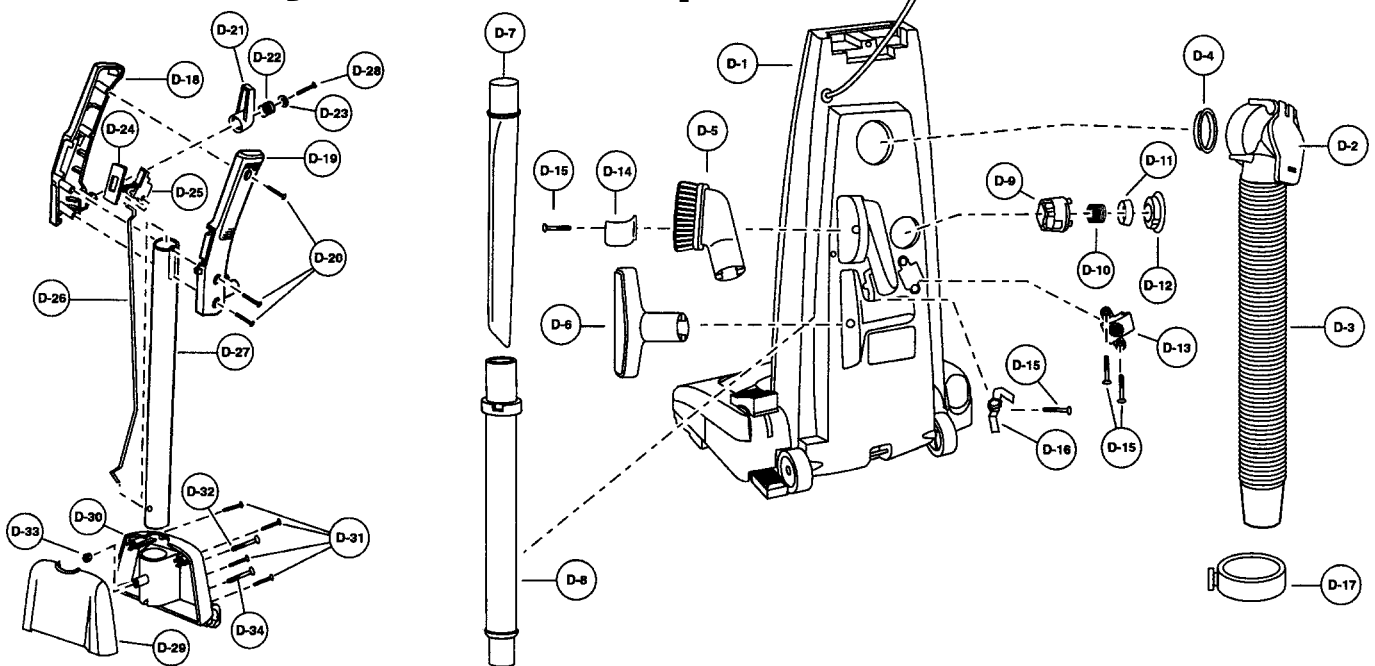

- | | | |
|-----------------------------------------------------|--------------------------------------------------------|---------------------------------------------------------|
| 1 N/A Dust Compartment, V7320 | 10 ... P-7089 Protector Spring | 25 ... P-9938 Knob, switch, V7385 |
| 1 P-8929 Dust Compartment, V7347, V7357 | 11 ... P-6096 Protector | 26 ... P-7554 Lever, handle, V7347/57/67/77 |
| 1 P-10361 Dust Compartment, V7365 | 12 ... P-1806 Protector Spring | 27 ... P-8932 Handle, V7347,V7357 |
| 1 P-40507 Dust Compartment, V7367,V7377 | 13 ... N/A Hose Ring Mount, V7320 | 27 ... P-10404 Handle, V7367,V7377 |
| 1 P-11027 Dust Compartment, V7385 | 13 ... P-98112 Hose Ring Mount, V7347, V7357 | 28 ... P-8172 Screw, cord hook, V7347/57/67/77 |
| 2 P-8972 Cover, suction inlet | 14 ... P-9896 Wand Holder | 29 ... P-8933 Handle Cover, front, V7347/57/67/77 |
| 3 P-8179 Hose | P-10403 Hose Holder, V7367,V7377 | 30 ... P-8934 Handle Cover, rear, V7347/57/67/77 |
| 3 P-0648 Hose, V7320 | 15 ... P-6140 Screw | 31 ... P-8172 Screw, handle cover, V7347/57/67/77 |
| 3 P-10436 Hose, V7367,V7367,V7385 | 16 ... P-9897 Holder, dusting brush | 32 ... P-7301 Screw, handle, V7347/57/67/77 |
| 4 P-9894 Packing, suction inlet | 17 ... P-9873 Hose Ring | 33 ... P-2117 Nut, handle screw, V7347/57/67/77 |
| 5 P-6088 Dusting Brush | 18 ... P-9817 Handle Grip, right, V7347/57/67/77 | 34 ... P-9907 Screw, handle assy, V7347/57/67/77 |
| 6 P-6620 Upholstery Tool | 19 ... P-9818 Handle Grip, left, V7347/57/67/77 | HANDLE ASSEMBLY FOR V7320, V7365, V7385 |
| 7 P-6069 Crevice Tool | 20 ... P-8172 Screw, grip, V7347/57/67/77 | P-000286 Handle Assembly, V7320 |
| 8 P-9895 Telescoping Wand, V7320 | 21 ... P-9819 Cord Hook, upper, V7347/57/67/77 | P-10362 Handle Assembly, V7365 |
| 8 P-8931 Telescoping Wand, V7347, V7357 | 22 ... P-7670 Spring, cord hook, V7347/57/67/77 | P-9937 Handle Assembly, V7385 |
| 8 P-8180 Telescoping Wand, tabs, | 23 ... P-587 Washer, cord hook, V7347/57/67/77 | P-7035 Cord Hook, upper |
| V7365,V7367,V7377,V7385 | 24 ... P-9820 Window, switch, V7347/57/67/77 | P-6907 Knob, switch, V7320 |
| 9 P-6806 Protector Case | 25 ... P-9821 Knob, switch, V7347/57/67/77 | P-9907 Knob, switch, V7365,V7385 |


Models: MC-V7320, MC-V7347, MC-V7357, MC-V7365, MC-V7367, MC-V7377, MC-V7385

Motor Case & Motor

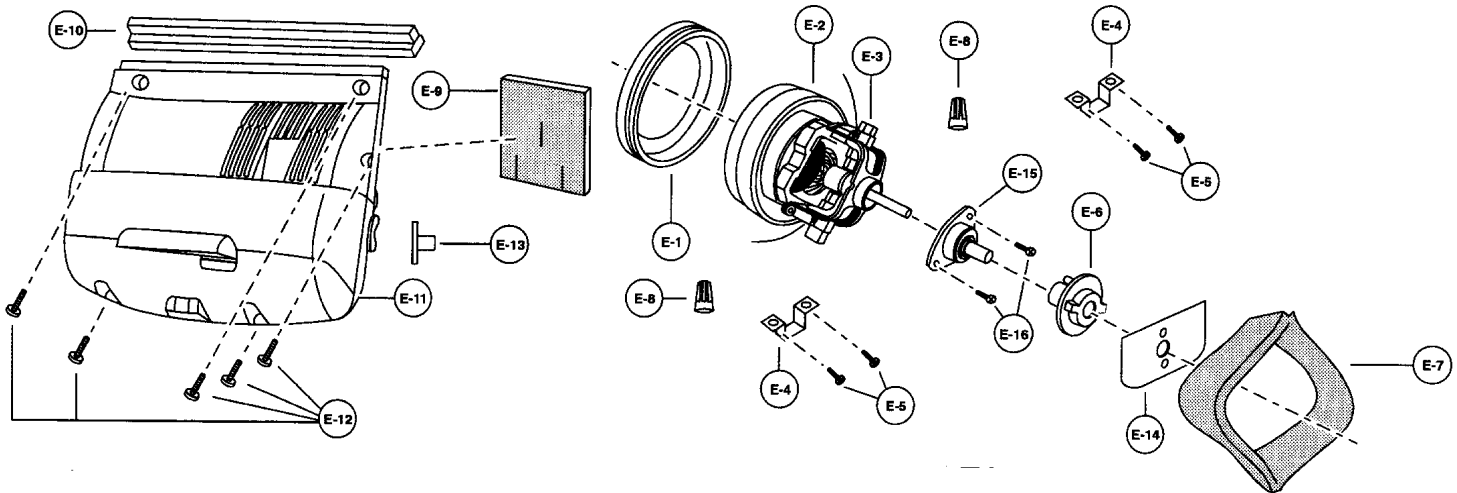

- | | | |
|--------------------------------------------------|-------------------------------------------------|------------------------------------------|
| 1 P-0293 Motor Support Rubber, front | 9 P-5960 Packing, rear cover | |
| 2 P-2908 Motor Assy, V7320 | 9 P-9874 Packing, rear cover, V7347, | |
| 2 P-8935 Motor Assy, V7347, V7357 | V7357, V7367, V7377, V7365, | |
| 2 P-10405 Motor Assy, V7367, V7377 | V7385 | |
| 2 P-8181 Motor Assy, V7365 | 10 .. P-9899 Packing, motor case | 15 .. P-9960 Flange |
| 2 P-11033 Motor Assy, V7385 | 11 .. P-7094 Motor Case, V7320 | 16 .. P-9915 Screw, flange, V7320 |
| 3 P-8182 Carbon Brush Assy | 11 .. P-8937 Motor Case, V7347, V7357 | 16 .. P-9912 Screw, flange, V7347, |
| 3 P-27009 Carbon Brush Assy, V7320 | 11 .. P-9939 Motor Case, V7365 | V7357, V7365 |
| P-9823 Screw, carbon brush | 11 .. P-10406 Motor Case, V7367, V7377 | P-8936 Lead Wire, V7347, |
| 4 P-0036 Retainer Bracket, V7320 | 11 .. P-9944 Motor Case, V7385 | V7357, V7365 |
| 5 P-0037 Screw, brush retainer, V7320 | 12 .. P-8172 Screw, motor case | N/A Ring Spacer, V7347, V7357 |
| 6 P-9911 Motor Support Rubber, rear | 12 .. P-42092 Screw, motor case, V7320 | P-8184 Ring Spacer, V7365, |
| 7 P-9931 Noise Suppressor | 13 .. P-7805 Plastic Holder | V7367, V7377 |
| 8 P-000623 .. Wire Connector | 14 .. P-0410 Cooling Guide | |

Agitator Assembly

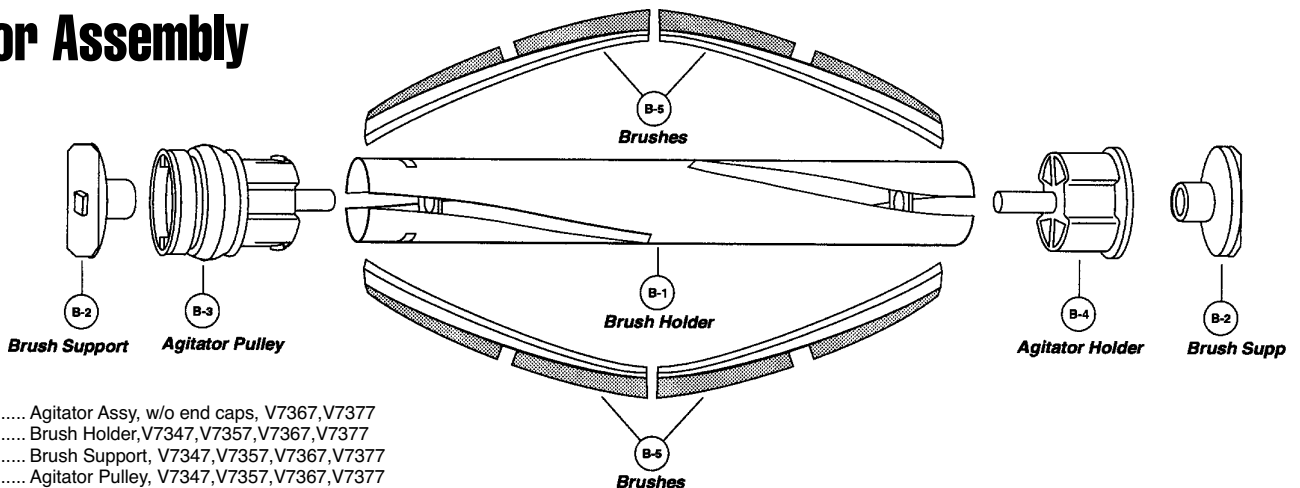

- | |
|---------------------------------------------------------------------|
| P-10395 Agitator Assy, w/o end caps, V7367, V7377 |
| 1 P-98105 Brush Holder, V7347, V7357, V7367, V7377 |
| 2 P-9906 Brush Support, V7347, V7357, V7367, V7377 |
| 3 P-8924 Agitator Pulley, V7347, V7357, V7367, V7377 |
| 4 P-110113 Agitator Holder, V7347, V7357, V7367, V7377 |
| 5 P-110114 Brush Strips (4), V7347, V7357, V7367, V7377 |

AGITATOR PARTS FOR V7320, V7365, V7385

- | |
|------------------------------------------|
| P-9864 Agitator Unit, V7320 |
| P-9767 Agitator Unit, V7365, V7385 |
| P-7095 End Cap (brush support) |
| P-0030 Washer |