


PANASONIC

Models: MC-UG383

BODY

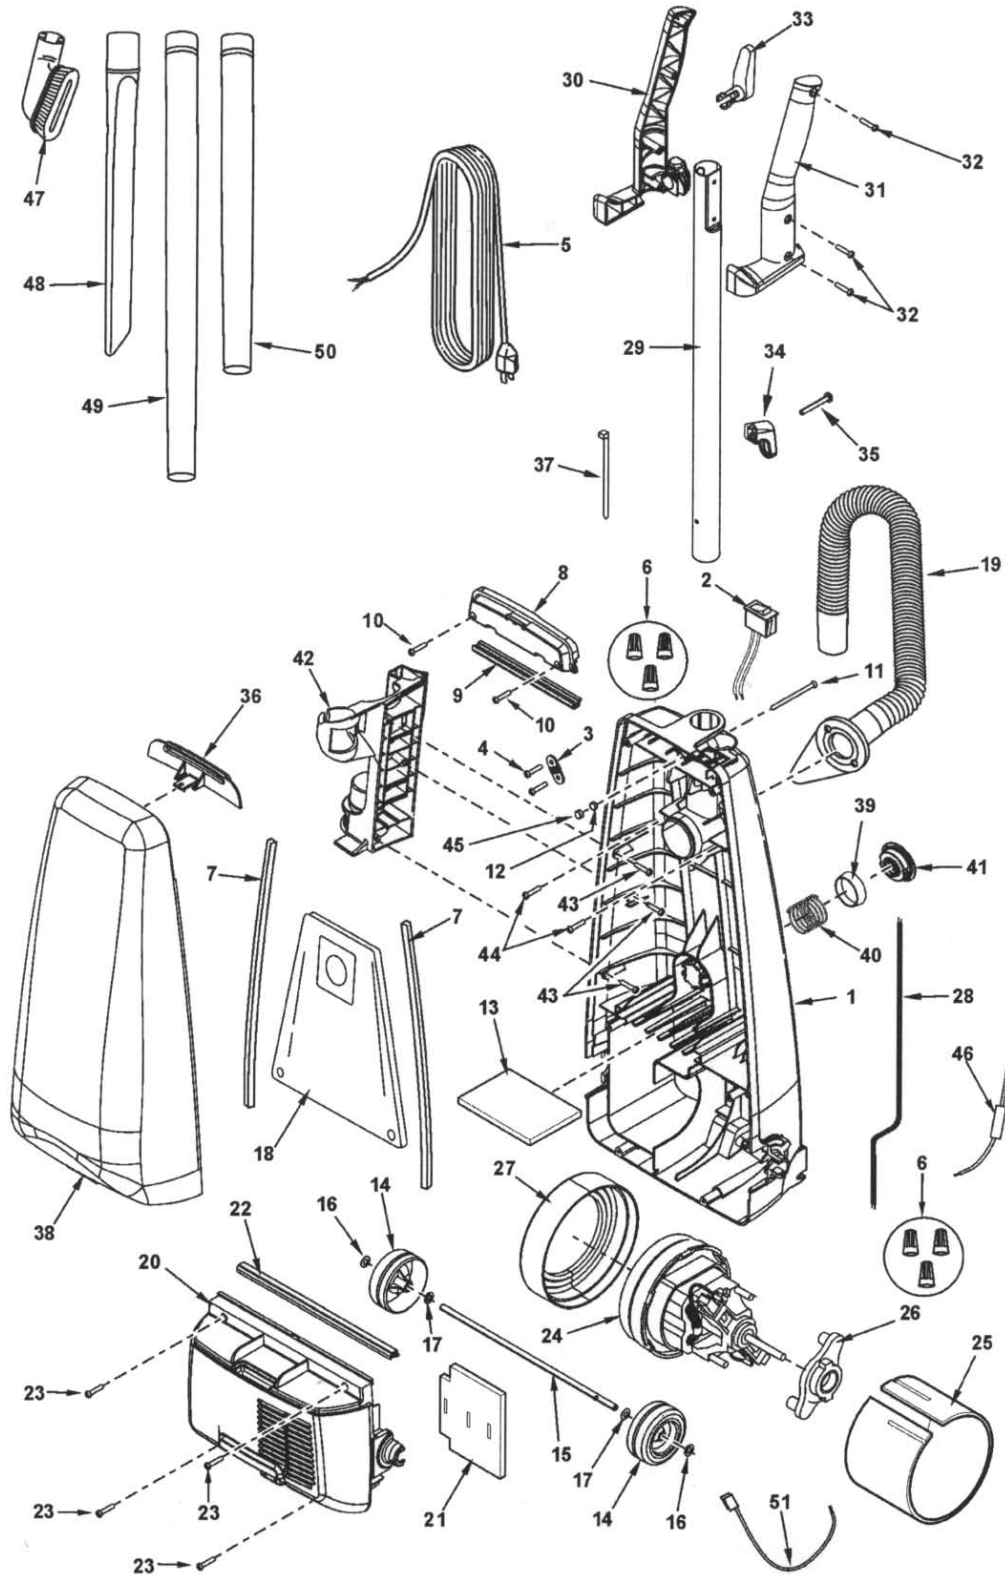

PANASONIC

Models: MC-UG383


BODY

Index	Part No.	Description
1	P-11237	Dust Compartment
2	P-8913	On/Off Switch
3	P-0698	Cord Switch
4	P-6140	Screw (cord stopper)
5	P-111595	Powercord
6	P-000623	Wire Nut
7	P-111748	Packing (dust container)
8	P-111749	Switch Cover
9	P-111752	Packing (switch cover)
10	P-6140	Screw (switch cover)
11	P-7301	Handle Screw
12	P-2117	Nut
13	P-375	Secondary Filter (foam)
14	P-0114	Wheel
15	P-11642	Shaft (wheel)
16	N/A	Stopper (wheel)
17	P-6115	Washer (wheel)
18	P-11643	Dust Bag, Type U6
19	P-11644	Hose Assembly
20	P-11645	Motor Case
21	P-111496	Filter (motor case)
22	P-111497	Packing (motor case)
23	P-8172	Screw (motor case)
24	P-11269	Fan Motor Unit
25	P-10670	Noise Suppressor
26	P-11378	Motor Support Rubber (rear)
27	N/A	Motor Support Rubber (front)
28	P-3820	Wire Cord
29	P-111767	Handle Tube
30	P-111499	Handle Grip (left)
31	P-11646	Handle Grip (right)
32	P-6140	Screw (handle grip)
33	P-111758	Upper Cord Storage Hook
34	P-11379	Lower Cord Storage Hook
35	P-43096	Screw (lower cord storage hook)
36	P-11382	Latch (dust cover)
37	P-00104	Wire Tie
38	P-11647	Dust Cover
39	P-10776	Protector
40	P-10415	Blue Protector Spring
41	P-111672	Protector Cover
42	P-111461	Wand Holder
43	P-6140	Screw (wand holder)
44	P-6140	Screw (suction inlet)
45	P-6106	Insulator Packing (handle screws)
46	P-11381	Lead Assembly
47	P-6088	Dusting Brush
48	P-6069	Crevice Tool
49	P-8180	Extension Wand with tabs
50	P-111394	Extension Wand
51	P-111569	Lead Wire

PANASONIC

Models: MC-UG383

NOZZLE HOUSING

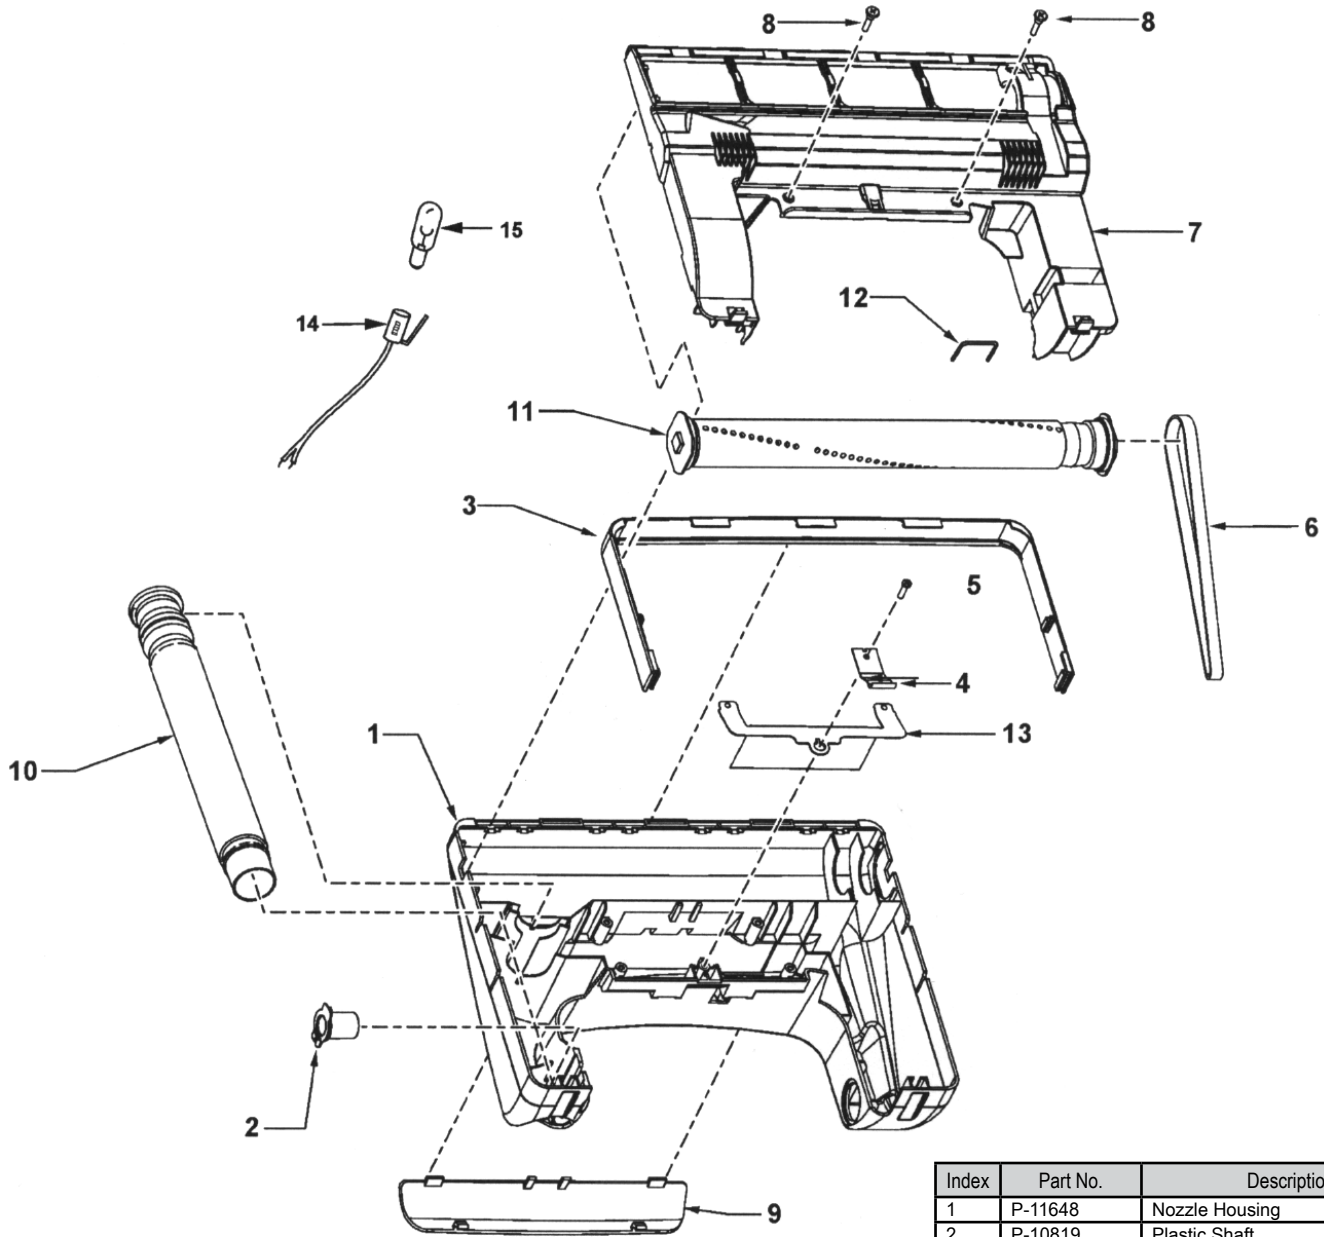

Index	Part No.	Description
1	P-11648	Nozzle Housing
2	P-10819	Plastic Shaft
3	P-11234	Furniture Guard
4	P-11649	Spring (pedal)
5	P-6140	Screw (pedal spring)
6	P-11369	Belt
7	P-11249	Lower Plate
8	P-6140	Screw
9	P-11650	Window Cover
10	P-10304	Nozzle Hose
11	P-111744	Agitator Unit
12	P-43	Belt Cover
13	P-111746	Slider Support
14	P-9367	Bulb Socket
15	P-7550	Light Bulb