


Models: MC-V7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399


Nozzle Housing

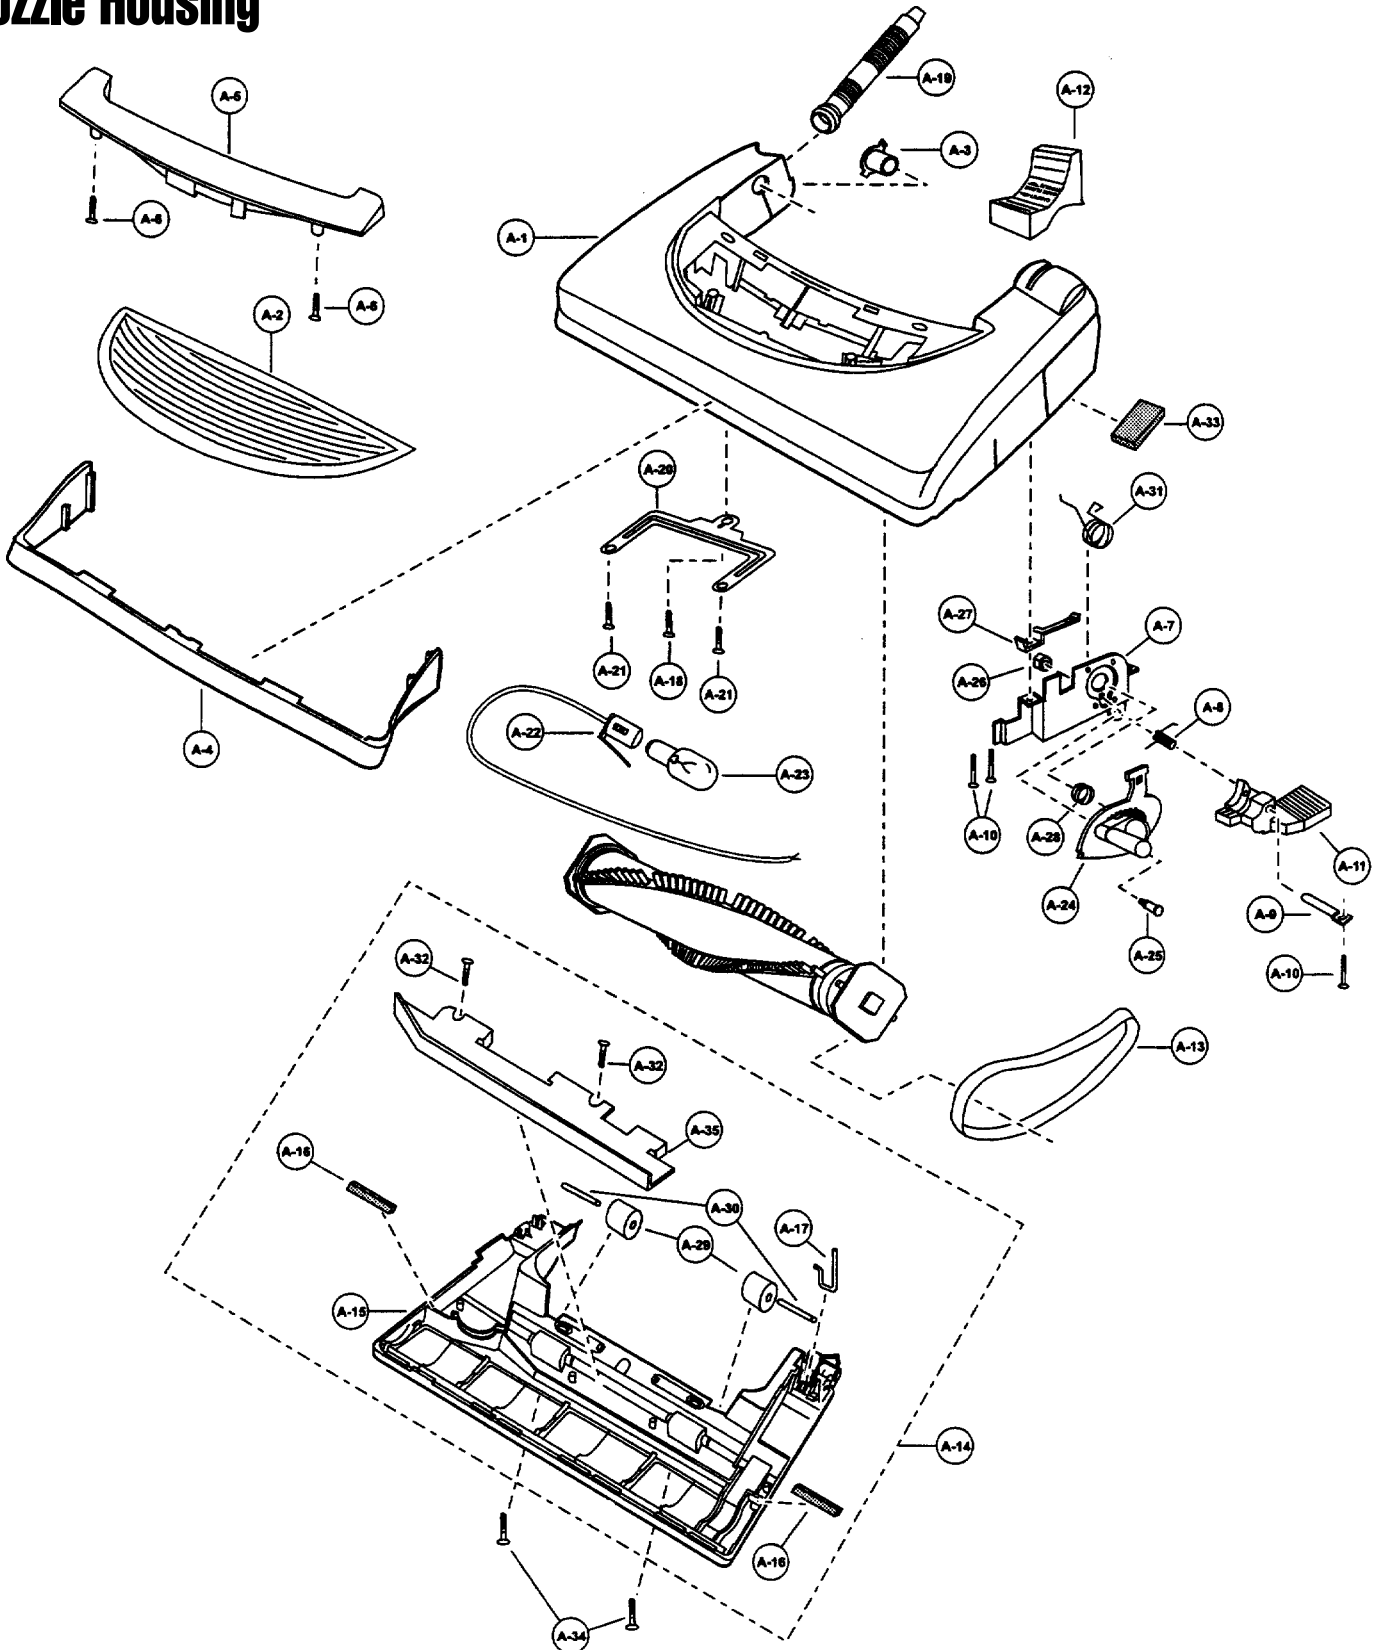

Models: MC-7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399

- | | | |
|---|---|---|
| 1 N/A Nozzle Housing, V7341 | 10 P-02181 Screw, pedal/frame assy | 26 P-9885 Nut/Lock Washer |
| 1 P-10702 Nozzle Housing, V7370 | 11 P-4720 Pedal, black | 27 P-02183 Spring, foot gear pedal |
| 1 P-10723 Nozzle Housing, V7380 | 12 P-10207 Cover, foot pedal | 28 P-9887 Spring, pedal gear assy |
| 1 P-10671 Nozzle Housing, V7387 | 13 P-V270B Belt, 2pk | 29 P-9888 Wheel |
| 1 P-10651 Nozzle Housing, V7389 | 13 P-00181 Belt, each | 30 P-10357 Shaft, wheel |
| 1 P-10668 Nozzle Housing, V7398 | 14 P-10632 Lower Plate Assy | 30 P-9889 Shaft, wheel, V7387 |
| 1 P-10652 Nozzle Housing, V7399 | 14 P-10703 Lower Plate Assy, V7370 | 31 P-02184 Spring, shifter return |
| 2 P-9854 Window | 14 P-10724 Lower Plate Assy, V7380 | 32 P-6140 Screw |
| 2 P-10105 Window, V7370 | 14 P-10672 Lower Plate Assy, V7387 | 33 P-98103 Packing, nozzle |
| 3 P-2500 Shaft, plastic | 15 P-10633 Lower Plate | 34 P-6800 Screw, lower plate |
| 3 P-10819 Shaft, plastic, V7341 | 15 P-10705 Lower Plate, V7370 | 34 P-98104 Screw, lower plate, V7387 |
| 4 P-10351 Furniture Guard | 15 P-10725 Lower Plate, V7380 | 35 P-9766 Body, lower plate |
| 4 P-10541 Furniture Guard, V7341 | 15 P-10681 Lower Plate, V7387 | P-2444 Latch, lower plate, V7387 |
| 4 P-11014 Furniture Guard, V7370 | 16 P-10394 Packing, lower | P-9846 Spring, latch, V7387 |
| 5 P-98100 Light Cover, V7341, V7399 | 17 P-9861 Belt Cover | P-683 Screw, latch, V7387 |
| 5 P-10653 Light Cover, V7380, V7389 | 17 P-43 Belt Cover, V7370 | P-10733 Carpet/Bare Floor,
handle release, V7341 |
| 5 P-8921 Light Cover, V7387 | 18 P-6800 Screw, lower plate | |
| 5 P-10669 Light Cover, V7398 | 19 P-10304 Nozzle Hose | |
| 6 P-8172 Screw, light cover | 20 P-10353 Slider Support | |
| 7 P-9878 Frame | 21 P-6140 Screw, slider support | |
| 7 P-000095 Frame, V7370, V7380 | 22 P-9367 Socket, bulb | |
| 8 P-9857 Spring, pedal | 23 P-7550 Bulb | |
| 9 P-513 Shaft, pedal | 24 P-10367 Pedal Gear Assy | |
| 9 P-00051 Shaft, pedal, V7370 | 25 P-9884 Shoulder Screw | |

Motor Case & Motor

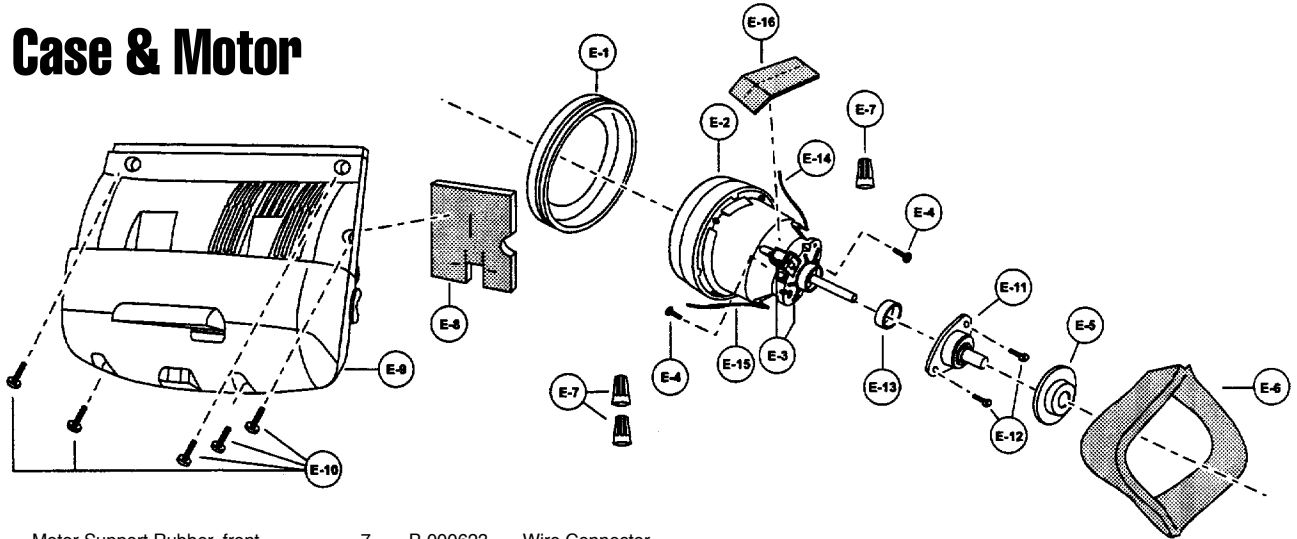

- | | | |
|--|--|--|
| 1 P-0293 Motor Support Rubber, front | 7 P-000623 Wire Connector | 13 P-8184 Ring Spacer |
| 2 P-11033 Motor Assy | 8 P-10648 Packing, rear cover | 14 P-8936 Lead Wire, motor |
| 2 P-10710 Motor Assy, V7370 | 9 P-98113 Motor Case, V7341, V7399 | 14 P-10712 Lead Wire, motor, V7370, V7380 |
| 2 P-10405 Motor Assy, V7387 | 9 P-10711 Motor Case, V7370, V7380 | 15 P-10515 Lead Wire Assy |
| 3 P-8182 Carbon Brush Assy | 9 P-10667 Motor Case, V7389 | 15 P-10688 Lead Wire Assy, V7387 |
| 4 P-9823 Screw, carbon brush | 9 P-10406 Motor Case, V7387 | 16 P-10649 Cooling Guide |
| 5 P-9911 Motor Support Rubber, rear | 10 P-10689 Motor Case, V7398 | P-7805 Plastic Holder |
| 5 P-8183 Motor Support Rubber, rear, V7370,
V7387 | 10 P-6140 Screw, motor case | |
| 6 P-10670 Noise Suppressor | 11 N/A Flange | |
| | 12 P-10690 Screw, flange | |


Agitator Assembly

- | |
|--|
| 1 P-10650 Agitator Unit, V7341 |
| 1 P-9212 Agitator Unit, V7370 |
| 1 P-8408 Agitator Unit, V7399 |
| 1 P-10650 Agitator Unit, V7380, V7389, V7398 |
| 2 P-7095 Brush Support |
| 2 P-0693 Brush Support, V7370 |
| 3 P-0030 Washer |

MC-V7387 AGITATOR

- | |
|------------------------------------|
| P-10682 Agitator Assy |
| P-10375 Brush Strip, 4 piece |
| P-10683 Pulley, agitator |
| P-5919 Holder, agitator |

- | |
|------------------------------|
| P-10376 Filter |
| P-9709 End Cap, right |
| P-9708 End Cap, left |
| P-10684 Agitator Shaft |
| P-4003 E-Clip |
| P-8403 Brush Holder |
| P-10378 Spring Pin |

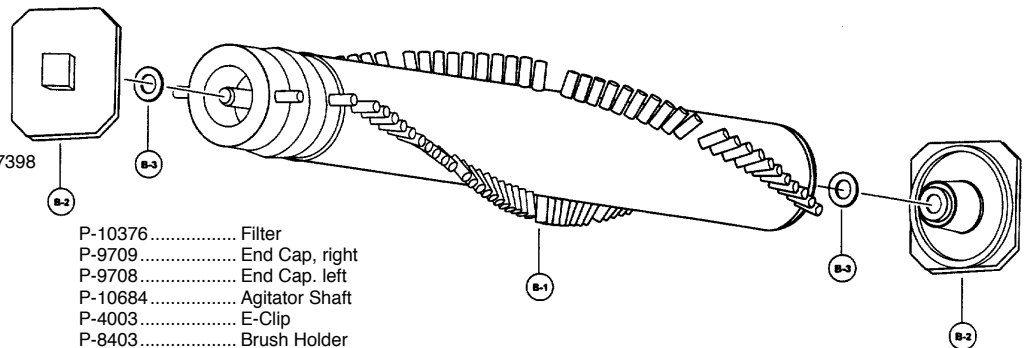


PANASONIC

V-Series Uprights

Models: MC-V7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399


Body

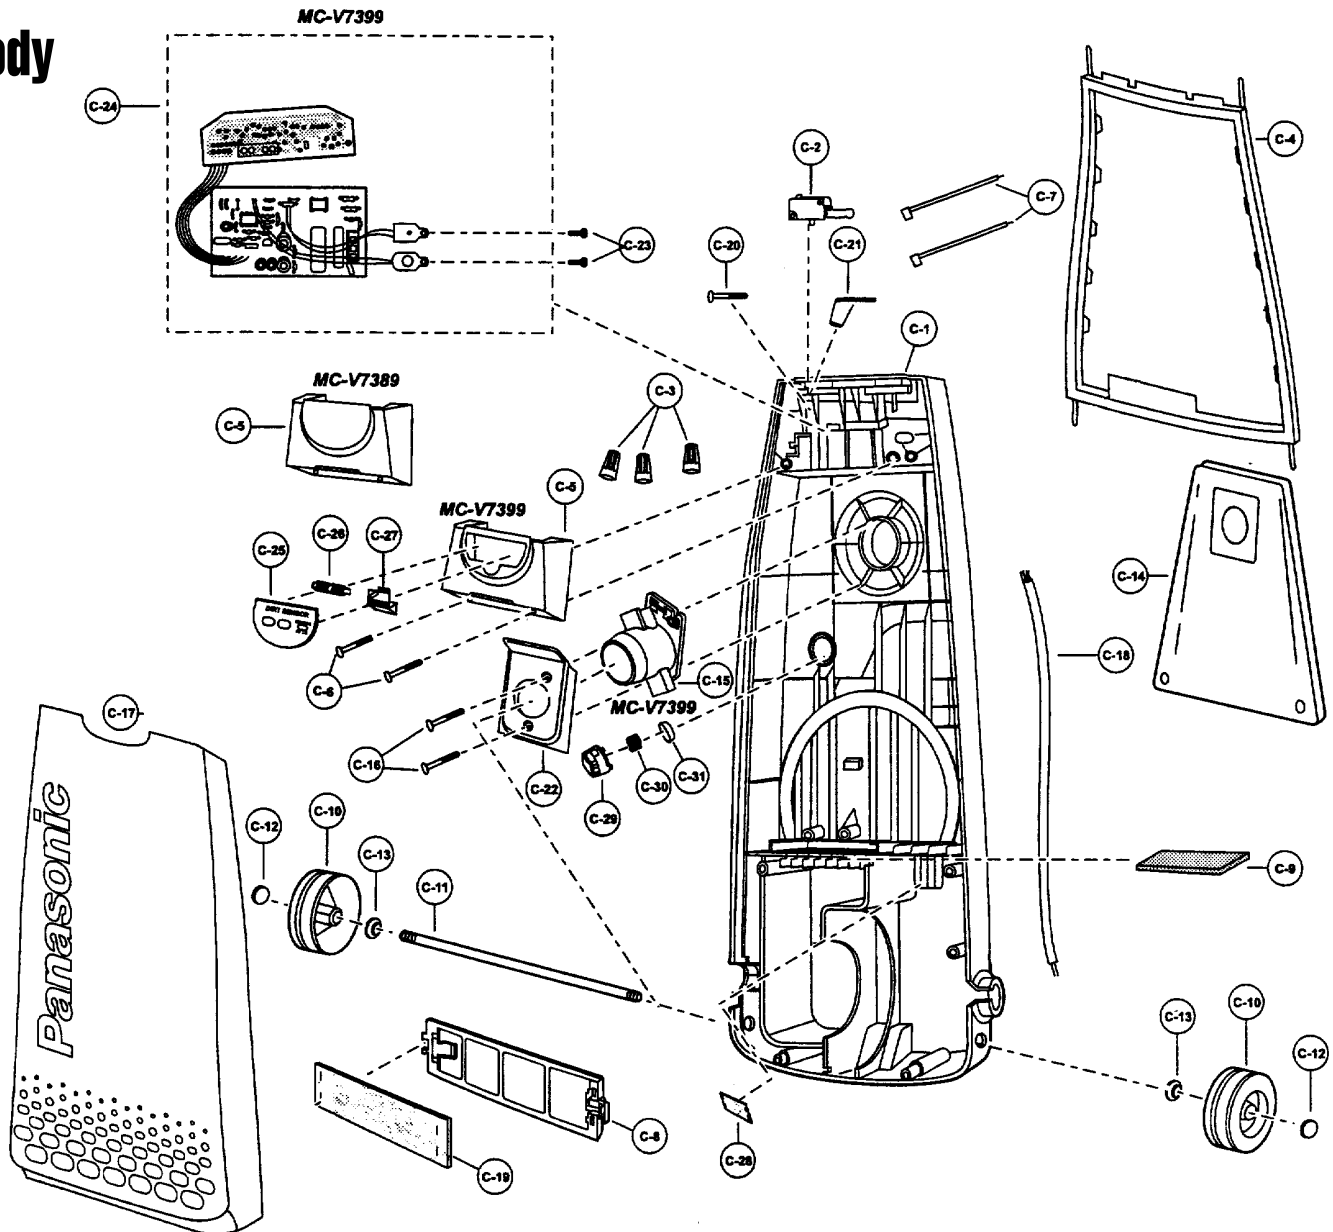

- | | | | | | | | | |
|---|-------------------|---------------------------------|----|------------------|-----------------------------------|----|-------------------|------------------------------------|
| 1 |N/A..... | Dust Compartment Assy, V7341 | 10 |P-0114..... | Wheel | 21 |P-0701..... | Switch Lever |
| 1 |P-10706..... | Dust Compartment Assy, V7370 | 11 |P-16005..... | Shaft, wheel | 22 |P-7082..... | Cover, bag supporter, V41/80/98/99 |
| 1 |P-10726..... | Dust Compartment Assy, V7380 | 12 |P-74009..... | Stopper, wheel | 23 |P-00086..... | Screw, optic cells, V7341/80/98/99 |
| 1 |P-10785..... | Dust Compartment Assy, V7387 | 13 |P-6115..... | Washer, wheel | 24 |P-5472..... | PCB Assembly, V7380/98/99 |
| 1 |P-10654..... | Dust Compartment Assy, V7389 | 14 |P-115P..... | Paper Bag, U3, 3pk | 25 |P-9934..... | Ornamental Plate, V7380 |
| 1 |P-10655..... | Dust Compartment Assy, V7398/99 | 14 |P-115PT..... | Paper Bag, U3, 12pk | 25 |P-10636..... | Ornamental Plate, V7398/99 |
| 2 |P-10656..... | On/Off Switch | 14 |P-145M..... | Paper Bag, U6, 3pk, micron | 26 |P-9935..... | LED Lens, V7380/98/99 |
| 2 |P-0696..... | On/Off Switch, V7341,V7387 | 15 |P-5470..... | Bag Supporter Assy, V7341/80/99 | 27 |P-9928..... | Sensor Knob, V7380/98/99 |
| 2 |P-10602..... | On/Off Switch, V7370,V7380 | 16 |P-6140..... | Screw, bag supporter, V7341/80/99 | 28 |P-10637..... | Rear Cover Packing |
| 3 |P-000623..... | Wire Connector | 17 |P-10850..... | Dust Cover, V7341 | 29 |P-10661..... | Protector Cover |
| 4 |P-9866..... | Packing, dust container | 17 |P-10707..... | Dust Cover, V7370 | 29 |P-10315..... | Protector Cover, V7341 |
| 5 |P-10657..... | Switch Cover | 17 |P-10729..... | Dust Cover, V7380 | 29 |P-6806..... | Protector Cover, V7398 |
| 5 |P-10658..... | Switch Cover, V7341,V7399 | 17 |P-10686..... | Dust Cover, V7387 | 30 |P-10316..... | Protector Spring |
| 5 |P-10728..... | Switch Cover, V7380 | 17 |P-10659..... | Dust Cover, V7389 | 31 |P-6096..... | Protector |
| 5 |P-8925..... | Switch Cover, V7387 | 17 |P-10677..... | Dust Cover, V7398 | 31 |P-10730..... | Protector, V7380 |
| 6 |P-6140..... | Screw, switch cover | 17 |P-10660..... | Dust Cover, V7399 | |P-98109..... | Body, indicator, V7387 |
| 7 |P-9892..... | Lead Wire, black | 18 |P-10635..... | Wire Cord | |P-9300..... | Packing, indicator, V7387 |
| 7 |P-4410..... | Lead Wire, black, V7370,V7380 | 18 |P-3820..... | Wire Cord, V7370,V7387,V7389 | |P-10400..... | Spring, indicator, V7387 |
| 8 |P-9893..... | Filter Supporter | 19 |P-8176..... | Exhaust Filter, HEPA | |P-10674..... | Lead, indicator, V7387 |
| 8 |P-000505..... | Filter Supporter, V7341 | 19 |P-10636..... | Exhaust Filter, HEPA,V7387 | |P-000147..... | Cap, indicator, V7387 |
| 9 |P-10634..... | Secondary Filter, foam | 20 |P-6800..... | Screw, switch | | | |

Models: MC-V7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399

Handle Assembly, Rear Dust Compartment and Cord Reel

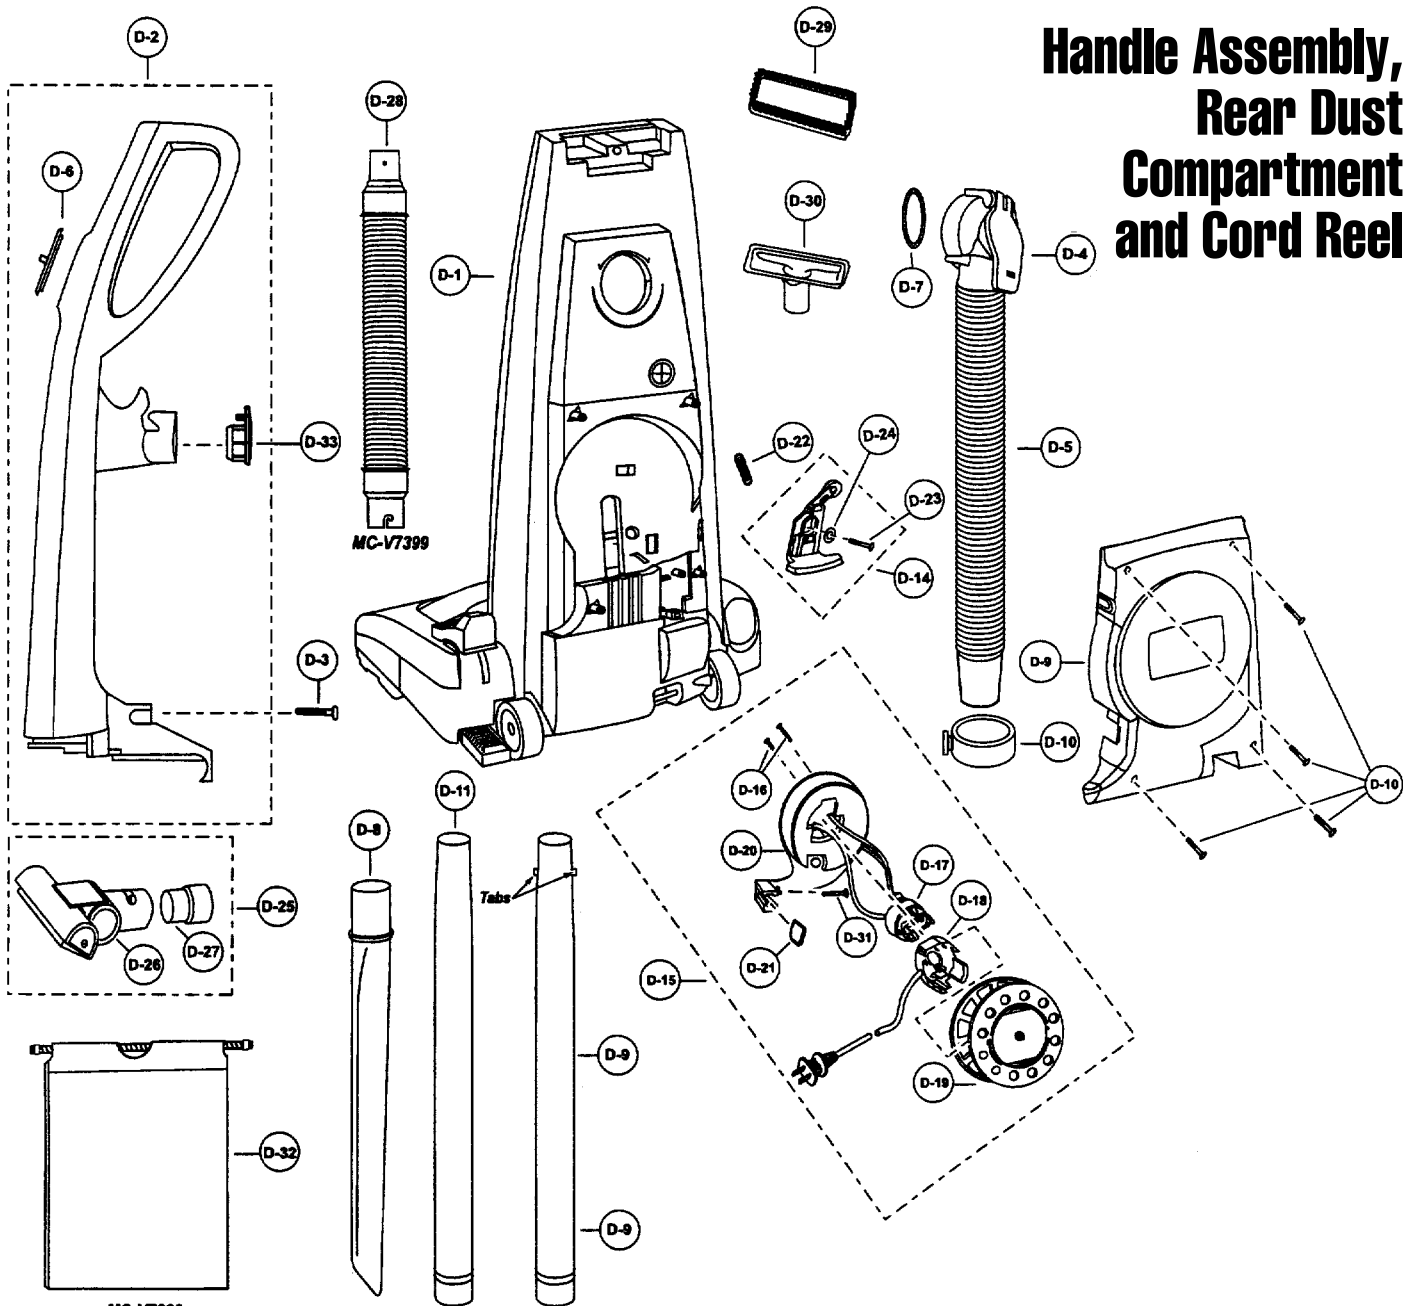

MC-V7399

- | | | |
|--|--|--|
| 1 N/A Dust Compartment Assy, V7341 | 6 N/A Switch Knob, V7341 | 19 P-10680..... Cord Reel Hub Assy |
| 1 P-10706..... Dust Compartment Assy, V7370 | 7 P-10512..... Packing, suction inlet | 20 P-10641..... Bracket, cord reel |
| 1 P-10726..... Dust Compartment Assy, V7380 | 8 P-6069..... Crevice Tool | 21 P-10642..... Cord Guide |
| 1 P-10685..... Dust Compartment Assy, V7387 | 8 P-10805..... Crevice Tool, V7341 | 22 P-10643..... Spring, brake lever |
| 1 P-10654..... Dust Compartment Assy, V7389 | 9 P-8180..... Extension Wand, w/tabs | 23 P-6140..... Screw, brake lever |
| 1 P-10655..... Dust Compartment Assy, V7398, V7399 | 9 P-10781..... Extension Wand, w/tabs, V7341 | 24 P-587..... Washer, brake lever |
| 2 P-10851..... Handle Assy, V7341 | 10 P-9873..... Hose Ring | 25 P-10664..... Attach. Assy, air turbine, V7399 |
| 2 P-10708..... Handle Assy, V7370, V7380 | 11 P-60104..... Extension Wand, w/o tabs | 26 P-10665..... Air Turbine, V7399 |
| 2 P-10662..... Handle Assy, V7389 | 12 P-10638..... Cord Reel Cover | 27 P-10644..... Adaptor Tube, air turbine, V7399 |
| 2 P-10679..... Handle Assy, V7398 | 12 N/A Cord Reel Cover, V7341 | 28 P-10673..... Hose Unit, stretch, V7399 |
| 2 P-10678..... Handle Assy, V7399 | 13 P-6140..... Screw, cord reel cover | 29 P-10645..... Fabric Brush |
| 3 P-9907..... Screw, handle | 14 P-10639..... Brake Lever Assy | 30 P-10646..... Brush Holder |
| 4 P-8972..... Cover, suction inlet | 15 P-10640..... Cord Reel Assy | 31 P-6140..... Screw, bracket |
| 5 P-10436..... Hose | 15 N/A Cord Reel Assy, V7341 | 32 P-10666..... Drawstring Bag, V7399 |
| 5 P-8179..... Hose, V7370 | 16 P-6140..... Screw | 33 P-10647..... Handle Cover |
| 5 P-10727..... Hose, V7380 | 17 P-10709..... Contact Base Assy | 33 N/A Handle Cover, V7341 |
| 6 P-9938..... Switch Knob | 18 P-10663..... Contact Disc Assy | |