

Models: 360

NLA	Motor Unit Assy	66	NLA	Upper Handle Assembly	
2	NLA	Carbon Brush Assy	70	R-801314	Handle Grip
3	R-003008	Spring, rear fork	72	R-0655330	Handle Adaptor Assembly
4	R-670013	Screw, motor plate ret.	76A	R-670844	Cord, clip
5	R-065028	Oiler Cap	77	R-004723	Handle Fork Spring
6	R-618772	Spacer, baffle	78	R-133714	Handle Stop Plate
7	R-672103	Brush Holder Screw Assembly	80	R-801708	Bolt, handle fork retainer
8	R-311031	Screw & Washer Assembly	81	R-801714	Nut, nylon insert
8A	R-380261	Drive Shaft	82	R-990104	Screw, handle stop plate
9	R-618016	Screw, field retainer	83	R-028580	Handle Fork & Latch Assembly
10	R-608005	Fan, heavy duty	90	R-005138	Washer, wheel retainer
11	R-801014	Set Screw, brush holder	91	R-023309	Screw, nozzle & fan case
12	R-801017	Baffle Plate	95	R-230713	Carriage Bolt, handle clamp
13	R-801019	Brush Holder	96	R-2854270	Gasket, nozzle sealing
14	R-801034	Brush Holder Protector Cap	97	R-671705	Wheel, wide
15	R-801701	Screw, rear bearing retainer	98	R-285720	Wingnut, large
16	R-618002	Field, 120v	101	R-801711A	Wheel Retainer
17	R-061905	Rear Wheel, Fork & Shaft Assy	103	R-980743	Screw, machine-thread forming
19	R-671705	Wheel, 2 1/2" diam.	104	R-080105	Nozzle Adjust Screw & Nut Assy
20	R-801711A	Wheel Retainer	104A	R-608153	Nut, nozzle adjust screw
21	R-028574	Rear Fork & Shaft Assembly	105	R-672260	Belt
22	R-080126	Rear Bearing Assy	106	R-360753	Screw, side connections plate
	R-068007	Motor Plate & Armature Assy	107	R-183749	Side Connections Plate
24	R-175053	Washer, oil slinger	108	R-259762	Wire Connector, blue
25	R-680001	Armature, 120v	109	R-692270	Nozzle Guard
	NLA	Motor Plate & Bearing Assy	110	R-673273	Brush Roll Assembly
27	R-880046	Tolerance Ring	119	R-080169	Adjust-O-Rite Plate
28	R-880026	Ball Bearing	120	R-770040	Bag Assy, shakeout, 360
29	R-884003	Motor Plate	121	NLA	Bag Assy, zipper, 360Z
30	R-871101	Motor Housing	122	R-66247	Paper Bag
31	R-006318	Lockwasher	123	R-880262	Belt Lifter
32	NLA	Screw, ground lead	124	R-110773	Insert, motor housing
33	R-0611268	Nozzle Assembly			
36	NLA	Clamp, bumper			
38	NLA	Bumper			
40	R-101161	Fancase Assembly			
42	R-611101	Axle Stud			
	R-067030	Handle & Cord Assembly, 50ft			
45	R-230324	Grommet			
46	R-003311	Washer			
47	R-023311	Lockwasher			
48	R-880707	Screw, switch plate			
49	R-801710	Wingnut, small			
50	NLA	Screw, adaptor clamp			
	R-060831	Switch & Cord Assembly, 50 ft			
52	NLA	Cord & Plug Assembly, 50 ft			
54	R-259761	Wire Connector, grey			
56	NLA	Cord Protecting Sleeve			
57	NLA	Short Cord & Lug Assembly			
59	R-611305	Strain Relief, switch plate			
60	R-880304	Strain Relief, handle			
61	R-060837	Switch & Plate Assembly			