



## □ ELECTRICAL PARTS

1-1	S-017	Motor Assembly
1-2	S-091	Carbon Brush
1-3	S-092	Cord, 14TXC
1-3	S-093	Cord, 12TXC
1-4	S-094	Lead Wires, motor
1-5	S-095	Power Control Assy, 14TXC
1-6	S-096	Triac Assembly, 14TXC
1-7	S-029	Switch, on/off, 14TXC
1-8	S-030	Main Switch, 12TXC
1-9	S-097	Fuse
1-10	S-098	Holder, fuse

## □ MECHANICAL PARTS

2-1	S-099	Switch Rod, 14TXC
2-2	S-100	Knob Spring, switch, 14TXC
2-3	S-101	Dust Indicator Assembly, 14TXC
2-5	NLA	Meter Pipe Connector, 14TXC
2-6	S-104	Handle Fixing Plate
2-7	S-105	Actuator, 14TXC
2-8	S-106	Indicating Plate, 14TXC
2-9	S-107	Panel Seal
2-10	S-108	Body Seal
2-11	S-109	Motor Cover Seal
2-12	S-110	Air Valve Assy
2-13	S-084	Secondary Filter
2-14	S-111	Clamp Spring
2-15	S-112	Vibration-proof Rubber
2-16	S-113	Vibration-proof Fixing Rubber
2-17	S-114	Sound Proof Sponge
2-18	S-115	Shaft, wheel
2-19	S-116	Leg Assembly, TA
2-20	S-117	Leg Assembly, TB
2-21	S-036	Clean Filter
2-22	S-118	Body Support
2-23	S-119	Belt Stopper
2-24	S-120	Belt Stopper 3, 12TXC
2-25	S-121	Belt Vibration-proof Rubber, 12TXC
2-26	S-123	Belt Guide Pin, 12TXC
2-28	S-125	Fixing Screw, bottom plate, 14TXC
2-29	S-126	Belt Change Lever Support, 14TXC
2-30	S-127	Belt Change Plate, 14TXC
2-31	S-128	Belt Change Shaft, 14TXC
2-32	S-129	Belt Change Spring, 14TXC
2-33	S-130	Pedal Support, L
2-34	S-131	Pedal Spring
2-35	S-132	Pedal Shaft
2-36	S-001	Brush Roll, complete, 14TXC
2-37	S-133	Agitator Pipe Assy
2-38	S-134	Idling Pulley Assy, 14TXC
2-39	S-135	Agitator Shaft Assy, 14TXC
2-40	S-136	Agitator Support A Assembly, 14TXC
2-41	S-137	Agitator Support B Assembly, 14TXC
2-42	S-138	Main Pulley, 14TXC
2-43	S-139	Brush Rotor A, 14TXC
2-44	S-140	Brush Rotor B, 14 TXC
2-45	S-002	Brush Roll, complete, 12TXC
2-46	S-141	Agitator Shaft, 12TXC
2-47	S-142	Agitator Support A, 12TXC
2-48	S-143	Agitator Support B, 12TXC
2-49	S-144	Main Pulley, 12TXC
2-50	S-145	Brush Rotor B, 12TXC
2-51	S-146	Brush Base Assembly
2-52	S-147	Agitator Shaft Cap, 14TXC

2-53	S-148	Bottom Plate Spring
2-54	S-149	Roller Shaft
2-55	S-150	Seal Tape A, 14TXC
2-56	S-151	Seal Tape B
2-58	S-013	Flat Belt M
2-59	S-154	Body Seal Tape S
2-60	S-155	Body Seal Tape L
2-61	S-156	Body Seal Tape S1
2-62	S-157	Body Seal Tape L1
2-63	S-158	Seal Tape G, 12TXC
2-64	S-159	Seal Tape E, 12TXC
2-65	S-160	Seal Tape F
2-67	S-162	Belt Guide Plate, 12TXC

## □ EXTERNAL PARTS

3-1	S-163	Grip, right
3-2	S-164	Grip, left
3-3	S-165	Knob, main switch
3-4	S-166	Hanger C
3-5	S-167	Handle Pipe
3-6	S-168	Body Cap
3-7	S-169	Main Body, 14TXC
3-7	S-170	Main Body, 12TXC
3-8	S-171	Panel, 14TXC
3-8	S-172	Panel, 12TXC
3-9	S-173	Slide Knob, 14TXC
3-10	S-174	Dust Cover
3-11	S-175	Clamp Knob
3-12	S-176	Hose
3-13	S-177	Hose Elbow
3-14	S-178	Wheel
3-15	S-179	Motor Cover
3-16	S-180	Nozzle Head L Assembly, 14TXC
3-17	S-182	Lens, 14TXC
3-17	S-183	Lens, 12TXC
3-18	S-184	Pedal L
3-19	S-185	Belt Change Lever, 14TXC
3-20	S-186	Belt Cover L, 14TXC
3-20	S-187	Belt Cover M, 12TXC
3-21	S-027	Bottom Plate L, 14TXC
3-21	S-028	Bottom Plate M, 12TXC
3-22	S-188	Knob, bottom plate, 14TXC
3-23	S-189	Roller
3-24	S-190	Pulley Cover, 14TXC
3-25	S-191	Head Shelter Plate, 12TXC

## □ MISCELLANEOUS

4-5	S-192	Name Plate, 14TXC
4-5	S-193	Name Plate, 12TXC
4-6	S-194	Dust Bag

## □ SCREWS, NUTS & WASHERS

5-1	S-195	Special Screw, handle fixing
5-2	S-196	Washer, 4mm x .8mm
5-3	S-197	Washer, wheel shaft
5-4	S-198	Wave Washer, 14TXC
5-5	S-199	Special Nut, left hand screw type
5-6	S-200	Nut, 6mm x 5.2mm
5-7	S-201	Speed Nut
5-8,16,12	S-202	Screw, 4mm x 16mm
5-9,11	S-203	Screw, 4mm x 20mm
5-10,13	S-204	Screw, 4mm x 12mm
5-14	S-205	E-Crip, 5mm x .6mm
5-15	S-206	E-Crip, 4mm x .6mm