



Models: EC-6312P

Index	Part No.	Description
Electrical Parts		
1-1	S-1300	Switch
1-2	S-1301	Potentionmeter
1-3	S-1302	Vacuum motor (motor)
1-4	S-1303	Fuse (current fuse)
Mechanical Parts		
2-1	S-1304	Cord reel
2-2	NLA	Spring for switch button
2-3	S-1305	Switch button (on/off switch button)
2-4	S-1306	Front filter
2-5	NLA	Cover for air outlet
2-6	NLA	Spring for air outlet cover
2-7	NLA	Lock block for air outlet cover
2-8	S-1307	Timing know (rotary knob)
2-9	S-1308	Button for reel (cord rewind button)
2-10	NLA	Cover for potentiometer
2-11	NLA	Spring for reel button
2-12	NLA	Plate for motor
2-13	NLA	PCB plate (power control PWB)
2-14	NLA	Fixation adjustment
2-15	S-1309	Distance adjustment
2-16	NLA	Seal for vacuum motor
2-17	NLA	Seal for rear cover
2-18	NLA	Pillow for motor
2-19	NLA	Panel big wheel (wheel cover)
2-20	S-1310	Big wheel (wheel)
2-21	S-1311	Wheel small (caster roller)
2-22	S-1312	Cover for handle
2-23	NLA	Seal for dust box
2-24	S-1322	Paper bag
2-25	S-1313	Floor filter
2-26	NLA	Spring for big support
2-27	NLA	Bag support (bag fixing plate)
2-28	NLA	Front filter support
2-29	NLA	Seal for suction
2-30	NLA	Lock block (case cover release button)
2-31	NLA	Pedestal for suction
2-32	NLA	Spring for lock block
2-33	NLA	Gasket for p/suction
2-34	S-1314	Indicator (dust indicator)
Mechanical Parts		
3-1	S-1315	Cover for dust box (case cover)
3-2	NLA	Rear cover (upper body)
3-3	S-1316	Base body (lower body)
3-4	S-1317	Floor brush (floor nozzle)
3-5	S-1318	Hose (suction hose)
3-6	S-1319	Extension pipe (telescopic pipe)
3-7	S-1320	Crevice tool
3-8	S-1321	Dusting brush (soft brush)
3-9	NLA	Window indicator