


Models: 7330, 8330, 8430, 8530

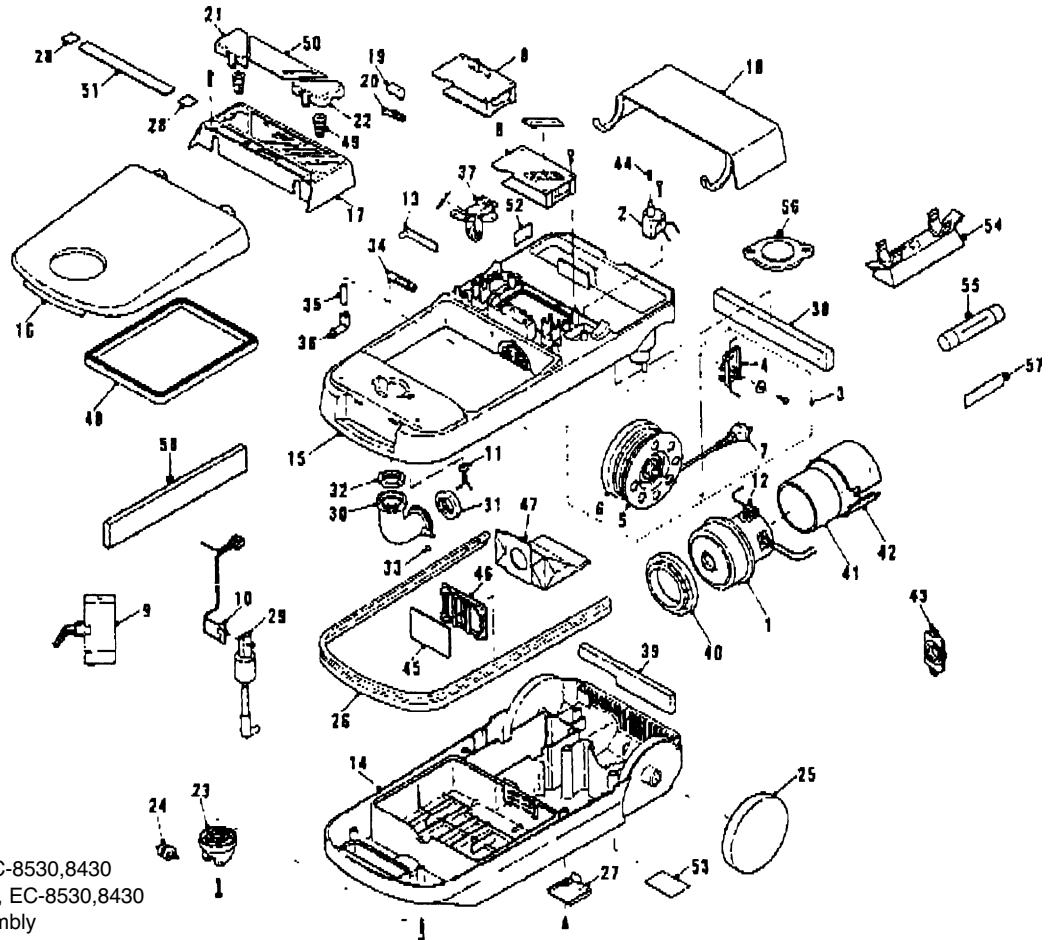

- 1 S-015 Motor assembly, EC-8530,8430
- 3 S-069 Cord reel assembly, EC-8530,8430
- 4 S-1450 Contact table assembly
- 14 S-1451 Lower body, EC-8430, 7330
- S-1452 Lower body, EC-8530, 8330
- 15 S-1453 Upper body, EC-8530, 8430
- S-1454 Upper body, EC-7330
- 21 S-1456 Reel pedal, EC-8330
- 25 S-076 Wheel
- 26 S-1457 Bumper
- 27 S-1458 Cord stopper, EC-8430, 7330
- 28 S-1459 Cap of screw, EC-8530
- S-1460 Cap of screw, EC-8430, 7330
- S-1461 Cap of screw, EC-8330
- 29 S-1462 Power control sensor assembly, EC-8530
- 30 S-1463 Connector pipe
- 40 S-1464 Vibration proof rubber
- 41 S-1465 Sound-proof tube
- 42 S-1466 Sound-proof felt
- 43 S-1467 Fixing rubber
- 49 S-1468 Spring of pedal
- 50 S-1469 Decoration plate, EC-8530
- S-1470 Decoration plate, EC-8330
- S-1471 Decoration plate, EC-7330
- 51 S-1472 Meter label, EC-8530
- S-1473 Meter label, EC-8330
- 54 S-1474 Fuse holder, EC-8530, 8430, 8330
- 55 S-910 Fuse, EC-8530, 8430, 8330
- 58 S-1475 Code label, EC-8530
- 174 S-1490 Round brush
- 176 S-1491 Upholstery tool

