



Index	Part No.	Description
<b>Electrical Parts</b>		
1-1	S-1224	Motor assembly
1-2	S-1903	Power cord assembly
1-3	S-557	Fuse
1-4	S-1836	Fuse holder
1-5	S-1837	On/off switch
1-6	S-1523	Thermostat
1-7	S-1838	Lead wire (thermostat)
1-8	S-1839	Lead wire (on/off switch)
<b>Mechanical Parts</b>		
2-1	S-1840	Agitator 1st assembly
2-2	S-1707	BC support assembly
2-3	S-1725	Hose assembly
2-4	S-1654	Bin packing
2-5	S-1706	Idler pulley assembly
2-6	S-1902	Agitator rotor 2nd assembly
2-7	S-1896	Agitator shaft assembly
2-8	S-1758	Agitator support 15 assembly
2-9	S-1647	Wheel
2-10	S-1904	Duct body
2-11	S-1649	Leg cover
2-12	S-1293	Bottom pad
2-13	S-1648	Motor shelter plate
2-14	S-1905	Body support
2-15	S-1659	Handle support
2-16	S-1712	Belt stopper
2-17	S-1860	Cord hold
2-18	S-1848	BC lever
2-19	S-1666	Net filter
2-20	S-1849	BC plate
2-21	S-1851	Head lock hook
2-22	S-1925	BC hook
2-23	S-213	Hanger spring
2-24	S-1852	Lid clamp spring
2-25	S-1853	Hhead lock spring
2-26	S-1854	Switch spring
2-27	S-1926	BC plate spring
2-28	S-1855	Clamp spring
2-29	S-1858	BC lever spring
2-30	S-702	Flat belt
2-31	S-1715	Roller
2-32	S-1375	Brush rotor B15
2-33	S-115	Wheel shaft
2-34	S-1861	BC lever shaft
2-35	S-1716	Roller shaft
2-36	NLA	Cord bushing
2-37	S-1863	Main duct
2-38	S-1663	Main filter
2-39	S-1652	Clean filter
2-40	S-646	Vibration proof fix rubber
2-41	S-569	Vibration proof rubber
2-42	S-1653	Lower hanger
2-43	S-1865	Nozzle holder
2-44	S-1656	Top hanger
2-45	S-1526	Sound proof sponge
2-46	S-1665	Lid packing
2-47	S-1668	Filter box packing
2-48	S-1653	Body packing
2-49	S-1786	M/shelter packing

Index	Part No.	Description
2-50	S-1866	Flame retardant cap
2-51	S-1867	Filter case seal
2-52	S-1898	Lens seal tape
2-53	S-1899	B/P seal tape
2-54	S-1868	Shelter seal tape
2-55	S-1900	H/L fixing plate
2-56	NLA	Pedal link support
<b>External Parts</b>		
3-1	S-534	Nozzle head
3-2	S-1906	Main body
3-3	S-1907	Filter box
3-4	S-1908	Filter box lid
3-5	S-1909	Switch cover
3-6	S-1910	Motor cover F
3-7	S-1911	Motor cover R
3-8	S-1876	Bumper 12
3-9	S-1912	Bin handle
3-10	S-1913	Handle
3-11	S-1879	Dust bin
3-12	S-1914	Panel
3-13	S-1723	Ft switch button
3-14	S-1918	Lid clamp
3-15	S-1919	Bin clamp
3-16	S-1882	Bottom plate
3-17	S-1883	Guide disk
3-18	S-1915	H/reinforcing plate
3-19	S-1745	Brush base
3-20	S-1916	Handle cap
3-21	S-1917	Filter case
3-22	S-1887	Lens
3-23	S-1746	Out-exten pipe
3-24	S-1747	In-exten pipe
3-25	S-1888	Nozzle pipe
3-26	S-1889	Upholstery nozzle
3-27	S-1748	Crevice tool
<b>Screws, Nuts and Washers</b>		
4-1	S-1751	Handle, fixing screw
4-2	S-199	Left-hand nut (M6)
4-3	S-1329	Wheel washer
4-4	S-1703	Agitator washer
4-5	S-1891	Hanger washer
4-6	S-1892	Machine screw
4-7	S-200	Nut
4-8	S-1394	Stop ring
4-9	S-643	E-ring
4-10	S-1244	Screw
4-11	S-1894	Screw
4-12	S-204	Screw
4-13	S-1692	Screw
4-14	NLA	Screw
<b>Screws, Nuts and Washers</b>		
5-1	NLA	Operations manual
5-2	NLA	Fuse label
5-3	NLA	Body caution label
5-4	NLA	carrying handle label
5-5	NLA	head label 12
5-6	NLA	Name plate