



Index	Part No.	Description
Electrical Parts		
1-1	S-1224	Motor assembly
1-2	S-1643	Power cord assembly
1-3	S-557	Fuse
1-4	S-1836	Fuse holder
1-5	S-1837	On/off switch
1-6	S-1523	Thermostat
1-7	S-1838	Lead wire (thermostat)
1-8	S-1839	Lead wire (on/off switch)

Index	Part No.	Description
1-9	S-1496	Lamp
1-10	NLA	Lamp socket
Mechanical Parts		
2-1	NLA	Agitator 1st assembly
2-2	S-1707	BC support assembly
2-3	S-1650	Filter unit assembly
2-4	S-1725	Hose assembly
2-5	S-1654	Bin packing

Models: EC-S2370

Index	Part No.	Description
2-6	S-1706	Idler pulley assembly
2-7	S-1902	Agitator rotor 2nd assembly
2-8	S-1896	Agitator shaft assembly
2-9	S-1758	Agitator support 15 assembly
2-10	S-1646	Air valve assembly
2-11	S-1647	Wheel
2-12	S-1708	Bfm body
2-13	S-1709	Bfm cover
2-14	S-1649	Leg cover
2-15	S-1841	Bottom pad
2-16	S-1842	Main duct cover
2-17	S-1648	Motor shelter plate
2-18	S-1843	Body support
2-19	S-1659	Handle support
2-20	S-1712	Belt stopper 3
2-21	S-1844	Link bar assembly
2-22	S-1845	Pedal link assembly
2-23	S-1846	Link plate 2
2-24	S-1847	Bfm support
2-25	NLA	Spacer
2-26	S-1394	Stop ring
2-27	S-1713	Link bar washer
2-28	S-1848	Bc lever
2-29	S-1666	net filter
2-30	S-1849	Bc plate
2-31	S-1850	B/C arm 12
2-32	S-1857	Head lock hook
2-33	NLA	Bc hook
2-34	S-213	Hanger spring
2-35	S-1852	Lid clamp spring
2-36	S-1853	Head lock spring
2-37	S-1854	Switch spring
2-38	S-1855	BC plate spring
2-39	S-1856	Clamp spring
2-40	S-1857	Bfm spring
2-41	S-1858	Link spring
2-42	S-1858	Bc lever spring
2-43	S-1859	Link spring
2-44	S-1715	Roller
2-45	S-1375	Brush rotor B15
2-46	S-115	Wheel shaft
2-47	S-1860	Cord hold
2-48	S-1861	Bc lever shaft
2-49	S-1716	Roller shaft
2-50	S-1862	Pedal shaft
2-51	S-1863	Main duct
2-52	S-1663	Main filter
2-53	S-1652	Clean filter
2-54	S-646	Vibration proof fix rubber
2-55	S-1864	Vibration proof rubber
2-56	S-1657	Lower hanger
2-57	S-1865	Nozzle holder
2-58	S-1656	Top hanger
2-59	S-1526	Sound proof sponge
2-60	S-1665	Lid packing
2-61	S-1668	Filter box packing
2-62	S-1653	Body packing
2-63	S-1898	Lens seal tape
2-64	S-1866	Flame retardant cap
2-65	NLA	Bfm valve seal
2-66	S-1867	Filter case seal
2-67	NLA	Pedal link support
2-68	NLA	Duct cover seal
2-69	S-1929	Bfm seal tape

Index	Part No.	Description
2-70	S-1897	Bfm valve 12
2-71	NLA	Seal tape T
2-72	S-1899	B/P seal tape
2-73	S-1868	Shelter seal tape
2-74	S-1900	H/L fixing plate

External Parts

3-1	S-1869	Nozzle head
3-2	S-1870	Main body
3-3	S-1732	Filter box
3-4	S-1871	Filter box lid
3-5	S-1872	Switch cover
3-6	S-1873	Motor cover F
3-7	S-1874	Head cover 12
3-8	S-1875	Motor cover R
3-9	S-1876	Bumper 12
3-10	S-1877	Bin handle
3-11	S-1878	Handle
3-12	S-1879	Dust bin
3-13	S-1880	Panel
3-14	S-1723	Ft switch button
3-15	NLA	Pedal 12
3-16	S-1664	Lid clamp
3-17	S-1667	Bin clamp
3-18	S-1882	Bottom plate
3-19	S-1883	Guide disk
3-20	S-1884	H/reinforcing plate
3-21	S-1079	Brush base
3-22	S-1885	Handle cap
3-23	S-1886	Filter case
3-24	S-1887	Lens
3-25	S-1746	Out-exten pipe
3-26	S-1747	In-exten pipe
3-27	S-1888	Nozzle pipe
3-28	S-1889	Upholstery nozzle
3-29	S-1748	Crevice tool

Screws, Nuts and Washers

4-1	S-1751	Handle, fixing screw
4-2	S-1898	BC arm screw
4-3	S-199	Left-hand nut (M6)
4-4	S-1329	Wheel washer
4-5	S-1703	Agitator washer
4-6	S-1891	Hanger washer
4-7	S-1892	Machine screw
4-8	NLA	Screw
4-9	S-200	Nut
4-10	S-238	Ring
4-11	S-643	E-ring
4-12	S-1893	Washer
4-13	S-196	Washer
4-14	S-1244	Screw
4-15	S-1894	Screw
4-16	S-204	Screw
4-17	S-1692	Screw
4-18	S-1581	Screw
4-19	S-1895	Screw
4-20	NLA	Screw