

EUREKA UPRIGHTS


5100 Series

LOWER CASTING ASSEMBLY

Self-Propelled

Models: 5187AT/1, 5190AT, 5191AT/AT1/AT2, 5193AT/AT1, 5194ATS, 5195AT, 5196AT

- 1..... E-28288119NHose Cuff
- 1..... E-27468D119NHose Cuff, 5190AT,5193AT/AT1,5194ATS, 5195AT
- 1..... E-28288B119NHose Cuff, 5191AT2
- 2..... E-27462B288NHeight Adjustment Knob
- 2..... E-27462C288NHeight Adjustment Knob, 5187AT1, 5191AT1/AT2,5194ATS
- 2..... E-27462E288NHeight Adjustment Knob, 5195AT,5196AT
- 3..... E-546692Screw, 10 pk
- 3..... E-5323844Screw, 10 pk, 5195AT
- 4..... E-607004Hood & Graphics Assy
- 4..... E-607005Hood & Graphics Assy, 5190AT
- 4..... N/AHood & Graphics Assy, 5193AT
- 4..... E-6070011Hood & Graphics Assy, 5193AT1
- 4..... E-6070010Hood & Graphics Assy, 5194ATS
- 4..... E-6070013Hood & Graphics Assy, 5195AT
- 4..... E-6070014Hood & Graphics Assy, 5196AT
- 5..... E-59586Hood Gasket
- 6..... E-546692Screw, 10 pk
- 7..... E-39047119NDrive Motor Cover
- 8..... E-281021Rectifier & Switch Assy
- 8..... E-281024Rectifier & Switch Assy, 5191AT2, 5193AT1,5195AT,5196AT
- E-609821PCB
- 9..... E-531971Screw, 10 pk
- 9..... E-53193Screw, 10 pk, 5187AT1,5196AT
- 10..... E-39034Yoke Seal
- 11..... E-60757BTransmission Assembly
- 12..... E-607561Retaining Ring
- 13..... E-60758Drive Motor
- 13..... E-607582Drive Motor, 5195AT,5196AT
- 14..... E-59587Motor Spacing Shield
- 15..... E-5323838Screw, 10 pk
- 15..... E-532571Screw, 10 pk, 5187AT1
- 15..... E-532571Screw, 6 pk
- 16..... E-607603Base Assembly
- 16..... E-607592Base Assembly, 5195AT
- 17..... E-585062Gasket
- 18..... E-54943Spring, 10 pk
- 19..... E-14993B119NWheel Carriage
- 19..... E-14993C119NWheel Carriage, 5191AT2, 5193AT1,5195AT,5196AT
- 20..... E-582061Wheel Axle
- 20..... E-71551Wheel Axle, 5195AT,5196AT
- 21..... E-39173119NFront Wheel
- 21..... E-39173A119NFront Wheel, 5193AT1,5195AT, 5196AT
- 22..... E-613082Brush Roll Assy
- 22..... E-602533Brush Roll Assy, 5193AT
- 23..... E-15234288NFurniture Guard, 5187AT, 5191AT2,5194ATS
- 23..... E-15591288NFurniture Guard, 5187AT1,5190AT, 5191AT/AT1,5193AT/AT1,5195AT
- 23..... E-15591A288NFurniture Guard, 5196AT
- 24..... E-531971Screw, 10 pk
- 25..... E-384794Hose
- 26..... E-27467A288NHandle Release
- 27..... E-60133Compression Spring, 5pk
- 28..... E-543762Belt Cap Assy
- 29..... E-57569Gasket
- 29..... E-70524Gasket, 5187AT1,5193AT,5194ATS
- 30..... E-531971Screw, 10 pk
- 31..... E-607611Cable Flag Screw, 5 pk
- 32..... E-59552Cable Gasket
- 33..... E-57569Gasket
- 33..... E-70524Gasket, 5193AT,5194ATS
- 34..... E-27794119NRear Wheel
- 35..... E-58814Rear Axle
- 36..... E-54312ABelt, 2 pk

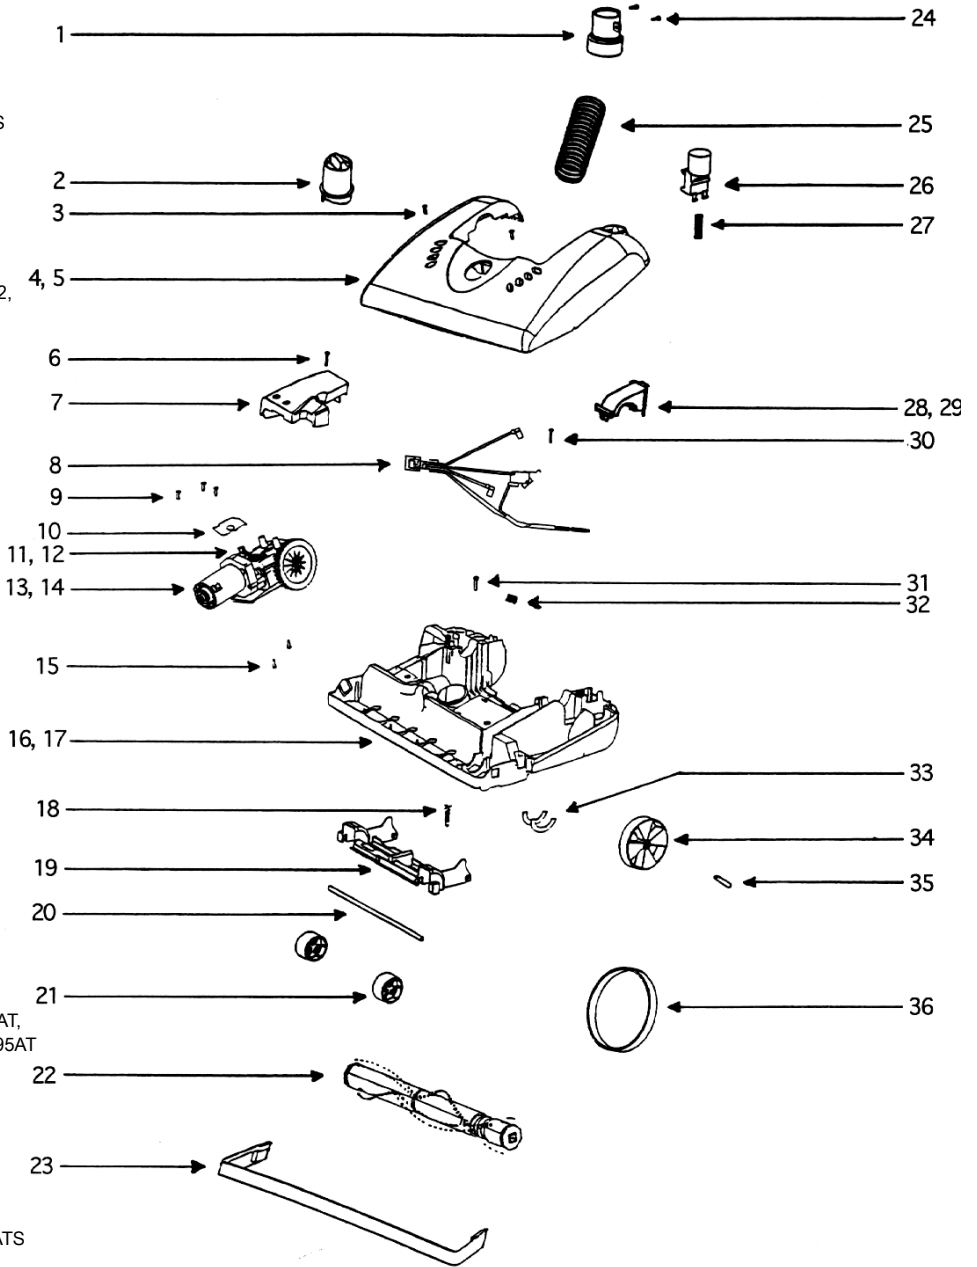

- 36..... E-38441Belt, each
- 36..... E-39266Belt, each (long life)
- 36..... E-61120Belt, 2pk (long life)
- E-384794Compression Hose, 5191AT2
- E-70353Cable Seal, 5193AT1,5195AT


EUREKA UPRIGHTS

5100 Series

UPPER CASTING ASSEMBLY

Self-Propelled

Models: 5187AT/AT1, 5190AT, 5191AT/AT1/AT2, 5193AT/AT1, 5194ATS, 5195AT, 5196AT

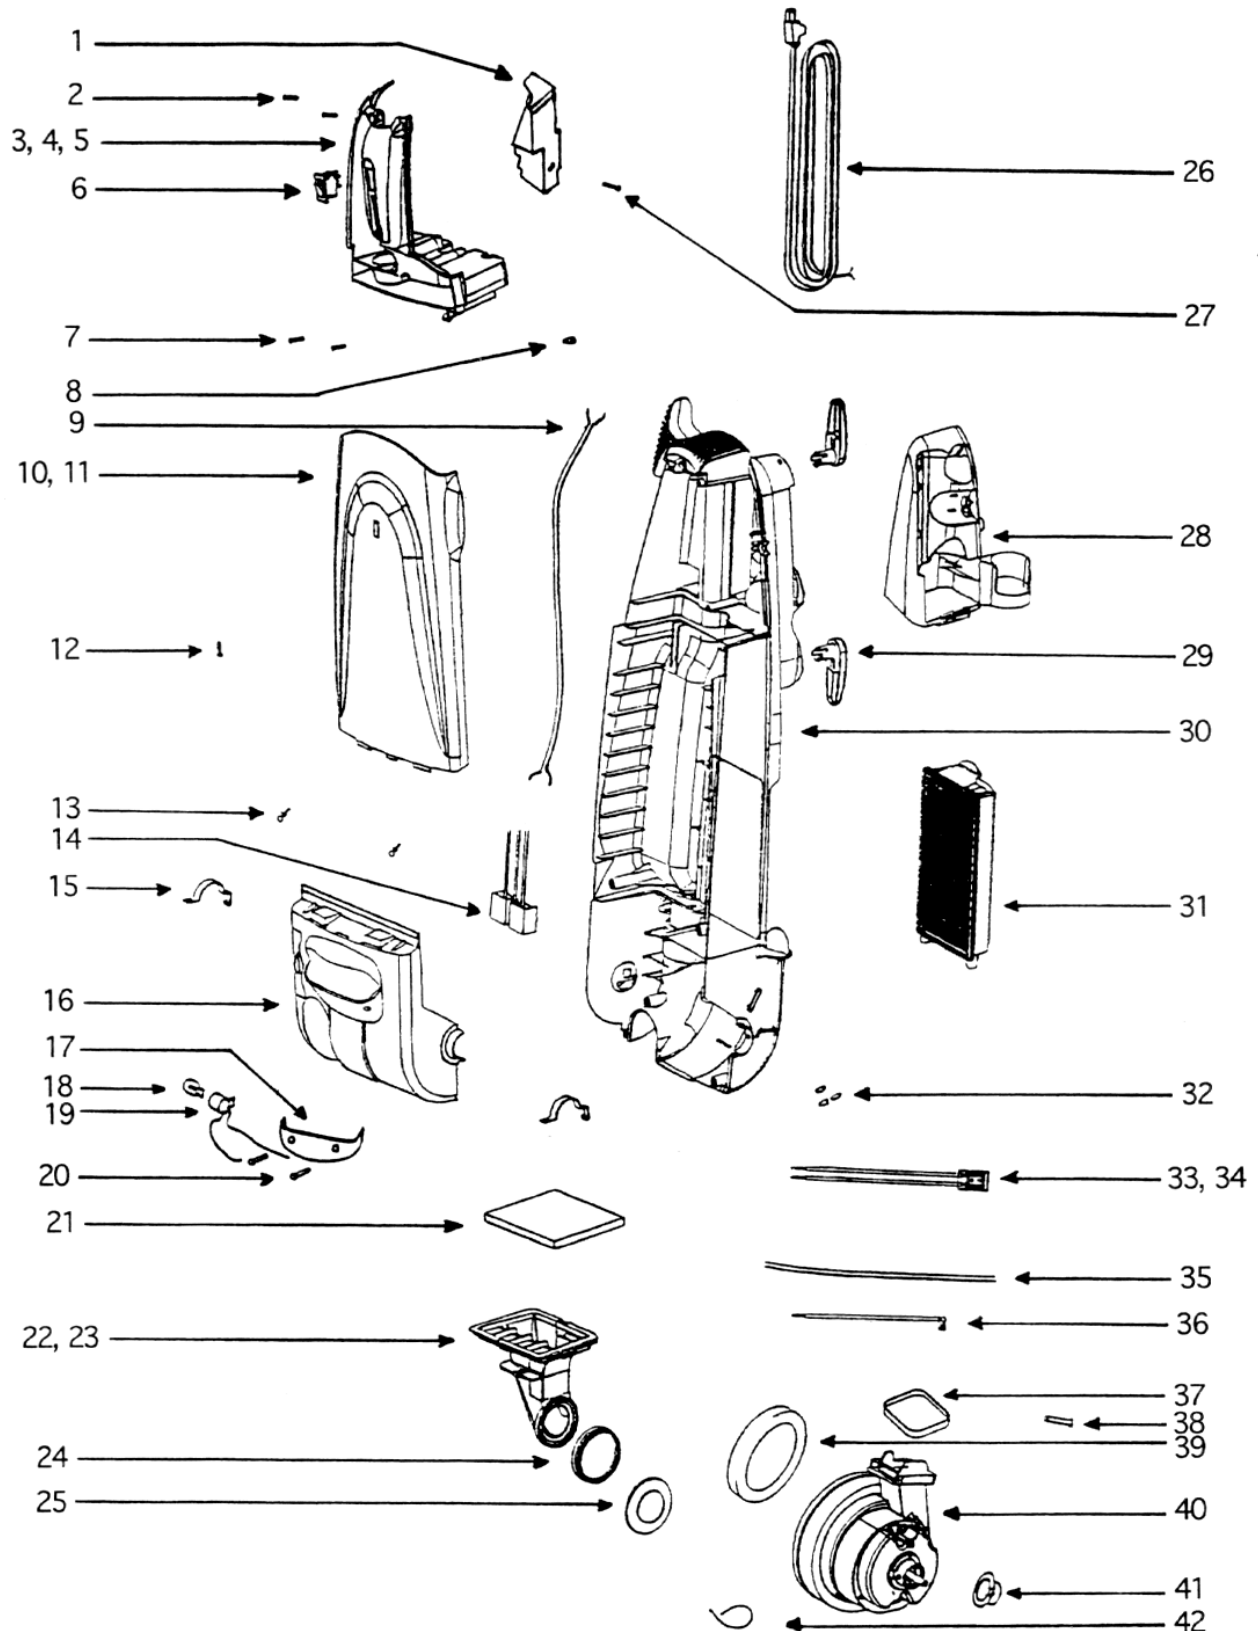

EUREKA UPRIGHTS

5100 Series

UPPER CASTING ASSEMBLY

Self-Propelled

Models: 5187AT/AT1, 5190AT, 5191AT/AT1/AT2, 5193AT/AT1, 5194ATS, 5195AT, 5196AT

1.....E-39033119NWire Shield
2.....E-531971.....Screw, 10 pk
3.....E-609741.....Front Cover
4.....E-595421.....Gasket, front cover
5.....E-39035.....Nameplate
6.....E-28073ARocker Switch
7.....E-531971.....Screw, 10 pk
8.....E-601921.....Wire Splice, 5 pk
9.....E-28011.....Upper Cord Assembly
10.....E-606808.....Bag Cover Assembly
10.....E-606804.....Bag Cover Assembly, 5187AT1
11.....E-59331SV.....Gasket, bag cover
12.....E-532381.....Screw, 10 pk
13.....E-531971.....Screw, 10 pk
14.....E-609822.....PCB & Bracket Assy
14.....E-609821.....PCB & Bracket Assy, 5187AT1
15.....E-384202.....Clamp
16.....E-609731.....Motor Cover Assembly
16.....E-609736.....Motor Cover Assembly, 5187AT1
16.....E-5493722.....Motor Cover Assembly, 5190AT
16.....N/AMotor Cover Assembly, 5191AT1
16.....N/AMotor Cover Assembly, 5191AT2
16.....E-5493740.....Motor Cover Assembly, 5193AT
16.....E-615511.....Motor Cover Assembly, 5193AT1
16.....E-5493720.....Motor Cover Assembly, 5194ATS
16.....E-615512.....Motor Cover Assembly, 5195AT
16.....E-6143110.....Motor Cover Assembly, 5196AT
17.....E-15072313N.....Lens
E-39248B313N.....Lens, dirt alert, 5196AT
18.....E-48815.....Headlight
E-70355.....Light Shield, 5191AT/AT2,5196AT
19.....E-38611.....Headlight Socket Assembly
19.....E-386861.....Headlight Socket Assembly, 5190AT,
5193AT/AT1,5194ATS,5195AT
19.....E-386111.....Headlight Socket Assembly, 5191AT2,5196AT
20.....E-600682.....Screw, 10 pk
21.....E-39334.....Secondary Filter
22.....E-15408B119N.....Air Duct Assembly
E-28425.....Air Duct Grille
23.....E-59297SV.....Gasket, air duct
24.....E-27171AGasket
25.....E-39023.....Flange, motor intake
26.....E-3868012.....Cord
27.....E-531971.....Screw, 10 pk
28.....E-02283119NInsert, tool caddy
29.....E-28013119NCord Release
30.....E-02282B119N.....Rear Housing
30.....E-15660833.....Rear Housing, 5187AT1
30.....E-02282C119N.....Rear Housing, 5191AT1/AT2,5193AT/AT1,
5194ATS
30.....E-02282D119N.....Rear Housing, 5195AT
30.....E-15660.....Rear Housing, 5196AT
31.....E-60285.....HEPA Filter
32.....E-601921.....Wire Nut, 5 pk
33.....E-59213.....Thermal Cut-Off
34.....E-60613.....Push On Nut
35.....E-59362BTube
36.....E-598472.....Lead & Terminal Assembly, 5187AT/AT1,
5191AT2
36.....E-598471.....Lead & Terminal Assembly, 5191AT/AT2,

5196AT
36.....E-594082.....Lead & Terminal Assembly, white, 5190AT,
5193AT/AT1,5194ATS,5195AT
36.....E-594081.....Lead & Terminal Assembly, black, 5190AT,
5193AT/AT1,5194ATS,5195AT
37.....E-59137.....Gasket, motor exhaust
38.....E-59361AAdapter Tube
39.....E-59319.....Support Gasket
40.....E-606254.....Motor Assembly, HEPA
41.....E-27552BGrommet
42.....E-467135.....Cable Tie
E-61333.....Motor Filter, 5193AT1,5195AT,5196AT

HANDLE GRIP & ACCESSORIES

E-391012.....Handle Grip
E-39430A1Handle Grip, 5195AT,5196AT
N/A.....Handle Assembly, complete
E-156162SVHandle Assembly, complete, 5191AT2,5193AT/AT1
E-286101.....Handle Assembly, complete, 5195AT,5196AT
E-156141.....Handle Tube, upper
E-1561412.....Handle Tube, upper, 5195AT,5196AT
E-156151.....Handle Tube, lower
E-1561512.....Handle Tube, lower, 5195AT,5196AT
E-39272.....Cable Assembly
E-39394.....Cable Assembly, 5195AT,5196AT
E-59993.....Cable Protector
E-601697.....Hose Assembly
E-612271.....Hose Assembly, 5191AT2,5193AT/AT1,
5194ATS,5195AT,5196AT
E-37057A3Hose Coupling
E-28051A119NHose Adaptor
E-368901.....Neutral Lock
E-53175.....Spring, 10 pk
NLA.....Spacer Spring, 5 pk
E-13337A10Handle Grip, lower
E-15460A119NHandle Grip, lower, 5195AT,5196AT
E-532384.....Screw, 10 pk
E-58728BNesting Wand Assembly
E-26708119N.....Crevice Tool
E-545053.....Dusting Brush
E-382843.....Upholstery Nozzle
E-600386.....Stair Hose, 5194AT2
E-600387.....Stair Hose, 5196AT
E-391346.....Deluxe Floor Nozzle, 5191AT2
E-58623.....Paper Bag, type AA, 3 pk
E-39152A168N....Hook Plate, 5191AT2,5193AT,5194ATS
E-39152A333N....Hook Plate, 5193AT1,5195AT,5196AT
E-392312.....Hose Strap
E-59991A.....Hardware Package

PHONE: 1-800-822-7467 FAX: 847-647-0534 E-MAIL: sales@hescoinc.com WEB: hescoinc.com