


Models: MC-V5007, MC-V5027, MC-V5107, MC-V5117


Body Assembly

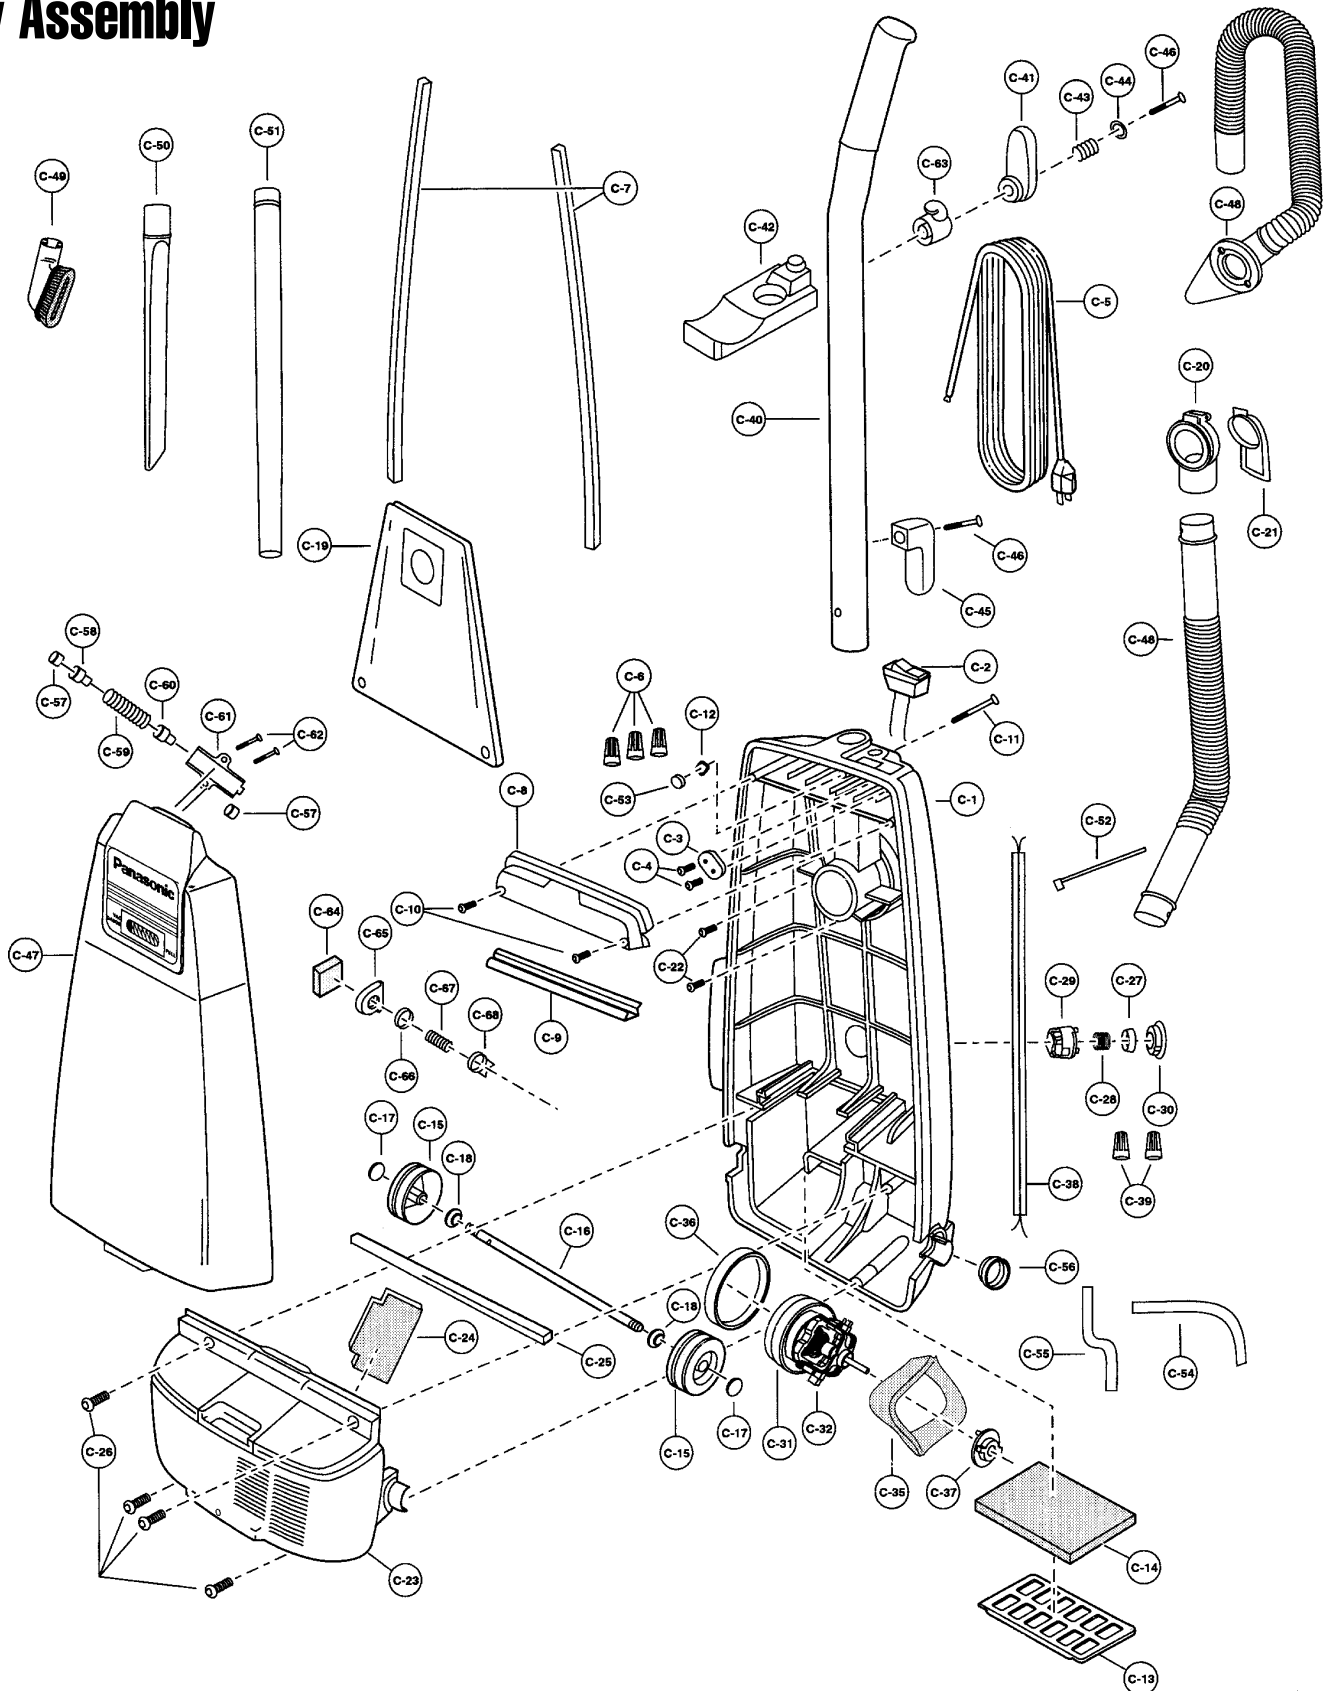

Models: MC-V5007, MC-V5027, MC-V5107, MC-V5117

- | | |
|---|--|
| 1 P-5493 Dust Compartment, V5007 | 34 .. P-0037 Screw, brush |
| 1 P-10869 Dust Compartment, V5027 | 35 .. P-9931 Noise Suppressor |
| 1 P-8826 Dust Compartment,
V5107, V5117 | 35 .. P-99300 Noise Suppressor, V5107 |
| 2 P-8913 On/Off Switch | 35 .. P-10670 Noise Suppressor, V5027 |
| 3 P-10870 Cord Stopper | 36 .. P-0293 Motor Support Rubber, front |
| 4 P-6140 Screw, cord stopper | 37 .. P-10338 Motor Support Rubber, rear |
| 5 P-0697 Power Cord | 38 .. P-37020 Wire Cord |
| 5 P-10507 Power Cord, V5027 | 38 .. P-3820 Wire Cord, V5107 |
| 6 P-000623 Wire Connector | 39 .. P-000623 Wire Connector |
| 7 P-660106 Packing, dust container | 40 .. P-6412 Handle |
| 7 P-10871 Packing, dust container,
V5027 | 40 .. P-9835 Handle, V5027 |
| 7 P-66106 Packing, dust container,
V5107 | 40 .. P-50106 Grip, handle, V5107 |
| 8 P-30606 Switch Cover | 41 .. P-9836 Upper Cord Storage Hook |
| 8 P-10872 Switch Cover, V5027 | 42 .. P-9837 Hose Holder |
| 8 N/A Switch Cover, V5107 | 43 .. P-7670 Spring, cord hook |
| 9 P-73006 Packing, switch cover | 44 .. P-587 Washer, cord storage hook |
| 9 P-7306 Packing, switch cover, V5107 | 45 .. P-9838 Lower Cord Storage Hook |
| 10 .. P-6140 Screw, switch cover | 46 .. P-43096 Screw, cord storage hook |
| 11 .. P-7301 Screw, handle | 47 .. P-5921 Dust Cover, V5007 |
| 12 .. P-2117 Nut, handle screw | 47 .. P-10875 Dust Cover, V5027 |
| 13 .. P-3200 Filter Supporter | 47 .. P-6004 Dust Cover, V5107 |
| 14 .. P-375 Secondary Filter, foam | 47 .. P-5922 Dust Cover, V5117 |
| 14 .. P-37100 Secondary Filter, electrostatic | 48 .. P-34206 Hose, V5007 |
| 15 .. P-0114 Wheel | 48 .. P-8917 Hose, V5027, V5117 |
| 15 .. P-0062 Wheel, V5107 | 49 .. P-6088 Dusting Brush, V5117 |
| 16 .. P-16005 Shaft, wheel | 49 .. P-6088 Dusting Brush, V5107 |
| 17 .. P-74009 Stopper, wheel | 50 .. P-6069 Crevice Tool, V5107, V5117 |
| 18 .. P-6115 Washer | 50 .. P-60104 Wand, extension, V5107 |
| 19 .. P-141M Paper Bag, type U6, 3 pk,
micron | 51 .. P-60104 Wand, extension, V5117 |
| 19 .. P-115P Paper Bag, U3, 3 pk | 52 .. P-00104 Wire Tie |
| 20 .. P-000625 Suction Inlet, V5007 | 53 .. P-6106 Packing, nut, handle screw |
| 20 .. P-10860 Suction Inlet, V5027 | 54 .. P-3990 Packing, right |
| 21 .. P-8915 Cover, suction inlet, V5007,
V5027 | 55 .. P-4160 Packing, left |
| 21 .. P-02006 Cover, suction inlet,
V5107, V5117 | 55 .. P-5860 Packing, left, V5027 |
| 22 .. P-6140 Screw, suction inlet | 56 .. P-78 Plastic Holder |
| 23 .. P-5494 Motor Case, V5007 | 57 .. P-9300 Packing, indicator,
V5107, V5117 |
| 23 .. P-10873 Motor Case, V5027 | 58 .. P-000147 Cap, indicator, V5107, V5117 |
| 23 .. P-0950 Motor Case, V5107 | 59 .. P-0400 Spring, indicator,
V5107, V5117 |
| 23 .. P-5495 Motor Case, V5117 | 60 .. P-000149 Lead, indicator,
V5107, V5117 |
| 24 .. P-201 Packing, rear | 61 .. P-000150 Body, indicator,
V5107, V5117 |
| 24 .. P-10913 Packing, rear, V5027 | 62 .. P-4104 Screw, indicator,
V5107, V5117 |
| 25 .. P-1906 Packing, motor case | 63 .. P-550006 Cord Storage Base, V5007 |
| 25 .. P-10825 Packing, motor case, V5027 | 63 .. P-8916 Cord Hook Base, V5027 |
| 25 .. P-00117 Packing, motor case, V5107 | 64 .. P-333 Protector Filter |
| 26 .. P-6140 Screw, motor case | 65 .. P-000058 Protector Supporter |
| 26 .. P-8172 Screw, motor case, V5027 | 66 .. P-692 Protector |
| 27 .. P-6096 Protector, V5107, V5117 | 67 .. P-000057 Protector Spring |
| 28 .. P-9832 Protector Spring, green,
V5107, V5117 | 68 .. P-000056 Protector Case |
| 29 .. P-6806 Protector Case,
V5107, V5117 | |
| 30 .. P-1806 Protector Supporter,
V5107, V5117 | |
| 31 .. P-92050 Fan Motor Unit, V5007 | |
| 31 .. P-10874 Fan Motor Unit, V5027 | |
| 31 .. P-9833 Fan Motor Unit,
V5107, V5117 | |
| 32 .. P-0035 Carbon Brush | |
| 32 .. P-9834 Carbon Brush, V5107, V5117 | |
| 33 .. P-0036 Brush Retainer Bracket | |

Motor Repair Parts

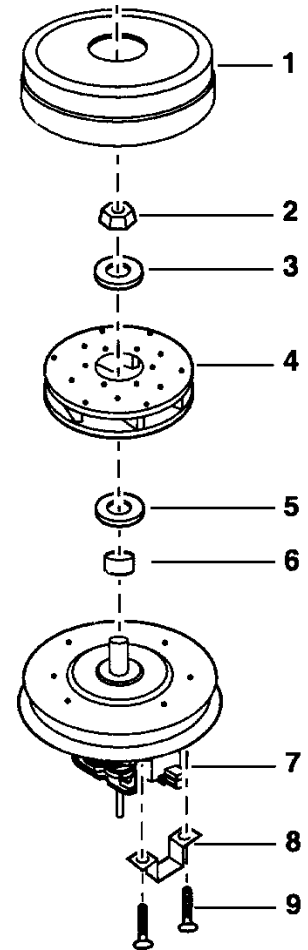

- | |
|--|
| 1 P-000067 Fan Case, V5007, V5117 |
| 2 P-000068 Nut, V5007, 5117 |
| 3 P-00621 Washer, V5007, V5117 |
| 4 P-000070 Fan, V5007 |
| 4 P-000152 Fan, V5117 |
| 5 P-6206 Washer, V5117 |
| 6 P-000500 Spacer, V5117 |
| 7 P-0035 Brush Assy, V5007 |
| 7 P-9834 Brush Assy, V5107 |
| 7 P-10393 Brush Assy, V5117 |
| 8 P-0036 Bracket, V5007, V5117 |
| 9 P-0037 Screws, V5007, V5117 |