


Models:

MC-V6915, MC-V6945, MC-V6950, MC-V6965, MC-V6970, MC-V6975, MC-V6980, MC-V6985

Nozzle Housing


- 1 P-00119 Nozzle Housing, V6915
- 1 P-5466 Nozzle Housing, V6945
- 1 P-5458 Nozzle Housing, V6950
- 1 P-00120 Nozzle Housing, V6965
- 1 P-10104 Nozzle Housing, V6970
- 1 P-5467 Nozzle Housing, V6975
- 1 P-11011 Nozzle Housing, V6980
- 1 P-11013 Nozzle Housing, V6985
- 2 P-10105 Window
- 2 P-10105 Window, V6970, V6980, V6985
- 3 P-2500 Shaft, plastic
- 4 P-10107 Furniture Guard
- 4 P-10107 Furniture Guard, V6970
- 4 P-11014 Furniture Guard, V6980, V6985
- 5 P-81 Packing, tight
- 6 P-000095 Frame
- 7 P-58 Spring, pedal
- 8 P-6140 Screw, spring
- 9 P-5459 Pedal
- 9 P-4720 Pedal, V6915, V6965
- 9 P-11015 Pedal, V6980
- 9 P-11016 Pedal, V6985
- 10 P-6140 Screw, frame
- 11 P-2287 Belt, type UB, 2 pack
- 11 P-V270B Belt, type U8, 2 pack, V6980, V6985
- 12 P-9197 Bottom Plate Assy
- 12 P-000107 Bottom Plate Assy, V6915, V6965
- 13 P-2707 Bottom Plate
- 13 P-000113 Bottom Plate, V6915, V6965
- 14 P-7500 Packing, bottom plate
- 15 P-43 Belt Cover
- 16 P-6800 Screw, bottom plate
- 16 P-000015 Screw, bottom plate, V6915, V6965
- 17 P-9682 Nozzle Hose, short
- 17 P-10108 Nozzle Pipe
- 18 P-10106 Reflector
- 19 P-0039 Socket, bulb
- 19 N/A Socket, bulb, V6915, V6965
- 19 P-9367 Socket, bulb, V6980, V6985
- 20 P-2810 Bulb

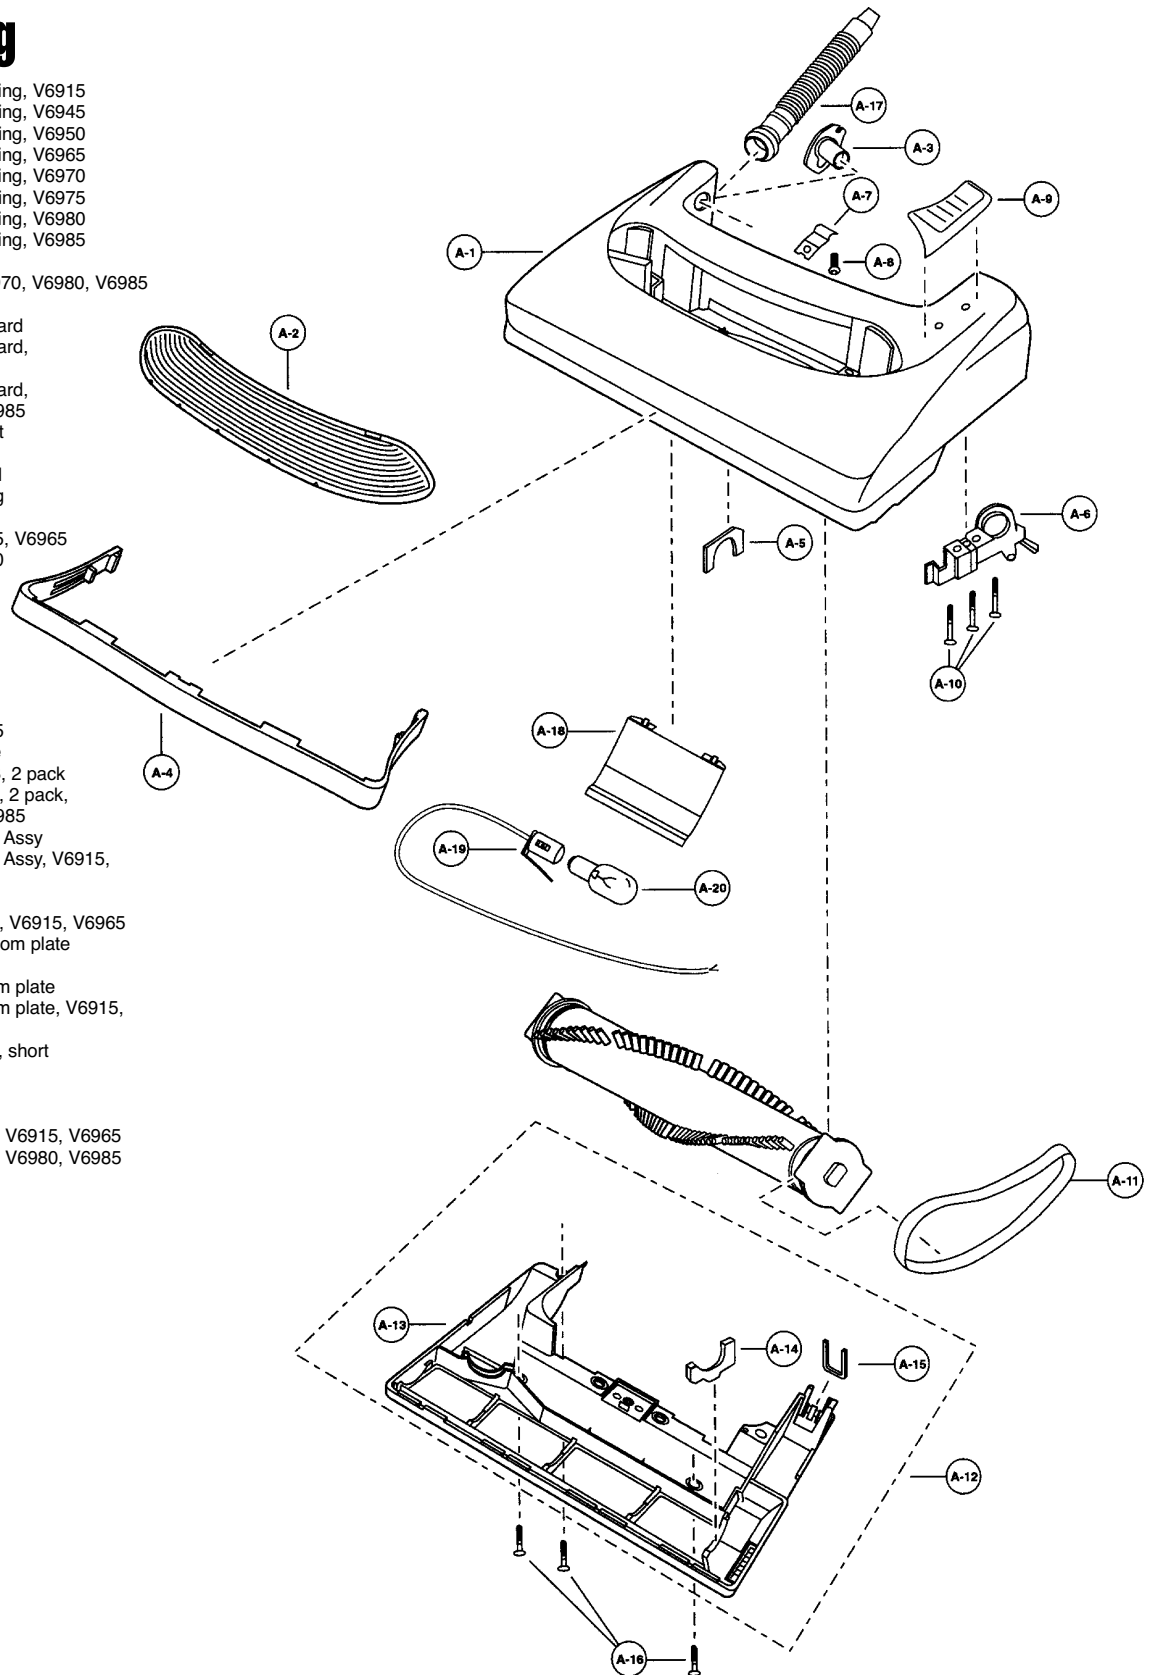

Models:

MC-V6915, MC-V6945, MC-V6950, MC-V6965, MC-V6970, MC-V6975, MC-V6980, MC-V6985

Body Housing

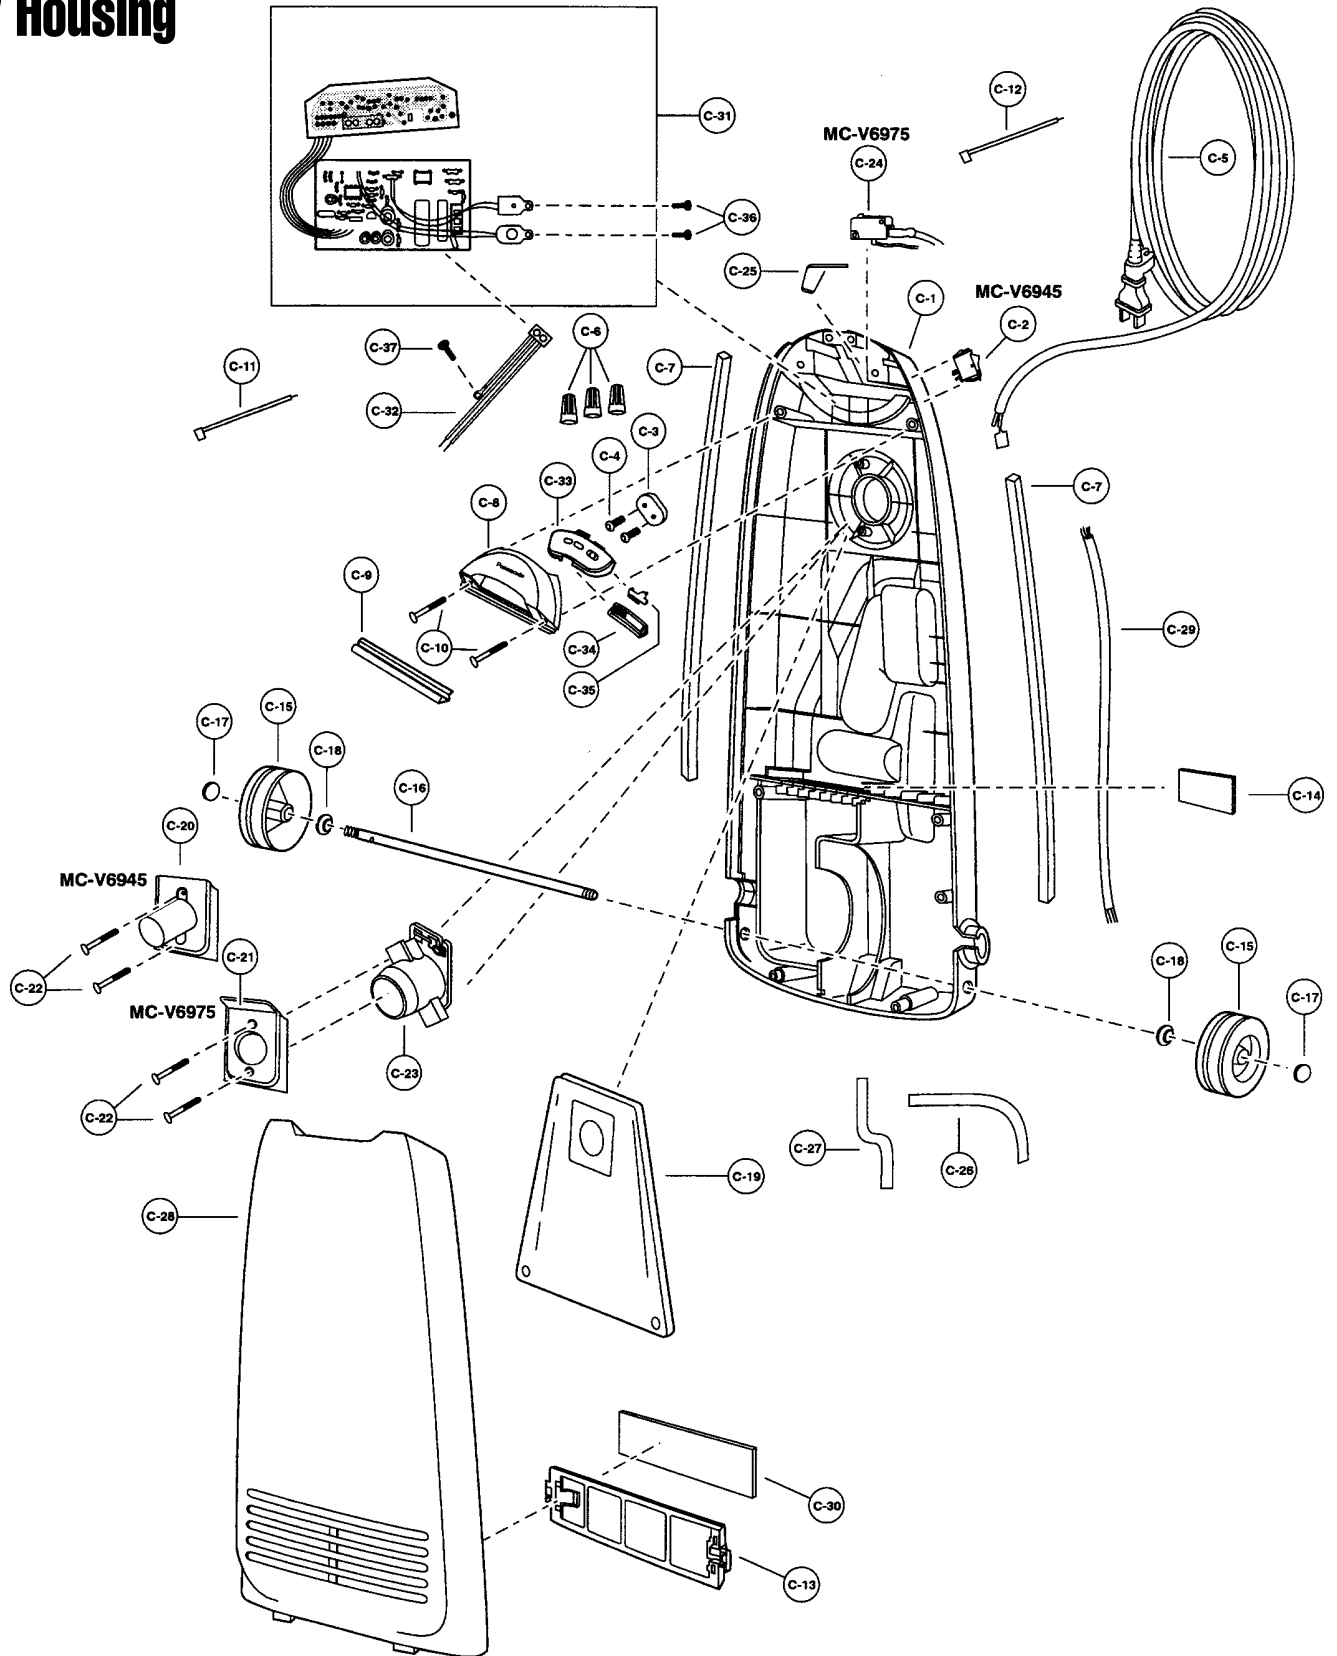


Models:

MC-V6915, MC-V6945, MC-V6950, MC-V6965, MC-V6970, MC-V6975, MC-V6980, MC-V6985

| | | |
|---|---|---|
| 1 P-000021 Dust Compartment, V6915, V6965 | 8 P-11019 Switch Cover, V6980 | 24 ... P-0012 On/Off Switch, V6975 |
| 1 P-5460 Dust Compartment, V6945, V6950 | 8 P-11020 Switch Cover, V6985 | 25 ... P-000024 Switch Lever |
| 1 P-0695 Dust Compartment, V6970 | 9 P-00116 Packing, switch cover | 25 ... P-0701 Switch Lever, V6970 |
| 1 P-0707 Dust Compartment, V6975 | 9 P-9869 Packing, switch cover, V6980, V6985 | 26 ... P-3990 Packing, right |
| 1 P-11017 Dust Compartment, V6980, V6985 | 10 ... P-6140 Screw, switch cover | 27 ... P-4160 Packing, left |
| 2 P-0696 On/Off Switch, V6915, V6965 | 11 ... P-4410 Lead Wire, black, V6945, V6950, V6980, V6985 | 28 ... P-000118 Dust Cover, V6915 |
| 2 P-10602 On/Off Switch, V6945, V6950 | 11 ... P-9892 Lead Wire, V6970 | 28 ... P-5471 Dust Cover, V6945 |
| 2 P-0696 On/Off Switch, V6970 | 12 ... P-000022 Lead Wire, V6915, V6965, V6975 | 28 ... P-5462 Dust Cover, V6950 |
| 2 P-10602 On/Off Switch, V6980, V6985 | 13 ... P-9893 Filter Supporter | 28 ... P-00617 Dust Cover, V6965 |
| 3 N/A Cord Stopper | 14 ... P-7023 Secondary Filter, foam | 28 ... P-0703 Dust Cover, V6970 |
| 3 P-0698 Cord Stopper, V6970, V6980, V6985 | 14 ... P-3099 Secondary Filter, electrostatic, V6915, V6965, V6980, V6985 | 28 ... P-000119 Dust Cover, V6975 |
| 4 P-6140 Screw, cord stopper | 15 ... P-0114 Wheel | 28 ... P-7092 Dust Cover, V6980 |
| 5 P-7906 Power Cord, 30 ft, V6915 | 16 ... P-16005 Shaft, wheel | 28 ... P-11021 Dust Cover, V6985 |
| 5 P-110118 Power Cord, 25 ft, V6945, V6950 | 17 ... P-74009 Stopper, wheel, V6915, V6965 V6980, V6985 | 29 ... P-37020 Wire Cord |
| 5 P-9816 Power Cord, 35 ft, V6965 | 17 ... P-74004 Stopper, wheel, V6945, V6975 | 30 ... P-3099 Exhaust Filter, electrostatic |
| 5 P-7906 Power Cord, 30 ft, V6970, V6975 | 18 ... P-6115 Washer | 31 ... P-000115 PC Assembly, V6965 |
| 5 P-11018 Power Cord, 25 ft, V6980, V6985 | 19 ... P-141M Paper Bag, type U6, micron, 3 pk | 31 ... P-5472 PC Assembly, V6970, V6975 |
| 6 P-000623 Wire Connector | 19 ... P-115P Paper Bag, type U3, 3 pack | 32 ... P-000022 Lead Wire AU, V6965 |
| 7 P-66306 Packing, dust container | P-7553 Electrostatic Dust Bag, V6980, V6985 | 32 ... P-5473 Lead Wire AU, V6970, V6975 |
| 7 P-0699 Packing, dust cover, V6970, V6980, V6985 | 20 ... P-10358 Bag Supporter, V6915, V6945, V6950, V6980, V6985 | 33 ... P-00113 Ornamental Plate, V6965 |
| 8 P-00114 Switch Cover, V6915 | 21 ... P-7082 Cover, bag supporter | 33 ... P-0704 Ornamental Plate, V6970 |
| 8 P-5468 Switch Cover, V6945 | 22 ... P-6140 Screw, bag supporter | 33 ... P-000031 Ornamental Plate, V6975 |
| 8 P-5461 Switch Cover, V6950 | 23 ... P-11012 Bag Supporter Assy, V6965 | 34 ... P-000044 LED Lens, V6965, V6970, V6975 |
| 8 P-00115 Switch Cover, V6965 | 23 ... P-5470 Bag Supporter Assy, V6970, V6975 | 35 ... P-000043 Sensor Sensitivity Knob, V6965 V6970, V6975 |
| 8 P-0700 Switch Cover, V6970 | | 36 ... P-6140 Screw, optic cells, V6970 |
| 8 P-5469 Switch Cover, V6975 | | 36 ... P-3879 Screw, optic cells, lead wire au, V6975 |
| | | P-98115 Partition Board, V6970 |
| | | P-000027 PCB Holder, V6965 |

Motor & Motor Case Assembly

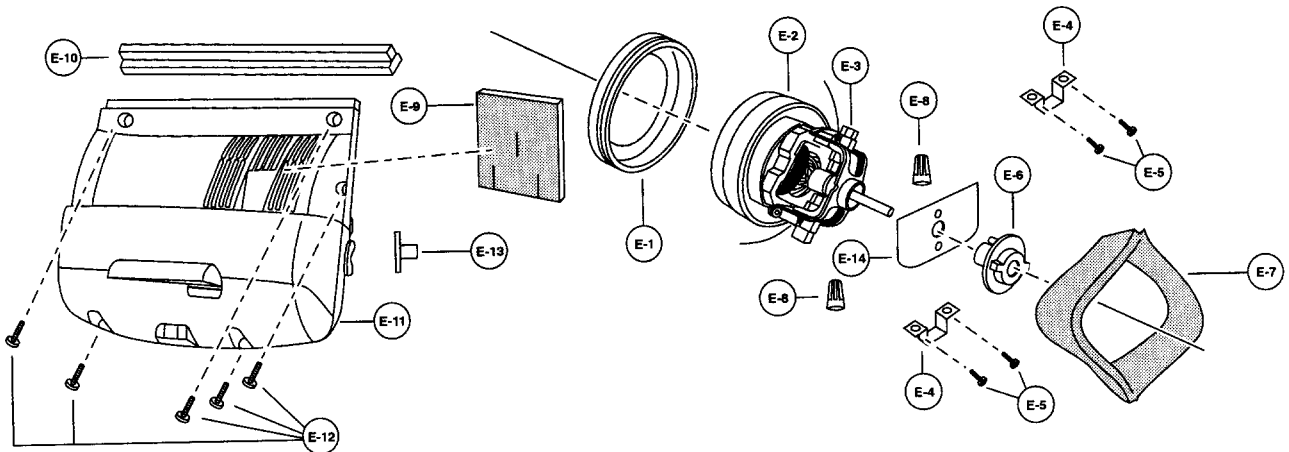

| | | |
|--|--|---|
| 1 P-0293 Motor Support Rubber, front | 7 P-99300 Noise Suppressor, V6915, V6965 | 11 ... P-9051 Motor Case, V6970 |
| 2 P-2908 Motor Assy | 8 P-000623 Wire Nut | 11 ... P-000123 Motor Case, V6975 |
| 2 P-7552 Motor Assy, V6980, V6985 | 9 P-5960 Packing, rear cover | 11 ... P-11023 Motor Case, V6980 |
| 3 P-27009 Carbon Brush Assy | 10 ... P-61017 Packing, motor case | 11 ... P-11024 Motor Case, V6985 |
| 3 P-8182 Carbon Brush Assy, V6980, V6985 | 10 ... P-9899 Packing, motor case, V6970, V6980, V6985 | 12 ... P-6140 Screw |
| 4 P-0036 Retainer Bracket | 11 ... P-000122 Motor Case, V6915 | 12 ... P-8172 Screw, V6980, V6985 |
| 5 P-0037 Screw | 11 ... P-000287 Motor Case, V6945 | 13 ... P-7805 Plastic Holder |
| 5 P-9823 Screw, V6980, V6985 | 11 ... N/A Motor Case, V6950 | 14 ... P-0410 Cooling Guide |
| 6 P-9911 Motor Support Rubber, rear | 11 ... P-00118 Motor Case, V6965 | P-8936 Lead Wire, V6980, V6985 |
| 7 P-9931 Noise Suppressor | | P-8184 Ring Spacer, V6980, V6985 |

