
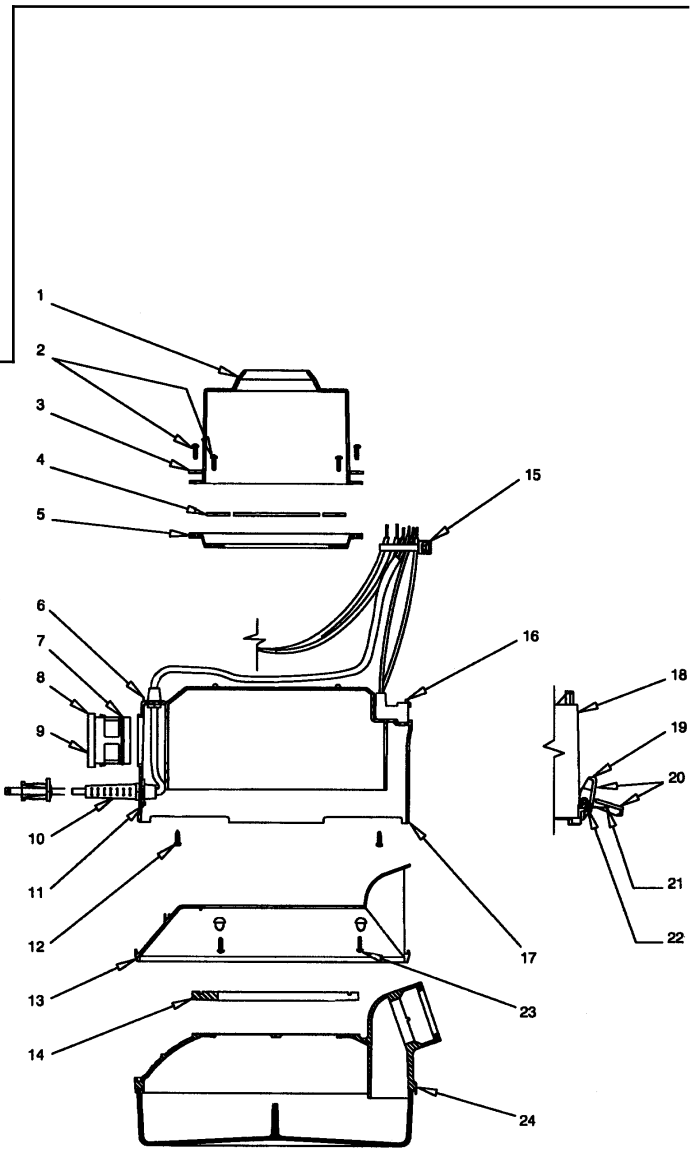


CAP AND CAP COVER ASSEMBLY

- RX-R4364 Cap & Cap Cover Assy, w/o baffle
- 1.....RX-R4297Handle Applique Top
- 2.....RX-R4342 Cap Cover Assy, includes handle pad, handle applique (top and side)
- 3.....RX-R2584Handle Pad
- 4.....RX-R4369 Cap Assy, includes cap applique
- 5.....RX-H515Screw, plastic
- 6.....RX-R3127Switch, snap-in
- 7.....RX-R2722Handle Applique, side
- 8.....RX-R5403Cap Applique, fits all models
- 8.....RX-R4323Cap Applique, for caps made before 6/93
- 9.....RX-R4373Outer Baffle Assembly

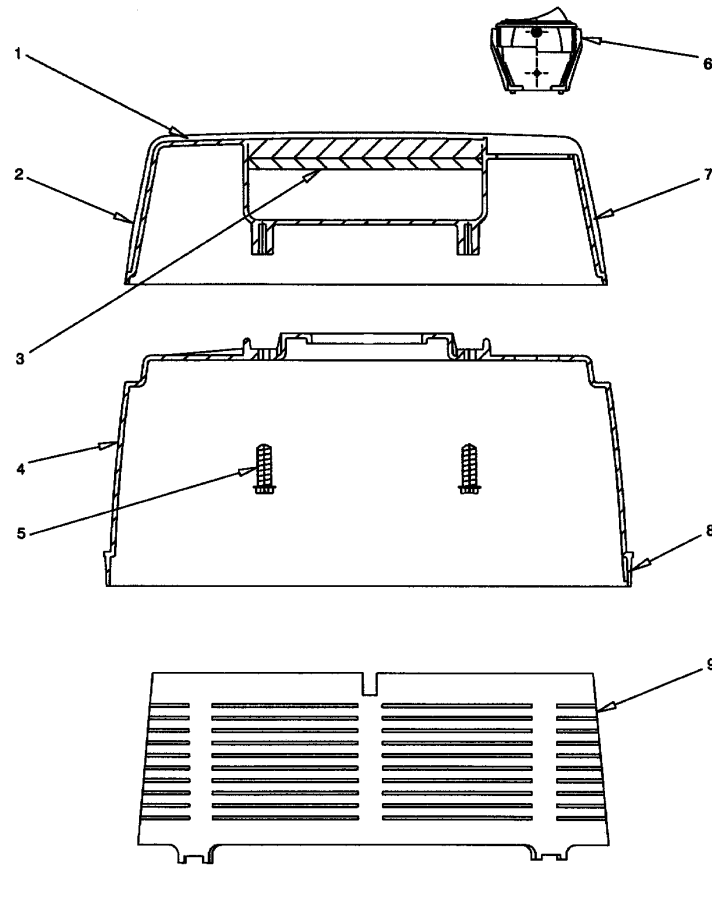


MAIN HOUSING & WATER PAN ASSEMBLY

- 1.....RX-R2582Motor Shroud
- 2.....RX-H556Screw, plastic
- 3.....RX-R2172Clamp Ring Segment
- 4.....RX-R2585Clamp Ring Segment
- 5.....RX-R2701Motor Support Ring
- 6.....RX-R2607Strain Relief Clip
- 7.....RX-R4148 "O" Ring, for closure cover
- 8.....RX-R3845 Closure Cover Assy, incl. applique & "O" ring
- 9.....RX-R2772Applique, closure cover
- 10.....RX-R4052Cord
- 11.....RX-R2605Strain Relief Support
- 12.....RX-H515Screw, main housing to cap
- 13.....RX-R5080Baffle Plate Assy
- 14.....RX-R2702Motor Gasket
- 15.....RX-R2380Cable Tie
- 16.....RX-R3184Power Nozzle Receptacle
- 17.....restrictedMain Housing Sub-Assembly
- 18.....RX-R4201Applique, main housing
- 19.....RX-R6178Latch Only, w/o applique, after & including S.N. 8000000
- 19.....RX-R4228Latch Assy, w/ applique, up to S.N. 8000000
- 20.....RX-R4203Applique, latch, up to S.N. 8000000
- 21.....RX-R2654Latch Spring
- 22.....RX-R1566Latch Pin
- 23.....RX-H491Screw, plastic
- 24.....RX-R6854Water Pan Assy

MOTOR ASSEMBLY

- RX-R3242 Motor Assy
- 1.....RX-H545 Screw, plastic
- 2.....RX-R2677 Bearing Bridge Assy
- 3*.....RX-R5125 Carbon Brush
- 3.....RX-R2421 Carbon Brush, up to S.N. 7520714
- 4.....RX-R2703 Brush Holder Clip
- 5.....RX-R3159 Field Assy
- 6.....RX-R2773 Motor Base & Bearing Assy
- 7.....RX-R2636 Motor Base Assy
- 8.....RX-R2680 Fan Spacer, top
- 9.....RX-R2681 Fan Spacer, middle
- 10.....RX-R2679 Fan Spacer, lower
- 11.....RX-R2682 Stage Housing Clip
- 12.....RX-R2774 Lower Housing & Inner Baffle Plate Assy
- 13.....RX-R1981 Ball Bearing
- 14.....RX-R2630 Bearing Retainer Shield
- 15.....RX-R4101 Spider
- 16.....RX-R4612 Lower Housing Assy
- 17.....RX-H542 Screw
- 18.....RX-H426 Nut, armature shaft
- 19.....RX-H555 Separator Nut, flat
- 20.....RX-R3277 Fan, motor
- 21.....RX-R2936 "O" Ring
- 22.....RX-R2525 Wave Washer
- 23.....RX-R2946 Insulator Washer
- 24*.....RX-R5319 Armature Assy
- 25*.....RX-R5124 Brush Holder
- 25.....RX-R2700 Brush Holder, up to S.N. 7520714
- 26.....RX-R1987 Bearing Boot
- 27.....RX-R2613 Upper Stage Assy
- 28.....RX-R2609 Fan Assy
- 29.....RX-R2617 Lower Stage Assy
- 30.....RX-R1979 Slinger Ring
- 31.....RX-R2698 Outer Baffle Plate
- 32.....RX-R747 Motor Gasket Flange
- 33.....RX-R4100 Separator
- 34.....RX-R5238 Ball Bearing

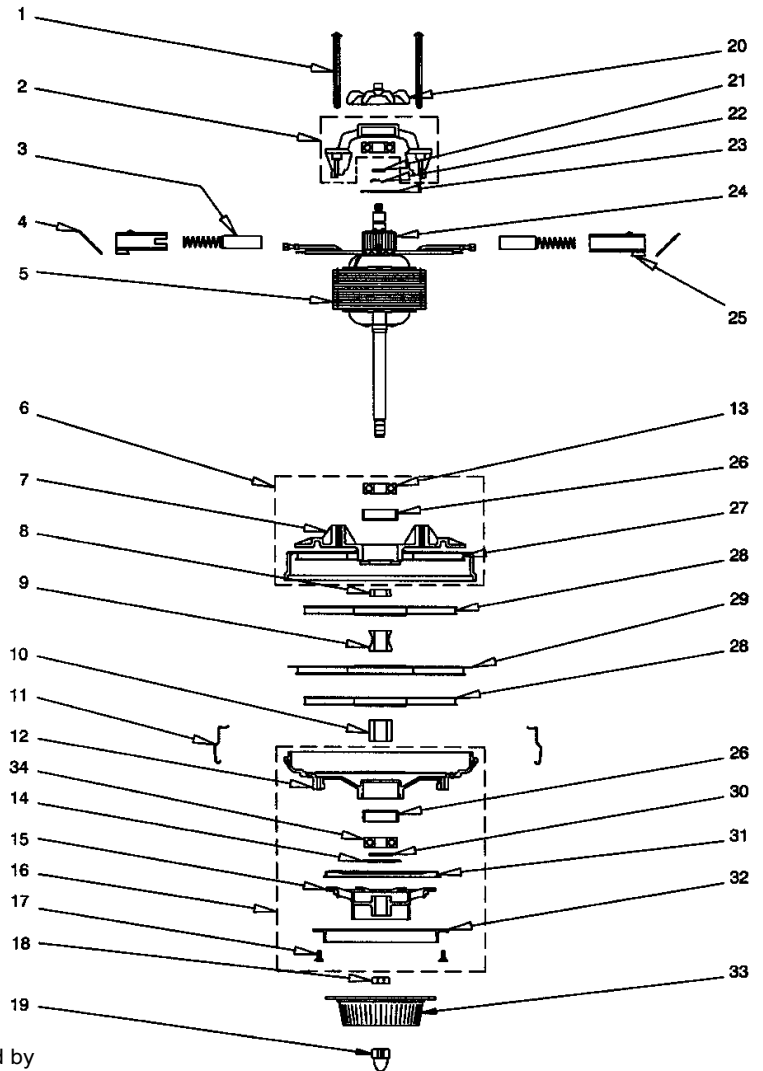

* Effective 3/29/93, RX-R2598 Armature is obsolete and is replaced by RX-R5319 Armature. RX-R5124 Tall Brush Holder and RX-R5125 Tall Carbon Brushes are not to be used with RX-R2598 Armature. RX-R2677 Bearing Bridge Assy produced after 9/92 will accept RX-R5124 Tall Brush Holders and RX-R5125 Tall Carbon Brushes.

ATTACHMENTS & OPTIONAL EQUIPMENT


- RX-R933.....Straight Wand
- RX-R2807.....Curved Wand
- RX-R2792.....Suction Control Sleeve
- RX-R934.....Bottom Wand
- RX-R4530.....Floor Tool Assembly
- RX-R4659.....Body w/ Logo Only, floor tool
- RX-R2540.....Bristles, floor tool
- RX-R2816.....Guard, floor tool
- RX-R2556.....Crevice Tool
- RX-R12439.....Dusting Brush Assy
- RX-R192.....Bristles, dusting brush
- RX-R3076.....Body w/ Logo Only, dusting brush
- RX-R2535.....Upholstery Tool Assy
- RX-R2537.....Brush, upholstery tool
- RX-R3079.....Body w/ Logo Only, upholstery tool
- RX-R4142.....Coil Cleaner
- RX-R3358.....Inflator Tool Assy

- RX-R2709.....Attachment Caddy
- RX-R3816.....Pin, caddy swivel arm
- RX-H564.....Spring, caddy swivel arm
- RX-H565.....E-Ring, caddy swivel arm
- N/A.....Hose Assembly, 9-yarn
- RX-R4716.....Hose, w/ molded tip
- RX-R2784.....Hose Coupling Assy
- RX-R579.....Hose Tip Only
- RX-R4176.....Non-Wettable Adaptor Assy, w/ instruction sheet
- RX-R841.....Separator Brush
- RX-R4140.....Dolly, w/o casters, no applique, after S.N. 8000000
- RX-R4140.....Dolly, w/o casters, w/ applique, up to S.N. 8000000
- RX-R4149.....Caster, sold each
- RX-R4204.....Applique, dolly, for use w/ RX-R4560

"PERFORMANCE EDITION" POWER NOZZLE

Model: R-5825, beginning serial number 6000000


- 1.....RX-R6061Cover Assy, complete
- 2.....RX-R5836Upright Lock Clip
- 3.....RX-R5659Lens, pilot light
- 4.....N/ALens, belt viewing
- 5.....RX-R5837Applique
- 6.....RX-R2003Motor Seal Gasket
- 7.....RX-R5834Air Barrier
- 8.....RX-R5649Bumper
- 9.....RX-H571Screw
- 10.....RX-R8401Motor Assy, complete
- 11.....RX-R5672Lead Assy, motor
- 12.....RX-R5654Pilot Light / Harness Assy
- 13.....RX-R1699Belt, sold each
- 14.....RX-H556Screw
- 15.....RX-R6058Manifold Assy, complete
- 16.....RX-R5833Airpath Gasket
- 17.....RX-R5614Belt Guard
- 18.....RX-R5593Bearing Retainer
- 19.....RX-R5592Bearing Boot
- 20.....RX-R6063Bristle Strip Kit, 4 bristle strips / 2 thread guards
- 21.....RX-R6062Brush Roll Only, w/ bearings and studs
- 22.....RX-R5590Brush Roll, complete
- 23.....RX-R6059Bottom Plate Assy, front
- 24.....RX-R5839Brush Strip, for bottom plate front
- 25.....RX-R5820Belt Cover
- 26.....N/ARear Bottom Plate Assy, w/ wheels
- 27.....RX-R6060Pivot Arm Assy, w/ gasket
- 28.....RX-R5835Pivot Arm Gasket
- 29.....RX-R5652Clevis Pin
- 30.....RX-R5653Power Nozzle Cord
- 31.....RX-R2605Strain Relief Support
- 32.....RX-R5612Circuit Breaker, 2.5 amp
- 33.....RX-H566Screw
- RX-R6575Brush Roll (SOFT), unstiffened bristle/beater
- RX-R6573Brush Strip, soft brush roll
- RX-R6574Kit, brush roll/thread guard/beater kit (soft)

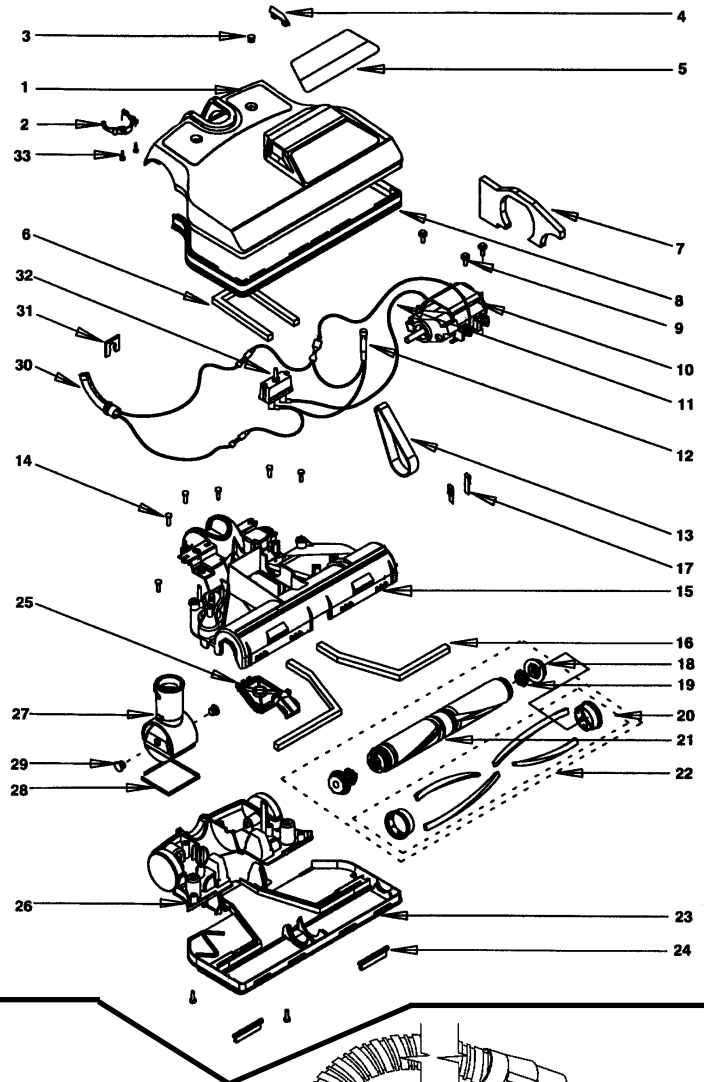

"PERFORMANCE EDITION" POWER NOZZLE

Model: R-5825, beginning serial number 6000000


- 1.....RX-R5826Electrified Hose & Handle Assy, complete
- 2.....RX-R6055Electrified Hose, w/ terminal
- 3.....RX-R1775Closed End Splice
- 4.....RX-R6908R.H. Handle Assy, w/ logo & warning label
- 5.....N/ARexair Logo
- RX-R4294Warning Label
- 6.....RX-R5832Insert & Wand Assy, w/ p/n top handle assy and handle insert
- 7.....8142Handle Insert
- 8.....RX-R5668P/N Top Handle Wand Assy
- 9.....RX-H566Screw
- 10.....RX-R6942Receptacle
- 11.....RX-R5295Handle Switch, hose
- 12.....RX-R6893Actuator Spring
- 13.....RX-R5975Switch Actuator
- 14.....RX-R6908L.H. Handle Assy, w/ logo & warning label
- 15.....RX-R5661Straight Wand Assy
- RX-R3520Cord Guide Replacement Kit
- RX-R5284Hose, 12 ft, with handle
- RX-R5286Hose, 12 ft, without handle

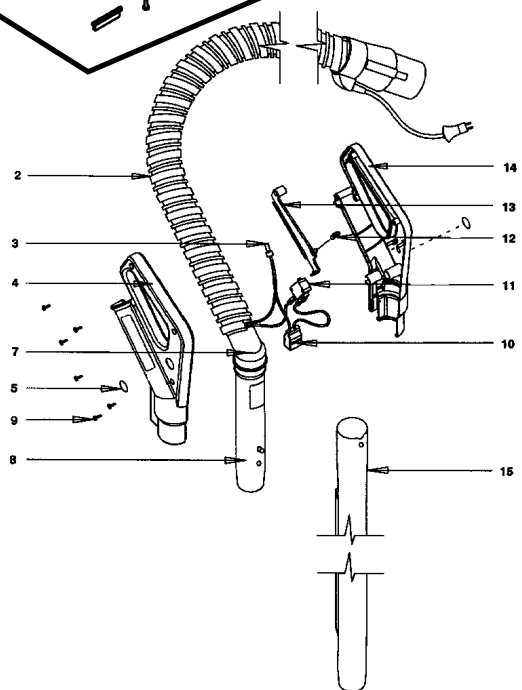

POWER NOZZLE


Model: R-4375C, beginning serial number 5000000

- 1.....RX-H515Screw
- 2.....RX-R2004Bottom Plate Assy
- 3.....RX-R1997Insulator
- 4.....RX-H552Screw
- 5.....RX-R1813Air Barrier
- 6.....RX-R1871Motor Assy
 - RX-R4662Carbon Brush, p/n motor
 - RX-R4663Rear Bearing, p/n motor
 - RX-R3550Sleeve Assy, p/n motor
- 7.....RX-R1692Seal, brush assy
- 8.....RX-R1691Keeper, brush assy
- 9.....RX-R1698Thrust Washer
- 10.....RX-R2443End Cap
- 11.....RX-R3472Power Nozzle Pulley Assy
- 12.....RX-R1699Belt, sold each
- 13.....RX-R2801Pivot Arm Assy
 - RX-R3300Pivot Arm & Housing Assy
- 14.....RX-R2069Felt Pad
- 15.....RX-R1703Wheel, p/n
- 16.....restrictedMain Housing Assy
- 17.....RX-R2795Bumper
- 18.....RX-R2003Gasket, bottom plate
- 19.....RX-R1818Pilot Light Assy
- 20.....RX-R1775Closed End Splice
- 21.....RX-R1754Lead Assy
- 22.....RX-R1780Insulator, circuit breaker
- 23.....RX-R4291Circuit Breaker, 2 amp
- 24.....RX-R4290Adaptor Plate, curcuit breaker
- 25.....RX-R1744Bearing Assy
- 26.....RX-R1690Brush Roll Only
- 27.....RX-R1695Beater Bar
- 28.....RX-R2803Pivot Housing
- 29.....RX-R1996Clevis Pin
- 30.....RX-R1704Wheel Pins, p/n
- 31.....RX-H527"E" Ring
- 32.....RX-R1866Brush Roll Assy, complete

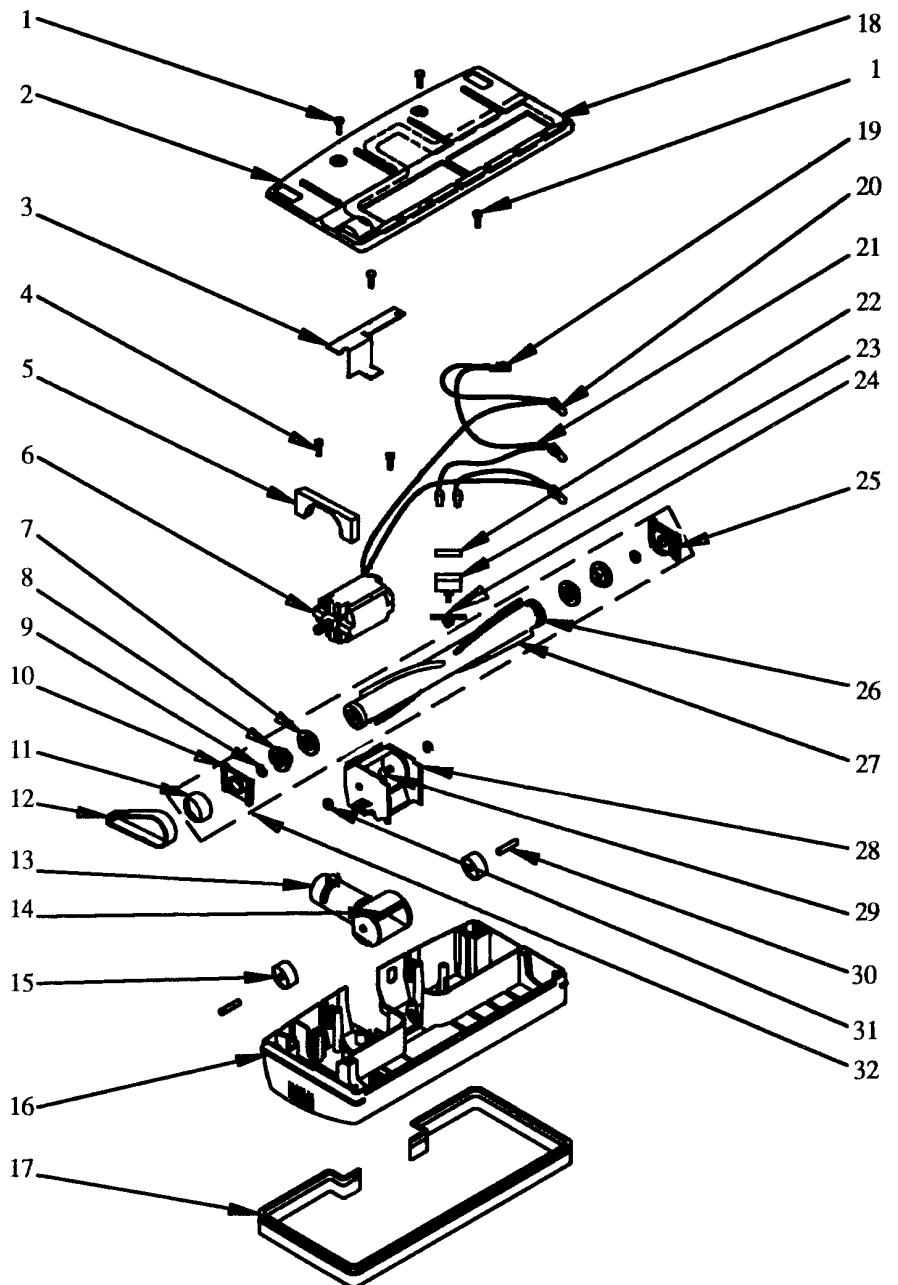

Not sure what part you may need for your equipment? Call one of our trained sales representative for help at **1.800.VAC.SHOP**

POWER NOZZLE

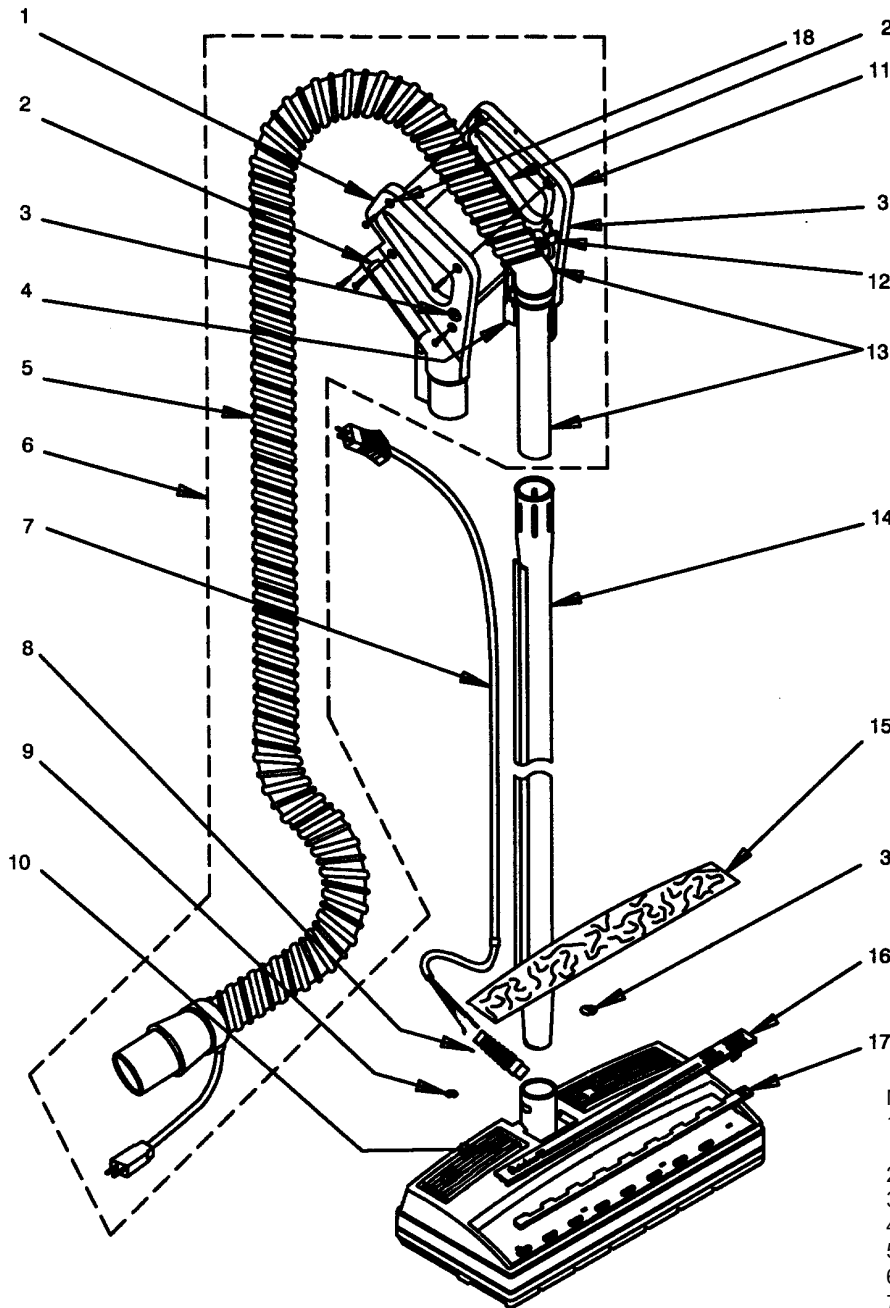

Model: R-4375C, beginning serial number 5000000


- 1.....RX-R4295R.H. Handle Assy, includes logo and warning label
- 2.....RX-R4294Warning Label
- 3.....N/ARexair Logo
- 4.....RX-R4122Receptacle
- 5.....RX-R4090Electrified Hose Assy
- 6.....RX-R5826Electrified Hose & Handle Assy
- 7.....RX-R4121Power Nozzle Cord
- 8.....RX-R4053Strain Relief Bushing
- 9.....RX-H568Nut, circuit breaker panel
- 10.....RX-R1818Pilot Light Assy
- 11.....RX-R4296L.H. Handle Assy, includes logo and warning label
- 12.....RX-R1775Closed End Splice
- 13.....RX-R4109Handle Insert Assy, includes handle insert & p/n handle wand
 RX-R4112.....Handle Insert
 RX-R4113.....P/N Handle Insert
- 14.....RX-R5066Straight Wand Assy
- 15.....RX-R4200Applique, power nozzle
- 16.....RX-R2775Slide Valve Guide Assy
- 17.....RX-R1990Slide Valve
- 18.....RX-H566Screw
 RX-R3520Cord Guide Replacement Kit

SHOP ONLINE 24 hours a day!

hescoinc.com

THE ONE STOP SHOP FOR ALL YOUR VACUUM AND JANITORIAL SUPPLIES!

" RAINBOWMATE" POWER NOZZLE

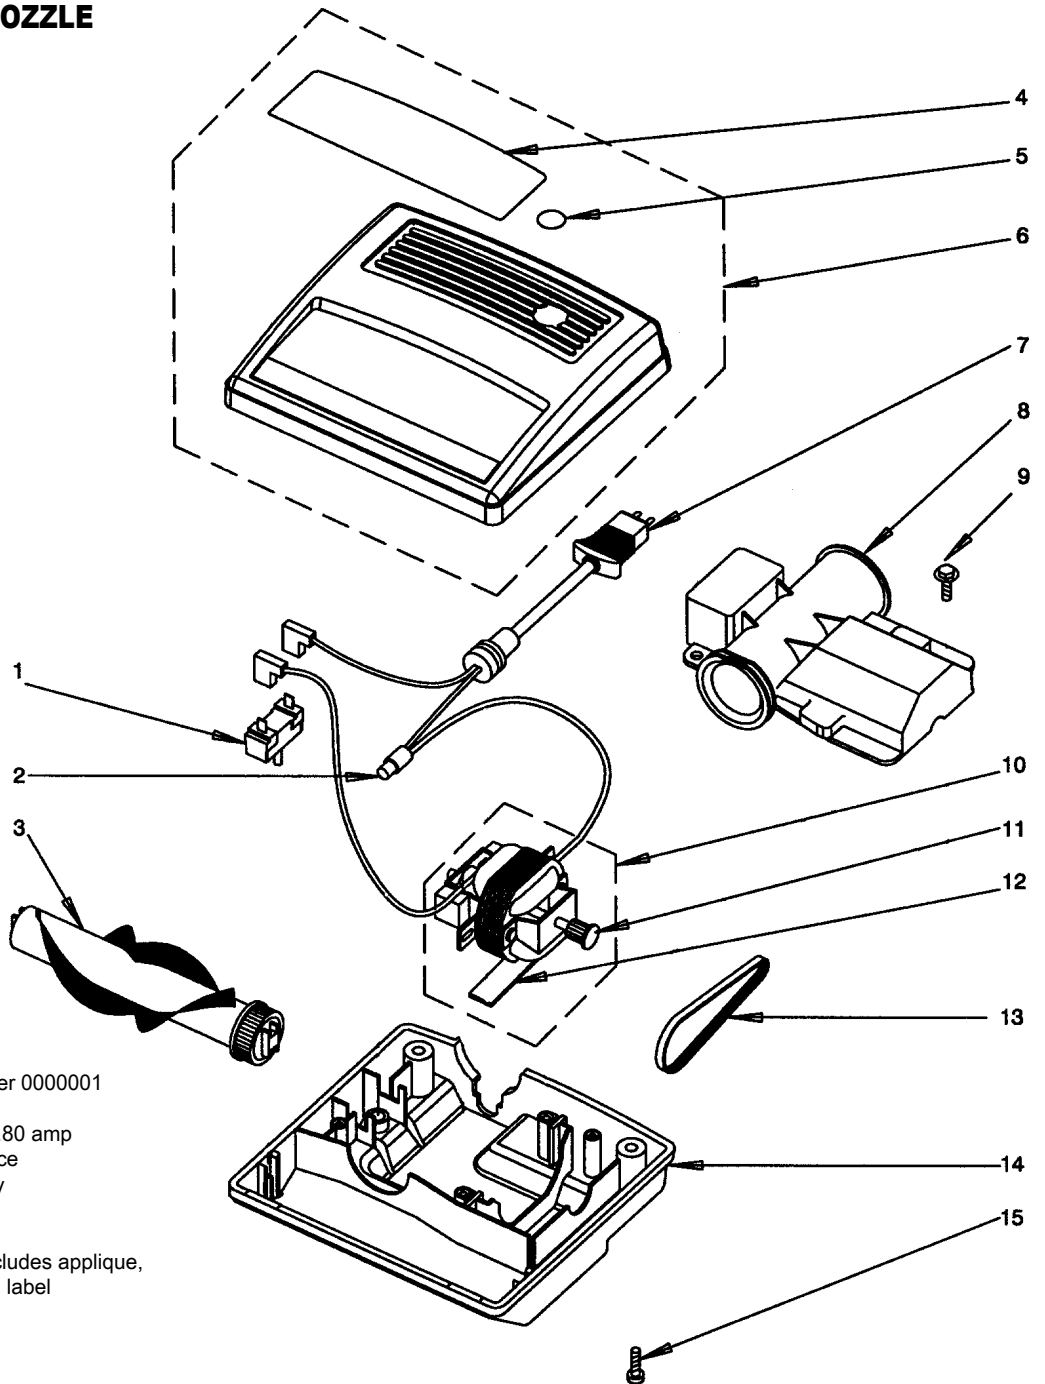


Model: RM-2, beginning serial number 0000001

- 1.....RX-R5421Circuit Breaker, .80 amp
- 2.....RX-R1775Closed End Splice
- 3.....RX-R4873Brush Tube Assy
- 4.....RX-R4896Applique
- 5.....N/ARexair Logo
- 6.....N/ATop Housing, includes applique,
logo, warning label
- RX-R4896Applique
- N/ARexair Logo
- N/AWarning Label
- 7.....RX-R4889Electric Cord
- 8.....N/AManifold Assy, includes warning label
- 9.....RX-H571Screw, w/ washer
- 10.....RX-R4882Motor Assy, includes pulley & insulator strip
- 11.....RX-R4887Motor Pulley
- 12.....RX-R4885Isolator Strip
- 13.....RX-R4879Belt, sold each
- 14.....N/ALower Housing Assy
- 15.....RX-H556Screw
- N/AWarning Label
- N/AMotor Boot, up to S.N. 0040996

" AQUAMATE" WATER EXTRACTION UNIT

Up to serial number 3000000

- 1.....RX-R2269Front Plate
- 2.....RX-R3581AquaMate Head Decal
- 3.....N/AExtraction Head Assy, complete
- 4.....RX-R2846Straight Wand Assy
- 5.....RX-R2322Bottle Latch
- 6.....RX-R2321Latch Spring
- 7.....RX-R4621Right Housing Assy
- 8.....RX-H537Screw
- 9.....RX-R2326Slide Adjustment
- 10.....RX-R2318Pinch Arm
- 11.....RX-R2849Bent Arm Assy
- 12.....RX-R2340Trigger
- 13.....RX-R6977Spring, trigger
- 14.....RX-R2571Valve Control Rod Assy
- 15.....RX-R2400Fluid Control Assy
- 16.....RX-R2401"O" Ring
- 17.....RX-R2402Hose Connection
- 18.....RX-R2602Detergent Inlet Tube
- 19.....RX-R2483Overflow & Bottle Fill Tube
- 20.....RX-R4622Left Housing Assy
- 21.....RX-R2317Foam Gasket
- 22.....RX-R7351Flow Control
- 23.....N/ASolution Bottle Assy
- 24.....RX-R202640" Tube
- 25.....N/ANozzle Clean-Out Tool
- 26.....RX-R5398Spray Nozzle
- RX-R2627Support Plate, brass spray nozzle
- 27.....RX-H491Screw
- 28.....RX-R2262Brush Assy
- 29.....RX-R2080Long Adaptor Thick Washer
- 30.....RX-R7356Screen Washer
- 31.....RX-R6138Stern Nut
- 32.....RX-R2040Tubing Clamp
- 33.....RX-R465150 ft Hose Assy
- RX-R461950 ft Hose (included)
- 34.....RX-R2065Anti-Drip Washer
- 35.....RX-R2079Washer, short adaptor
- 36.....RX-R2045Adaptor, short
- 37.....RX-R4617Control Network Assy, complete
- RX-R2469Adaptor Package (included)
- RX-R2042Swivel Stem, white piece
- RX-R2506Vinyl Closure End Cap

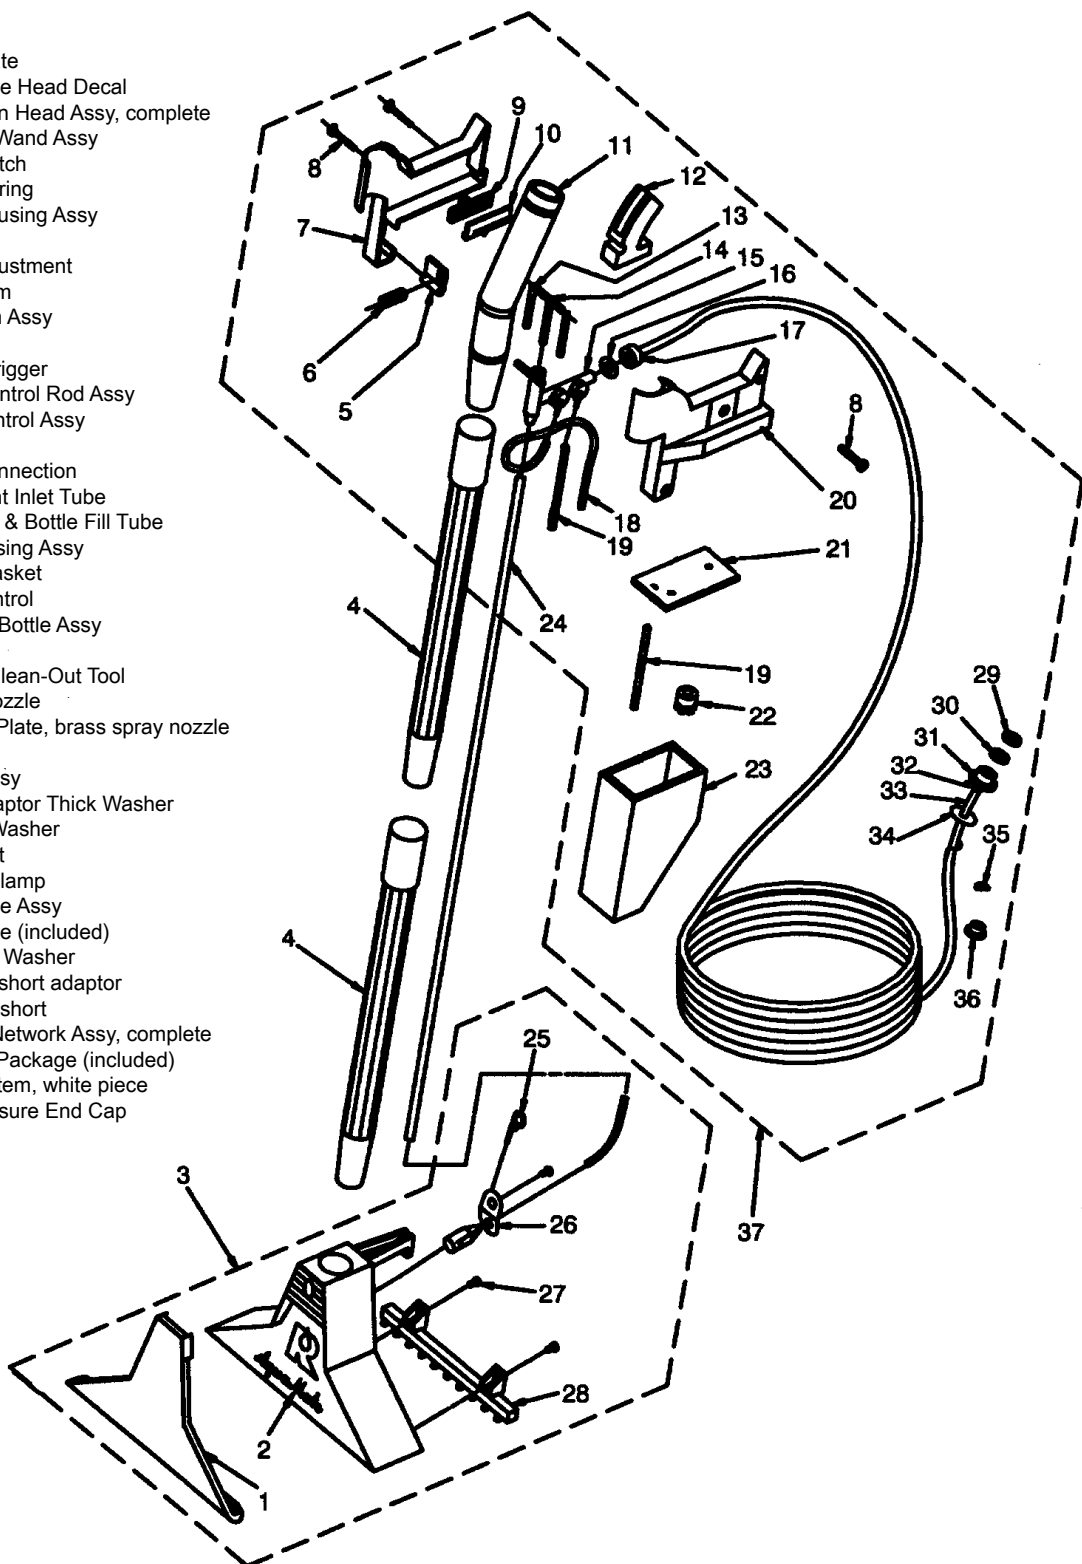


RX-R5426
Stainless Steel Wands, 2 used

" AQUAMATE" WATER EXTRACTION UNIT

Effective serial number 3000000

Ref	Item Number	Description
1.....	RX-R2269	Front Plate
2.....	RX-R3581	AquaMate Head Decal
3.....	RX-R2851	Extraction Head Assy, complete
4.....	RX-R2846	Straight Wand Assy
5.....	RX-R6142	Bottle Latch
6.....	RX-R6333	Right Housing Assy
7.....	RX-H566	Screw
8.....	RX-R6140	Cam Wash/Rinse
9.....	RX-R6141	Actuator
10.....	RX-R6145	Curved Wand Assy
11.....	RX-R2340	Trigger
12.....	RX-R2428	Spring, trigger
13.....	RX-R2571	Valve Control Rod Assy
14.....	RX-R2400	Fluid Control Assy
15.....	RX-R2401	"O" Ring
16.....	RX-R2402	Hose Connection
17.....	RX-R2602	Detergent Inlet Tube
18.....	RX-R2483	Overflow & Bottle Fill Tube
19.....	RX-R6334	Left Housing Assy
20.....	RX-R6144	Foam Gasket
21.....	RX-R2601	Flow Control
22.....	RX-R6260	Solution Bottle Assy
23.....	RX-R2026	40" Tube
24.....	RX-R2264	Nozzle Clean-Out Tool
25.....	RX-R5398	Plastic Spray Nozzle
26.....	RX-H491	Screw
27.....	RX-R2262	Brush Assy
28.....	RX-R2080	Long Adaptor Thick Washer
29.....	RX-R2044	Screen Washer
30.....	RX-R6138	Stern Nut
31.....	RX-R2040	Tubing Clamp
32.....	RX-R4651	50 ft Hose Assy
	RX-R4619	50 ft Hose (included)
33.....	RX-R2065	Anti-Drip Washer
34.....	RX-R2079	Washer, short adaptor
35.....	RX-R2045	Adaptor, short
36.....	RX-R4617	Control Network Assy, complete
	RX-R2469	Adaptor Package (included)
	RX-R2042	Swivel Stem, white piece
	RX-R6146	Vinyl Closure End Cap

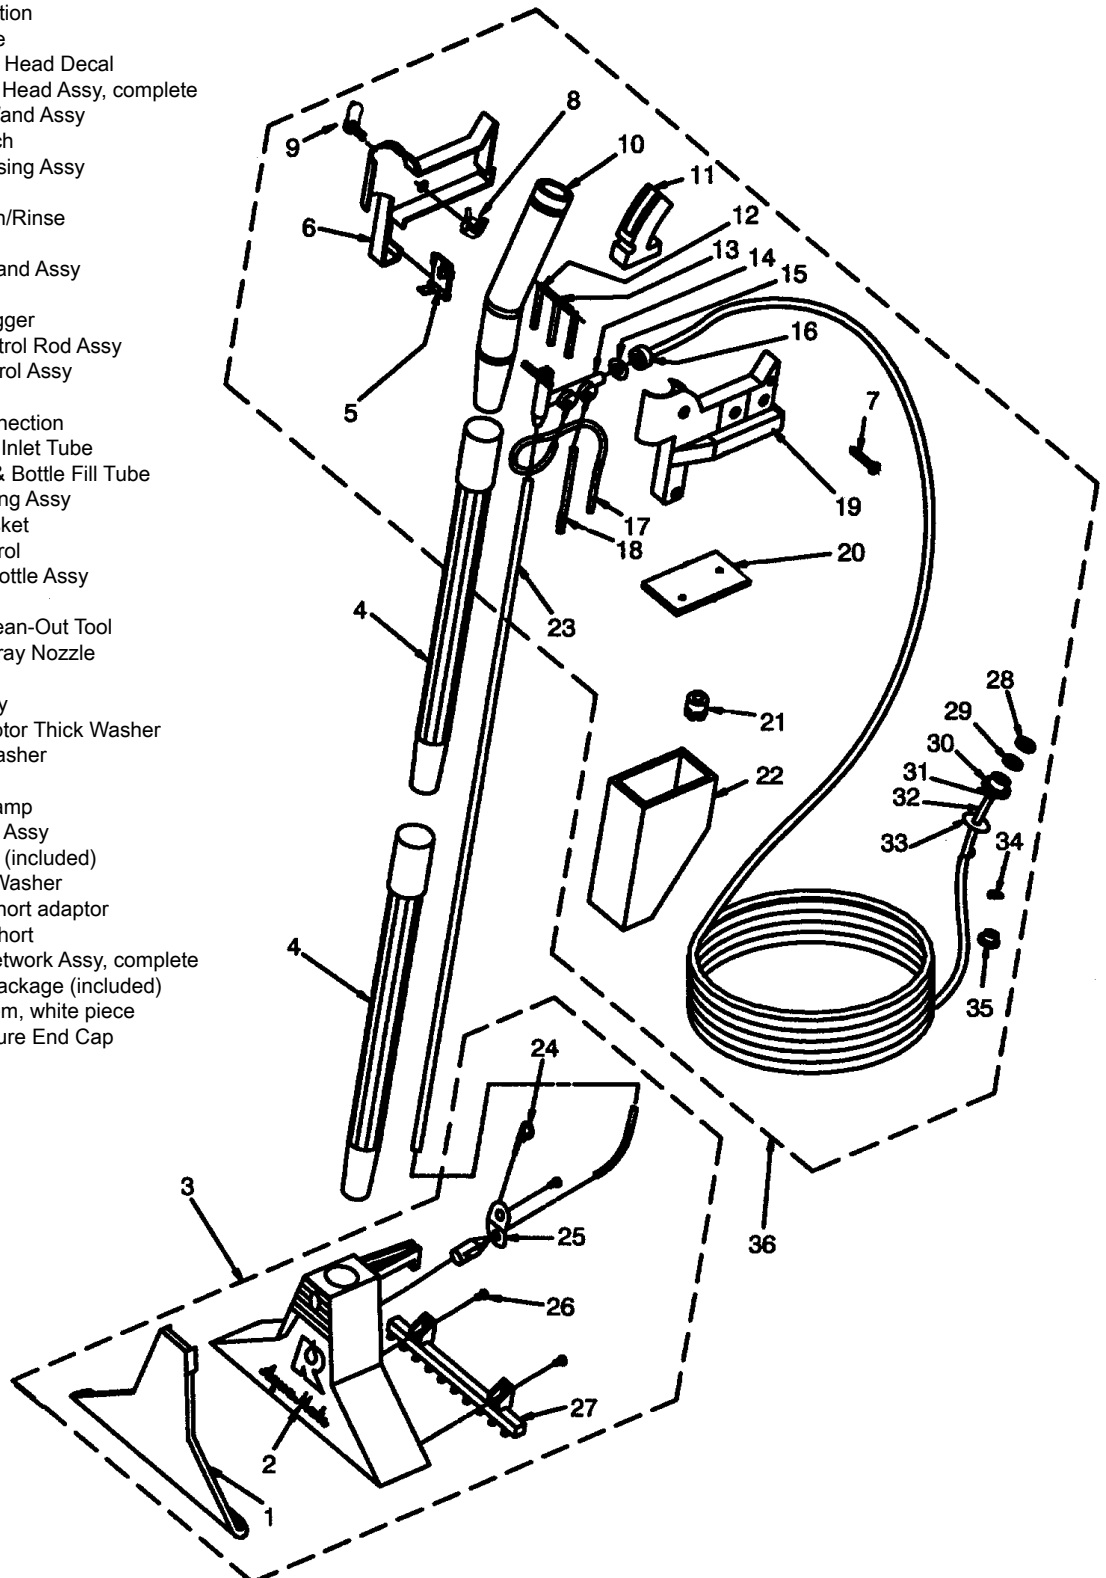

RX-R5426
Stainless Steel Wands, 2 used